



TabScan - Daihatsu- V2.05 Diagnostic Coverage

NOTES:

●: This function is supported

▲: This function is the new feature in this version

○: This function is not supported

※: This function may be supported which depends on the actual condition of the vehicle

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-DET		EFI	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-DET		A/T	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-DET		ABS	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-DET		DVS	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-DET		EPS	●	●	●	○
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-DET		A/B	●	●	○	○
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-DET		KFS	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-VN		EFI	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-VN		ABS	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-VN		EPS	●	●	●	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-VN		A/B	●	●	○	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-VE		EFI	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-VE		ABS	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-VE		EPS	●	●	●	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-VE		A/B	●	●	○	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-SE		EFI	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-SE		ABS	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-SE		EPS	●	●	●	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	EF-SE		A/B	●	●	○	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VN		EFI	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VN		ABS	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VN		EPS	●	●	●	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VN		A/B	●	●	○	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VE	Except CVT	EFI	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VE	Except CVT	ABS	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VE	Except CVT	EPS	●	●	●	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VE	Except CVT	A/B	●	●	○	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VE	CVT	EFI	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VE	CVT	CVT	●	●	●	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VE	CVT	ABS	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VE	CVT	EPS	●	●	●	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VE	CVT	A/B	●	●	○	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VD		EFI	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VD		ABS	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VD		EPS	●	●	●	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-VD		A/B	●	●	○	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-SE		EFI	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-SE		ABS	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-SE		EPS	●	●	●	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-SE		A/B	●	●	○	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-DET		EFI	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-DET		A/T	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-DET		ABS	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-DET		DVS	●	●	●	●
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-DET		EPS	●	●	●	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-DET		A/B	●	●	○	○
Mira	'04/12 (H16/12) – '06/12 (H18/12)	EF-DET		KFS	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VN		EFI	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VN		ABS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VN		EPS	●	●	●	○
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VN		A/B	●	●	○	○
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VE		EFI	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VE		CVT	●	●	●	○
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VE		ABS	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VE		EPS	●	●	●	○
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VE		A/B	●	●	○	○
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-DET		EFI	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-DET		A/T	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-DET		ABS	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-DET		DVS	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-DET		EPS	●	●	●	○
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-DET		A/B	●	●	○	○
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-DET		KFS	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-SE		EFI	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-SE		ABS	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-SE		EPS	●	●	●	○
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-SE		A/B	●	●	○	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VN		EFI	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VN		EPS	●	●	●	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VN		A/B	●	●	○	○
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE2		EFI	●	●	●	●
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE2		CVT	●	●	●	○
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE2		ABS	●	●	●	●
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE2		EPS	●	●	○	○
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE2		A/B	●	●	○	○
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE		EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE		CVT	●	●	●	○
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE		ABS	●	●	●	●
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE		DVS	●	●	●	●
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE		A/B	●	●	○	○
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-SE		EFI	●	●	●	●
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-SE		ABS	●	●	●	●
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-SE		A/B	●	●	○	○
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-DET		EFI	●	●	●	●
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-DET		A/T	●	●	●	●
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-DET		ABS	●	●	●	●
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-DET		DVS	●	●	●	●
Mira	'01/06 (H13/06) – '02/12 (H14/12)	EF-DET		A/B	●	●	○	○
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE2		EFI	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE2		CVT	●	●	●	○
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE2		ABS	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE2		EPS	●	●	○	○
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE2		A/B	●	●	○	○
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		EFI	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		CVT	●	●	●	○
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		ABS	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		DVS	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		A/B	●	●	○	○
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-SE		EFI	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-SE		ABS	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-SE		A/B	●	●	○	○
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	EFI	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	ABS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	DVS	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	A/B	●	●	○	○
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	EFI	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	A/T	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	ABS	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	DVS	●	●	●	●
Mira	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	A/B	●	●	○	○
MAX	'01/10 (H13/10) –	JB-DET		EFI	●	●	●	●
MAX	'01/10 (H13/10) –	JB-DET		A/T	●	●	●	●
MAX	'01/10 (H13/10) –	JB-DET		ABS	●	●	●	●
MAX	'01/10 (H13/10) –	JB-DET		4WD	●	●	●	○
MAX	'01/10 (H13/10) –	JB-DET		A/B	●	●	○	○
MAX	'01/10 (H13/10) –	JB-DET		KFS	●	●	●	●
MAX	'01/10 (H13/10) –	EF-VE		EFI	●	●	●	●
MAX	'01/10 (H13/10) –	EF-VE		CVT	●	●	●	○
MAX	'01/10 (H13/10) –	EF-VE		ABS	●	●	●	●
MAX	'01/10 (H13/10) –	EF-VE		DVS	●	●	●	●
MAX	'01/10 (H13/10) –	EF-VE		A/B	●	●	○	○
MAX	'01/10 (H13/10) –	EF-VE		KFS	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VD		EFI	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VD		ABS	●	●	●	●
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VD		EPS	●	●	●	○
Mira	'02/12 (H14/12) – '04/12 (H16/12)	EF-VD		A/B	●	●	○	○
Mira Gino	'02/08 (H14/08) – '04/12 (H16/12)	EF-VE		EFI	●	●	●	●
Mira Gino	'02/08 (H14/08) – '04/12 (H16/12)	EF-VE		ABS	●	●	●	●
Mira Gino	'02/08 (H14/08) – '04/12 (H16/12)	EF-VE		A/B	●	●	○	○
Altis	'00/03 (H12/03) – '01/09 (H13/09)	5S-FE		EFI&A/T	●	●	●	●
Altis	'00/03 (H12/03) – '01/09 (H13/09)	5S-FE		ABS	●	●	●	●
Altis	'00/03 (H12/03) – '01/09 (H13/09)	5S-FE		A/B	●	●	○	○
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-VE	No Puncture Warning Device	EFI	●	●	●	●
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-VE	No Puncture Warning Device	CVT	●	●	●	○
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-VE	No Puncture Warning Device	ABS	●	●	●	●
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-VE	No Puncture Warning Device	DVS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-VE	No Puncture Warning Device	A/B	●	●	○	○
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-VE	Equipped Puncture Warning Device	EFI	●	●	●	●
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-VE	Equipped Puncture Warning Device	ABS	●	●	●	●
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-VE	Equipped Puncture Warning Device	A/B	●	●	○	○
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-DET		EFI	●	●	●	●
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-DET		A/T	●	●	●	●
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-DET		ABS	●	●	●	●
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-DET		A/B	●	●	○	○
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	EF-DET		KFS	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	JB-DET		EFI	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	JB-DET		ABS	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	JB-DET		DVS	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	JB-DET		A/B	●	●	○	○
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	JB-DET		KFS	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-VE	No Puncture Warning Device	EFI	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-VE	No Puncture Warning Device	CVT	●	●	●	○
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-VE	No Puncture Warning Device	ABS	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-VE	No Puncture Warning Device	DVS	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-VE	No Puncture Warning Device	A/B	●	●	○	○
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-VE	Equipped Puncture Warning Device	EFI	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-VE	Equipped Puncture Warning Device	A/B	●	●	○	○
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-DET		EFI	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-DET		A/T	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-DET		ABS	●	●	●	●
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-DET		A/B	●	●	○	○
MOVE	'01/06 (H13/06) – '01/10 (H13/10)	EF-DET		KFS	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	JB-DET		EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	JB-DET		ABS	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	JB-DET		DVS	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	JB-DET		A/B	●	●	○	○
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	JB-DET		KFS	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE	No Puncture Warning Device	EFI	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE	No Puncture Warning Device	CVT	●	●	●	○
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE	No Puncture Warning Device	ABS	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE	No Puncture Warning Device	DVS	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE	No Puncture Warning Device	A/B	●	●	○	○
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE	Equipped Puncture Warning Device	EFI	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE	Equipped Puncture Warning Device	ABS	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE	Equipped Puncture Warning Device	A/B	●	●	○	○
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	EFI	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	ABS	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	DVS	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	A/B	●	●	○	○
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	EFI	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	A/T	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	ABS	●	●	●	●
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	A/B	●	●	○	○
MOVE	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	KFS	●	●	●	●
Mira (CNG)	'08/12 (H20/12) –	KF-VN		EFI	●	●	●	●
Mira (CNG)	'08/12 (H20/12) –	KF-VN		EPS	●	●	●	○
Mira (CNG)	'08/12 (H20/12) –	KF-VN		A/B	●	●	○	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-DET		EFI	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-DET		CVT	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-DET		ABS	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-DET		VSC	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-DET		EPS	●	●	●	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-DET		A/B	●	●	○	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-DET		ITC	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-DET		KFS	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-DET		Power Supply	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-DET		ACC	●	●	●	○
Mira Gino	'02/08 (H14/08) – '04/12 (H16/12)	EJ-VE		EFI	●	●	●	●
Mira Gino	'02/08 (H14/08) – '04/12 (H16/12)	EJ-VE		ABS	●	●	●	●
Mira Gino	'02/08 (H14/08) – '04/12 (H16/12)	EJ-VE		A/B	●	●	○	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VE		EFI	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VE		ERS	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VE		CVT	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VE		ABS	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VE		EPS	●	●	●	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VE		A/B	●	●	○	○
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VE		ITC	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VE		KFS	●	●	●	●
Mira	'06/12 (H18/12) – '08/12 (H20/12)	KF-VE		Power Supply	●	●	●	●
Mira Gino	'02/08 (H14/08) – '04/12 (H16/12)	EF-DET		EFI	●	●	●	●
Mira Gino	'02/08 (H14/08) – '04/12 (H16/12)	EF-DET		A/T	●	●	●	●
Mira Gino	'02/08 (H14/08) – '04/12 (H16/12)	EF-DET		ABS	●	●	●	●
Mira Gino	'02/08 (H14/08) – '04/12 (H16/12)	EF-DET		A/B	●	●	○	○
Mira Cocoa	'12/04 (H24/04) –	KF		EFI	●	●	●	●
Mira Cocoa	'12/04 (H24/04) –	KF		CVT	●	●	●	●
Mira Cocoa	'12/04 (H24/04) –	KF		eco IDLE	●	●	●	●
Mira Cocoa	'12/04 (H24/04) –	KF		ABS/VSC	●	●	●	●
Mira Cocoa	'12/04 (H24/04) –	KF		EPS	●	●	●	○
Mira Cocoa	'12/04 (H24/04) –	KF		A/B	●	●	○	○
Mira Cocoa	'12/04 (H24/04) –	KF		ITC	●	●	●	●
Mira Cocoa	'12/04 (H24/04) –	KF		KFS	●	●	●	●
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	2WD	EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	2WD	CVT	●	●	●	●
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	2WD	ABS	●	●	●	●
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	2WD	EPS	●	●	●	○
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	2WD	A/B	●	●	○	○
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	2WD	ITC	●	●	●	●
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	2WD	KFS	●	●	●	●
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	4WD	EFI	●	●	●	●
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	4WD	CVT	●	●	●	●
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	4WD	ABS	●	●	●	●
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	4WD	EPS	●	●	●	○
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	4WD	A/B	●	●	○	○
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	4WD	ITC	●	●	●	●
Mira Cocoa	'11/06 (H23/06) – '12/04 (H24/04)	KF	4WD	KFS	●	●	●	●
Mira Cocoa	'09/08 (H21/08) – '11/06 (H23/06)	KF-VE		EFI	●	●	●	●
Mira Cocoa	'09/08 (H21/08) – '11/06 (H23/06)	KF-VE		CVT	●	●	●	●
Mira Cocoa	'09/08 (H21/08) – '11/06 (H23/06)	KF-VE		ABS	●	●	●	●
Mira Cocoa	'09/08 (H21/08) – '11/06 (H23/06)	KF-VE		EPS	●	●	●	○
Mira Cocoa	'09/08 (H21/08) – '11/06 (H23/06)	KF-VE		A/B	●	●	○	○
Mira Cocoa	'09/08 (H21/08) – '11/06 (H23/06)	KF-VE		ITC	●	●	●	●
Mira Cocoa	'09/08 (H21/08) – '11/06 (H23/06)	KF-VE		KFS	●	●	●	●
Mira Ys	'11/09 (H23/09) –	KF (N/A)		EFI	●	●	●	●
Mira Ys	'11/09 (H23/09) –	KF (N/A)		CVT	●	●	●	●
Mira Ys	'11/09 (H23/09) –	KF (N/A)		eco IDLE	●	●	●	●
Mira Ys	'11/09 (H23/09) –	KF (N/A)		ABS/VSC	●	●	●	●
Mira Ys	'11/09 (H23/09) –	KF (N/A)		EPS	●	●	●	○
Mira Ys	'11/09 (H23/09) –	KF (N/A)		A/B	●	●	○	○
Mira Ys	'11/09 (H23/09) –	KF (N/A)		ITC	●	●	●	●
Mira Ys	'11/09 (H23/09) –	KF (N/A)		KFS	●	●	●	●
Mira Ys	'11/09 (H23/09) –	KF (N/A)		Meter	●	●	●	●
Mira	'11/07 (H23/07) –	KF (N/A)	Van Type	EFI	●	●	●	●
Mira	'11/07 (H23/07) –	KF (N/A)	Van Type	CVT	●	●	●	●
Mira	'11/07 (H23/07) –	KF (N/A)	Van Type	ABS	●	●	●	●
Mira	'11/07 (H23/07) –	KF (N/A)	Van Type	EPS	●	●	●	○
Mira	'11/07 (H23/07) –	KF (N/A)	Van Type	A/B	●	●	○	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Mira	' 11/07 (H23/07) -	KF (N/A)	Van Type	ITC	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	EFI	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	CVT	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	ABS	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	EPS	●	●	●	○
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	A/B	●	●	○	○
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	ITC	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	KFS	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	EFI	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	ABS	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	EPS	●	●	●	○
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	A/B	●	●	○	○
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	ITC	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	KFS	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	EFI	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	CVT	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	ABS	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	EPS	●	●	●	○
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	A/B	●	●	○	○
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	ITC	●	●	●	●
Mira	' 11/07 (H23/07) -	KF (N/A)	Sedan Type	KFS	●	●	●	●
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-VE		EFI	●	●	●	●
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-VE		CVT	●	●	●	●
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-VE		ERS	●	●	●	●
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-VE		ABS	●	●	●	●
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-VE		EPS	●	●	●	○
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-VE		A/B	●	●	○	○
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-VE		ITC	●	●	●	●
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-VE		KFS	●	●	●	●
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-DET		EFI	●	●	●	●
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-DET		CVT	●	●	●	●
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-DET		ABS	●	●	●	●
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-DET		EPS	●	●	●	○
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-DET		A/B	●	●	○	○
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-DET		ITC	●	●	●	●
Mira	' 10/04 (H22/04) - ' 11/07 (H23/07)	KF-DET		KFS	●	●	●	●
Mira	' 08/12 (H20/12) - ' 10/04 (H22/04)	KF-VE	Without Push Start	EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Without Push Start	CVT	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Without Push Start	ERS	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Without Push Start	ABS	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Without Push Start	EPS	●	●	●	○
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Without Push Start	A/B	●	●	○	○
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Without Push Start	ITC	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Without Push Start	KFS	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Equipped Push Start	EFI	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Equipped Push Start	CVT	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Equipped Push Start	ABS	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Equipped Push Start	EPS	●	●	●	○
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Equipped Push Start	A/B	●	●	○	○
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Equipped Push Start	ITC	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Equipped Push Start	KFS	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-VE	Equipped Push Start	Power Supply	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Without Push Start	EFI	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Without Push Start	CVT	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Without Push Start	ABS	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Without Push Start	VSC	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Without Push Start	EPS	●	●	●	○
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Without Push Start	A/B	●	●	○	○
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Without Push Start	ITC	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Without Push Start	KFS	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Without Push Start	ACC	●	●	●	○
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Equipped Push Start	EFI	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Equipped Push Start	CVT	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Equipped Push Start	ABS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Equipped Push Start	VSC	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Equipped Push Start	EPS	●	●	●	○
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Equipped Push Start	A/B	●	●	○	○
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Equipped Push Start	ITC	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Equipped Push Start	KFS	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Equipped Push Start	Power Supply	●	●	●	●
Mira	'08/12 (H20/12) – '10/04 (H22/04)	KF-DET	Equipped Push Start	ACC	●	●	●	○
Naked	'02/12 (H14/12) – '04/04 (H16/04)	EF-DET		EFI	●	●	●	●
Naked	'02/12 (H14/12) – '04/04 (H16/04)	EF-DET		A/T	●	●	●	●
Naked	'02/12 (H14/12) – '04/04 (H16/04)	EF-DET		ABS	●	●	●	●
Naked	'02/12 (H14/12) – '04/04 (H16/04)	EF-DET		DVS	●	●	●	●
Naked	'02/12 (H14/12) – '04/04 (H16/04)	EF-DET		A/B	●	●	○	○
Naked	'02/12 (H14/12) – '04/04 (H16/04)	EF-DET		KFS	●	●	●	●
Mira Gino	'04/12 (H16/12) – '08/12 (H20/12)	EF-VE		EFI	●	●	●	●
Mira Gino	'04/12 (H16/12) – '08/12 (H20/12)	EF-VE		ABS	●	●	●	●
Mira Gino	'04/12 (H16/12) – '08/12 (H20/12)	EF-VE		A/B	●	●	○	○
Vigo	'10/07 (H22/07) –	3SZ-VE		EFI	●	●	●	●
Vigo	'10/07 (H22/07) –	3SZ-VE		A/T	●	●	●	●
Vigo	'10/07 (H22/07) –	3SZ-VE		ABS	●	●	●	●
Vigo	'10/07 (H22/07) –	3SZ-VE		VSC	●	●	●	●
Vigo	'10/07 (H22/07) –	3SZ-VE		EPS	●	●	●	○
Vigo	'10/07 (H22/07) –	3SZ-VE		A/B	●	●	○	○
Vigo	'10/07 (H22/07) –	3SZ-VE		KFS	●	●	●	●
MAX	'01/10 (H13/10) –	EF-DET		EFI	●	●	●	●
MAX	'01/10 (H13/10) –	EF-DET		A/T	●	●	●	●
MAX	'01/10 (H13/10) –	EF-DET		ABS	●	●	●	●
MAX	'01/10 (H13/10) –	EF-DET		DVS	●	●	●	●
MAX	'01/10 (H13/10) –	EF-DET		A/B	●	●	○	○
MAX	'01/10 (H13/10) –	EF-DET		KFS	●	●	●	●
Sonica	'06/06 (H18/06) – '09/04 (H21/04)	KF-DET		EFI	●	●	●	●
Sonica	'06/06 (H18/06) – '09/04 (H21/04)	KF-DET		CVT	●	●	●	●
Sonica	'06/06 (H18/06) – '09/04 (H21/04)	KF-DET		ABS	●	●	●	●
Sonica	'06/06 (H18/06) – '09/04 (H21/04)	KF-DET		EPS	●	●	●	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Sonica	'06/06 (H18/06) – '09/04 (H21/04)	KF-DET		A/B	●	●	○	○
Sonica	'06/06 (H18/06) – '09/04 (H21/04)	KF-DET		ITC	●	●	●	●
Sonica	'06/06 (H18/06) – '09/04 (H21/04)	KF-DET		KFS	●	●	●	●
Sonica	'06/06 (H18/06) – '09/04 (H21/04)	KF-DET		ACC	●	●	●	○
Copen	'10/08 (H22/08) –	JB-DET		EFI	●	●	●	●
Copen	'10/08 (H22/08) –	JB-DET		A/T	●	●	●	●
Copen	'10/08 (H22/08) –	JB-DET		ABS	●	●	●	●
Copen	'10/08 (H22/08) –	JB-DET		A/B	●	●	○	○
Copen	'10/08 (H22/08) –	JB-DET		IMB	●	●	○	○
Copen	'10/08 (H22/08) –	JB-DET		Roof	●	●	●	●
Copen	'02/06 (H14/06) – '10/08 (H22/08)	JB-DET		EFI	●	●	●	●
Copen	'02/06 (H14/06) – '10/08 (H22/08)	JB-DET		A/T	●	●	●	●
Copen	'02/06 (H14/06) – '10/08 (H22/08)	JB-DET		ABS	●	●	●	●
Copen	'02/06 (H14/06) – '10/08 (H22/08)	JB-DET		A/B	●	●	○	○
Copen	'02/06 (H14/06) – '10/08 (H22/08)	JB-DET		IMB	●	●	○	○
Copen	'02/06 (H14/06) – '10/08 (H22/08)	JB-DET		Roof	●	●	●	●
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-VE		EFI	●	●	●	●
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-VE		CVT	●	●	●	○
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-VE		ABS	●	●	●	●
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-VE		DVS	●	●	●	●
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-VE		A/B	●	●	○	○
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-SE		EFI	●	●	●	●
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-SE		ABS	●	●	●	●
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-SE		A/B	●	●	○	○
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-DET		EFI	●	●	●	●
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-DET		A/T	●	●	●	●
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-DET		ABS	●	●	●	●
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-DET		DVS	●	●	●	●
Opti	'01/06 (H13/06) – '02/08 (H14/08)	EF-DET		A/B	●	●	○	○
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		CVT	●	●	●	○
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		ABS	●	●	●	●
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		DVS	●	●	●	●
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		A/B	●	●	○	○
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-SE		EFI	●	●	●	●
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-SE		ABS	●	●	●	●
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-SE		A/B	●	●	○	○
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	EFI	●	●	●	●
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	ABS	●	●	●	●
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	DVS	●	●	●	●
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	A/B	●	●	○	○
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	EFI	●	●	●	●
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	A/T	●	●	●	●
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	ABS	●	●	●	●
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	DVS	●	●	●	●
Opti	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	A/B	●	●	○	○
Tanto	'03/11 (H15/11) – '05/06 (H17/06)	EF-VE		EFI	●	●	●	●
Tanto	'03/11 (H15/11) – '05/06 (H17/06)	EF-VE		ABS	●	●	●	●
Tanto	'03/11 (H15/11) – '05/06 (H17/06)	EF-VE		EPS	●	●	●	○
Tanto	'03/11 (H15/11) – '05/06 (H17/06)	EF-VE		A/B	●	●	○	○
Esse	'05/12 (H17/12) – '10/04 (H22/04)	KF-VE	A/T	EFI	●	●	●	●
Esse	'05/12 (H17/12) – '10/04 (H22/04)	KF-VE	A/T	ABS	●	●	●	●
Esse	'05/12 (H17/12) – '10/04 (H22/04)	KF-VE	A/T	A/B	●	●	○	○
Esse	'05/12 (H17/12) – '10/04 (H22/04)	KF-VE	M/T	EFI	●	●	●	●
Esse	'05/12 (H17/12) – '10/04 (H22/04)	KF-VE	M/T	ABS	●	●	●	●
Esse	'05/12 (H17/12) – '10/04 (H22/04)	KF-VE	M/T	A/B	●	●	○	○
Tanto	'05/06 (H17/06) – '07/12 (H19/12)	EF-DET		EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Tanto	'05/06 (H17/06) – '07/12 (H19/12)	EF-DET		A/T	●	●	●	●
Tanto	'05/06 (H17/06) – '07/12 (H19/12)	EF-DET		ABS	●	●	●	●
Tanto	'05/06 (H17/06) – '07/12 (H19/12)	EF-DET		EPS	●	●	●	○
Tanto	'05/06 (H17/06) – '07/12 (H19/12)	EF-DET		A/B	●	●	○	○
Tanto	'05/06 (H17/06) – '07/12 (H19/12)	EF-DET		KFS	●	●	●	●
Vigo	'06/01 (H18/01) – '10/07 (H22/07)	3SZ-VE		EFI	●	●	●	●
Vigo	'06/01 (H18/01) – '10/07 (H22/07)	3SZ-VE		A/T	●	●	●	●
Vigo	'06/01 (H18/01) – '10/07 (H22/07)	3SZ-VE		ABS	●	●	●	●
Vigo	'06/01 (H18/01) – '10/07 (H22/07)	3SZ-VE		VSC	●	●	●	●
Vigo	'06/01 (H18/01) – '10/07 (H22/07)	3SZ-VE		EPS	●	●	●	○
Vigo	'06/01 (H18/01) – '10/07 (H22/07)	3SZ-VE		A/B	●	●	○	○
Vigo	'06/01 (H18/01) – '10/07 (H22/07)	3SZ-VE		KFS	●	●	●	●
Terios Kid/Lucia	'01/11 (H13/11) – '10/07 (H22/07)	EF-DET		EFI	●	●	●	●
Terios Kid/Lucia	'01/11 (H13/11) – '10/07 (H22/07)	EF-DET		ABS	●	●	●	●
Terios Kid/Lucia	'01/11 (H13/11) – '10/07 (H22/07)	EF-DET		EPS	●	●	●	○
Terios Kid/Lucia	'01/11 (H13/11) – '10/07 (H22/07)	EF-DET		A/B	●	●	○	○
Terios Kid/Lucia	'01/11 (H13/11) – '10/07 (H22/07)	EF-DET		KFS	●	●	●	●
Terios Kid/Lucia	'01/11 (H13/11) – '10/07 (H22/07)	EF-DEM		EFI	●	●	●	●
Terios Kid/Lucia	'01/11 (H13/11) – '10/07 (H22/07)	EF-DEM		ABS	●	●	●	●
Terios Kid/Lucia	'01/11 (H13/11) – '10/07 (H22/07)	EF-DEM		EPS	●	●	●	○
Terios Kid/Lucia	'01/11 (H13/11) – '10/07 (H22/07)	EF-DEM		A/B	●	●	○	○
Terios Kid/Lucia	'01/11 (H13/11) – '10/07 (H22/07)	EF-DEM		KFS	●	●	●	●
Terios Kid/Lucia	'00/11 (H12/11) – '01/11 (H13/11)	EF-DET		EFI	●	●	●	●
Terios Kid/Lucia	'00/11 (H12/11) – '01/11 (H13/11)	EF-DET		ABS	●	●	●	●
Terios Kid/Lucia	'00/11 (H12/11) – '01/11 (H13/11)	EF-DET		A/B	●	●	○	○
Terios Kid/Lucia	'00/11 (H12/11) – '01/11 (H13/11)	EF-DET		KFS	●	●	●	●
Terios Kid/Lucia	'00/11 (H12/11) – '01/11 (H13/11)	EF-DEM		EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Terios Kid/Lucia	'00/11 (H12/11) – '01/11 (H13/11)	EF-DEM		ABS	●	●	●	●
Terios Kid/Lucia	'00/11 (H12/11) – '01/11 (H13/11)	EF-DEM		A/B	●	●	○	○
Terios Kid/Lucia	'00/11 (H12/11) – '01/11 (H13/11)	EF-DEM		KFS	●	●	●	●
Terios Kid	'10/07 (H22/07) –	EF-DET		EFI	●	●	●	●
Terios Kid	'10/07 (H22/07) –	EF-DET		ABS	●	●	●	●
Terios Kid	'10/07 (H22/07) –	EF-DET		EPS	●	●	●	○
Terios Kid	'10/07 (H22/07) –	EF-DET		A/B	●	●	○	○
Terios Kid	'10/07 (H22/07) –	EF-DET		KFS	●	●	●	●
Terios	'00/05 (H12/05) – '05/12 (H17/12)	K3-VET		EFI	●	●	●	●
Terios	'00/05 (H12/05) – '05/12 (H17/12)	K3-VET		A/T	●	●	●	●
Terios	'00/05 (H12/05) – '05/12 (H17/12)	K3-VET		ABS	●	●	●	●
Terios	'00/05 (H12/05) – '05/12 (H17/12)	K3-VET		EPS	●	●	●	○
Terios	'00/05 (H12/05) – '05/12 (H17/12)	K3-VET		A/B	●	●	○	○
Terios	'00/05 (H12/05) – '05/12 (H17/12)	K3-VE		EFI	●	●	●	●
Terios	'00/05 (H12/05) – '05/12 (H17/12)	K3-VE		A/T	●	●	●	●
Terios	'00/05 (H12/05) – '05/12 (H17/12)	K3-VE		ABS	●	●	●	●
Terios	'00/05 (H12/05) – '05/12 (H17/12)	K3-VE		EPS	●	●	●	○
Terios	'00/05 (H12/05) – '05/12 (H17/12)	K3-VE		A/B	●	●	○	○
Altis	'09/01 (H21/01) –	2AZ-FE		EFI&A/T	●	●	●	●
Altis	'06/01 (H18/01) – '09/01 (H21/01)	2AZ-FE		EFI&A/T	●	●	●	●
Altis	'01/09 (H13/09) – '06/01 (H18/01)	2AZ-FE		EFI&A/T	●	●	●	●
Altis	'01/09 (H13/09) – '06/01 (H18/01)	2AZ-FE		ABS	●	●	●	●
Altis	'01/09 (H13/09) – '06/01 (H18/01)	2AZ-FE		A/B	●	●	○	○
Esse	'10/04 (H22/04) –	KF-VE		EFI	●	●	●	●
Esse	'10/04 (H22/04) –	KF-VE		ABS	●	●	●	●
Esse	'10/04 (H22/04) –	KF-VE		A/B	●	●	○	○
Tanto	'12/05 (H24/05) –	KF (N/A, T/C)		EFI	●	●	●	●
Tanto	'12/05 (H24/05) –	KF (N/A, T/C)		CVT	●	●	●	●
Tanto	'12/05 (H24/05) –	KF (N/A, T/C)		eco IDLE	●	●	●	●
Tanto	'12/05 (H24/05) –	KF (N/A, T/C)		ABS/VSC	●	●	●	●
Tanto	'12/05 (H24/05) –	KF (N/A, T/C)		EPS	●	●	●	○
Tanto	'12/05 (H24/05) –	KF (N/A, T/C)		A/B	●	●	○	○
Tanto	'12/05 (H24/05) –	KF (N/A, T/C)		ITC	●	●	●	●
Tanto	'12/05 (H24/05) –	KF (N/A, T/C)		KFS	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-VE		EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-VE		CVT	●	●	●	○
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-VE		ABS	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-VE		EPS	●	●	●	○
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-VE		A/B	●	●	○	○
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	EF-VE		KFS	●	●	●	●
Naked	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE		EFI	●	●	●	●
Naked	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE		ABS	●	●	●	●
Naked	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE		DVS	●	●	●	●
Naked	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE		A/B	●	●	○	○
Naked	'01/06 (H13/06) – '02/12 (H14/12)	EF-VE		KFS	●	●	●	●
Naked	'01/06 (H13/06) – '02/12 (H14/12)	EF-DET		EFI	●	●	●	●
Naked	'01/06 (H13/06) – '02/12 (H14/12)	EF-DET		A/T	●	●	●	●
Naked	'01/06 (H13/06) – '02/12 (H14/12)	EF-DET		ABS	●	●	●	●
Naked	'01/06 (H13/06) – '02/12 (H14/12)	EF-DET		DVS	●	●	●	●
Naked	'01/06 (H13/06) – '02/12 (H14/12)	EF-DET		A/B	●	●	○	○
Naked	'01/06 (H13/06) – '02/12 (H14/12)	EF-DET		KFS	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		EFI	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		ABS	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		DVS	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		A/B	●	●	○	○
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-VE		KFS	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	EFI	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	ABS	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	DVS	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	A/B	●	●	○	○
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Mechanical A/T	KFS	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	A/T	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	ABS	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	DVS	●	●	●	●
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	A/B	●	●	○	○
Naked	'00/10 (H12/10) – '01/06 (H13/06)	EF-DET	Electric System A/T	KFS	●	●	●	●
Tanto Exe	'12/05 (H24/05) –	KF (N/A, T/C)		EFI	●	●	●	●
Tanto Exe	'12/05 (H24/05) –	KF (N/A, T/C)		CVT	●	●	●	●
Tanto Exe	'12/05 (H24/05) –	KF (N/A, T/C)		eco IDLE	●	●	●	●
Tanto Exe	'12/05 (H24/05) –	KF (N/A, T/C)		ABS/VSC	●	●	●	●
Tanto Exe	'12/05 (H24/05) –	KF (N/A, T/C)		EPS	●	●	●	○
Tanto Exe	'12/05 (H24/05) –	KF (N/A, T/C)		A/B	●	●	○	○
Tanto Exe	'12/05 (H24/05) –	KF (N/A, T/C)		ITC	●	●	●	●
Tanto Exe	'12/05 (H24/05) –	KF (N/A, T/C)		KFS	●	●	●	●
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		EFI	●	●	●	●
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		CVT	●	●	●	●
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		ABS	●	●	●	●
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		EPS	●	●	●	○
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		A/B	●	●	○	○
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		ITC	●	●	●	●
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		KFS	●	●	●	●
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		EFI	●	●	●	●
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		CVT	●	●	●	●
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		eco IDLE	●	●	●	●
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		ABS/VSC	●	●	●	●
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		EPS	●	●	●	○
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		A/B	●	●	○	○
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		ITC	●	●	●	●
Tanto Exe	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		KFS	●	●	●	●
Tanto Exe	'11/06 (H23/06) – '11/12 (H23/12)	KF (T/C)		EFI	●	●	●	●
Tanto Exe	'11/06 (H23/06) – '11/12 (H23/12)	KF (T/C)		CVT	●	●	●	●
Tanto Exe	'11/06 (H23/06) – '11/12 (H23/12)	KF (T/C)		ABS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Tanto Exe	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (T/C)		EPS	●	●	●	○
Tanto Exe	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (T/C)		A/B	●	●	○	○
Tanto Exe	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (T/C)		ITC	●	●	●	●
Tanto Exe	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (T/C)		KFS	●	●	●	●
Tanto Exe	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (N/A)		EFI	●	●	●	●
Tanto Exe	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (N/A)		CVT	●	●	●	●
Tanto Exe	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (N/A)		ABS	●	●	●	●
Tanto Exe	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (N/A)		EPS	●	●	●	○
Tanto Exe	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (N/A)		A/B	●	●	○	○
Tanto Exe	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (N/A)		ITC	●	●	●	●
Tanto Exe	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (N/A)		KFS	●	●	●	●
Tanto	' 03/11 (H15/11) – ' 05/06 (H17/06)	EF-DET		EFI	●	●	●	●
Tanto	' 03/11 (H15/11) – ' 05/06 (H17/06)	EF-DET		A/T	●	●	●	●
Tanto	' 03/11 (H15/11) – ' 05/06 (H17/06)	EF-DET		ABS	●	●	●	●
Tanto	' 03/11 (H15/11) – ' 05/06 (H17/06)	EF-DET		EPS	●	●	●	○
Tanto	' 03/11 (H15/11) – ' 05/06 (H17/06)	EF-DET		A/B	●	●	○	○
Tanto Exe	' 09/12 (H21/12) – ' 11/07 (H23/07)	KF-DET		EFI	●	●	●	●
Tanto Exe	' 09/12 (H21/12) – ' 11/07 (H23/07)	KF-DET		CVT	●	●	●	●
Tanto Exe	' 09/12 (H21/12) – ' 11/07 (H23/07)	KF-DET		ABS	●	●	●	●
Tanto Exe	' 09/12 (H21/12) – ' 11/07 (H23/07)	KF-DET		EPS	●	●	●	○
Tanto Exe	' 09/12 (H21/12) – ' 11/07 (H23/07)	KF-DET		A/B	●	●	○	○
Tanto Exe	' 09/12 (H21/12) – ' 11/07 (H23/07)	KF-DET		ITC	●	●	●	●
Tanto Exe	' 09/12 (H21/12) – ' 11/07 (H23/07)	KF-DET		KFS	●	●	●	●
Naked	' 02/12 (H14/12) – ' 04/04 (H16/04)	EF-VE		EFI	●	●	●	●
Naked	' 02/12 (H14/12) – ' 04/04 (H16/04)	EF-VE		ABS	●	●	●	●
Naked	' 02/12 (H14/12) – ' 04/04 (H16/04)	EF-VE		DVS	●	●	●	●
Naked	' 02/12 (H14/12) – ' 04/04 (H16/04)	EF-VE		A/B	●	●	○	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Naked	'02/12 (H14/12) – '04/04 (H16/04)	EF-VE		KFS	●	●	●	●
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		EFI	●	●	●	●
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		CVT	●	●	●	●
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		ABS	●	●	●	●
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		EPS	●	●	●	○
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		A/B	●	●	○	○
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		ITC	●	●	●	●
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (T/C)		KFS	●	●	●	●
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		EFI	●	●	●	●
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		CVT	●	●	●	●
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		eco IDLE	●	●	●	●
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		ABS/VSC	●	●	●	●
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		EPS	●	●	●	○
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		A/B	●	●	○	○
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		ITC	●	●	●	●
Tanto	'11/12 (H23/12) – '12/05 (H24/05)	KF (N/A)		KFS	●	●	●	●
Tanto	'11/06 (H23/06) – '11/12 (H23/12)	KF (T/C)		EFI	●	●	●	●
Tanto	'11/06 (H23/06) – '11/12 (H23/12)	KF (T/C)		CVT	●	●	●	●
Tanto	'11/06 (H23/06) – '11/12 (H23/12)	KF (T/C)		ABS	●	●	●	●
Tanto	'11/06 (H23/06) – '11/12 (H23/12)	KF (T/C)		EPS	●	●	●	○
Tanto	'11/06 (H23/06) – '11/12 (H23/12)	KF (T/C)		A/B	●	●	○	○
Tanto	'11/06 (H23/06) – '11/12 (H23/12)	KF (T/C)		ITC	●	●	●	●
Tanto	'11/06 (H23/06) – '11/12 (H23/12)	KF (T/C)		KFS	●	●	●	●
Tanto	'11/06 (H23/06) – '11/12 (H23/12)	KF (N/A)		EFI	●	●	●	●
Tanto	'11/06 (H23/06) – '11/12 (H23/12)	KF (N/A)		CVT	●	●	●	●
Tanto	'11/06 (H23/06) – '11/12 (H23/12)	KF (N/A)		ABS	●	●	●	●
Tanto	'11/06 (H23/06) – '11/12 (H23/12)	KF (N/A)		EPS	●	●	●	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Tanto	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (N/A)		A/B	●	●	○	○
Tanto	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (N/A)		ITC	●	●	●	●
Tanto	' 11/06 (H23/06) – ' 11/12 (H23/12)	KF (N/A)		KFS	●	●	●	●
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-VE		EFI	●	●	●	●
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-VE		CVT	●	●	●	●
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-VE		ABS	●	●	●	●
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-VE		EPS	●	●	●	○
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-VE		A/B	●	●	○	○
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-VE		ITC	●	●	●	●
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-VE		KFS	●	●	●	●
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-DET		EFI	●	●	●	●
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-DET		CVT	●	●	●	●
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-DET		ABS	●	●	●	●
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-DET		EPS	●	●	●	○
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-DET		A/B	●	●	○	○
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-DET		ITC	●	●	●	●
Tanto	' 10/10 (H22/10) – ' 11/06 (H23/06)	KF-DET		KFS	●	●	●	●
Tanto	' 09/12 (H21/12) – ' 10/10 (H22/10)	KF-VE		EFI	●	●	●	●
Tanto	' 09/12 (H21/12) – ' 10/10 (H22/10)	KF-VE		CVT	●	●	●	●
Tanto	' 09/12 (H21/12) – ' 10/10 (H22/10)	KF-VE		ABS	●	●	●	●
Tanto	' 09/12 (H21/12) – ' 10/10 (H22/10)	KF-VE		EPS	●	●	●	○
Tanto	' 09/12 (H21/12) – ' 10/10 (H22/10)	KF-VE		A/B	●	●	○	○
Tanto	' 09/12 (H21/12) – ' 10/10 (H22/10)	KF-VE		ITC	●	●	●	●
Tanto	' 09/12 (H21/12) – ' 10/10 (H22/10)	KF-VE		KFS	●	●	●	●
Tanto	' 09/12 (H21/12) – ' 10/10 (H22/10)	KF-DET		EFI	●	●	●	●
Tanto	' 09/12 (H21/12) – ' 10/10 (H22/10)	KF-DET		CVT	●	●	●	●
Tanto	' 09/12 (H21/12) – ' 10/10 (H22/10)	KF-DET		ABS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Tanto	'09/12 (H21/12) – '10/10 (H22/10)	KF-DET		EPS	●	●	●	○
Tanto	'09/12 (H21/12) – '10/10 (H22/10)	KF-DET		A/B	●	●	○	○
Tanto	'09/12 (H21/12) – '10/10 (H22/10)	KF-DET		ITC	●	●	●	●
Tanto	'09/12 (H21/12) – '10/10 (H22/10)	KF-DET		KFS	●	●	●	●
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-VE		EFI	●	●	●	●
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-VE		CVT	●	●	●	●
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-VE		ABS	●	●	●	●
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-VE		EPS	●	●	●	○
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-VE		A/B	●	●	○	○
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-VE		ITC	●	●	●	●
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-VE		KFS	●	●	●	●
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-DET		EFI	●	●	●	●
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-DET		CVT	●	●	●	●
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-DET		ABS	●	●	●	●
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-DET		EPS	●	●	●	○
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-DET		A/B	●	●	○	○
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-DET		ITC	●	●	●	●
Tanto	'07/12 (H19/12) – '09/12 (H21/12)	KF-DET		KFS	●	●	●	●
Tanto	'05/06 (H17/06) – '07/12 (H19/12)	EF-VE		EFI	●	●	●	●
Tanto	'05/06 (H17/06) – '07/12 (H19/12)	EF-VE		ABS	●	●	●	●
Tanto	'05/06 (H17/06) – '07/12 (H19/12)	EF-VE		EPS	●	●	●	○
Tanto	'05/06 (H17/06) – '07/12 (H19/12)	EF-VE		A/B	●	●	○	○
Tanto	'05/06 (H17/06) – '07/12 (H19/12)	EF-VE		KFS	●	●	●	●
Tanto Exe	'09/12 (H21/12) – '11/07 (H23/07)	KF-VE		EFI	●	●	●	●
Tanto Exe	'09/12 (H21/12) – '11/07 (H23/07)	KF-VE		CVT	●	●	●	●
Tanto Exe	'09/12 (H21/12) – '11/07 (H23/07)	KF-VE		ABS	●	●	●	●
Tanto Exe	'09/12 (H21/12) – '11/07 (H23/07)	KF-VE		EPS	●	●	●	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Tanto Exe	'09/12 (H21/12) – '11/07 (H23/07)	KF-VE		A/B	●	●	○	○
Tanto Exe	'09/12 (H21/12) – '11/07 (H23/07)	KF-VE		ITC	●	●	●	●
Tanto Exe	'09/12 (H21/12) – '11/07 (H23/07)	KF-VE		KFS	●	●	●	●
Atrai Wagon	'01/01 (H13/01) – '02/01 (H14/01)	EF-VE		EFI	●	●	●	●
Atrai Wagon	'01/01 (H13/01) – '02/01 (H14/01)	EF-VE		ABS	●	●	●	●
Atrai Wagon	'01/01 (H13/01) – '02/01 (H14/01)	EF-VE		A/B	●	●	○	○
Atrai Wagon	'01/01 (H13/01) – '02/01 (H14/01)	EF-VE		KFS	●	●	●	●
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-VN		EFI	●	●	●	●
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-VN		A/B	●	●	○	○
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-VE		EFI	●	●	●	●
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-VE		ABS	●	●	●	●
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-VE		EPS	●	●	●	○
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-VE		A/B	●	●	○	○
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-VE		KFS	●	●	●	●
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-SE		EFI	●	●	●	●
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-SE		ABS	●	●	●	●
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-SE		EPS	●	●	●	○
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-SE		A/B	●	●	○	○
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-DET		EFI	●	●	●	●
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-DET		ABS	●	●	●	●
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-DET		A/B	●	●	○	○
Hijet/Atrai	'01/01 (H13/01) – '01/05 (H13/05)	EF-DET		KFS	●	●	●	●
Atrai 7/Hijet Gran Cargo	'01/06 (H13/06) –	K3-VE		EFI	●	●	●	●
Atrai 7/Hijet Gran Cargo	'01/06 (H13/06) –	K3-VE		A/T	●	●	●	●
Atrai 7/Hijet Gran Cargo	'01/06 (H13/06) –	K3-VE		ABS	●	●	●	●
Atrai 7/Hijet Gran Cargo	'01/06 (H13/06) –	K3-VE		A/B	●	●	○	○
Atrai 7/Hijet Gran Cargo	'01/06 (H13/06) –	K3-VE		KFS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Atraí 7/Hijet Gran Cargo	'00/07 (H12/07) – '01/06 (H13/06)	K3-VE		EFI	●	●	●	●
Atraí 7/Hijet Gran Cargo	'00/07 (H12/07) – '01/06 (H13/06)	K3-VE		A/T	●	●	●	●
Atraí 7/Hijet Gran Cargo	'00/07 (H12/07) – '01/06 (H13/06)	K3-VE		ABS	●	●	●	●
Atraí 7/Hijet Gran Cargo	'00/07 (H12/07) – '01/06 (H13/06)	K3-VE		A/B	●	●	○	○
Atraí 7/Hijet Gran Cargo	'00/07 (H12/07) – '01/06 (H13/06)	K3-VE		KFS	●	●	○	○
Atraí Wagon	'07/08 (H19/08) – '10/08 (H22/08)	KF-DET		EFI	●	●	●	●
Atraí Wagon	'07/08 (H19/08) – '10/08 (H22/08)	KF-DET		ABS	●	●	●	●
Atraí Wagon	'07/08 (H19/08) – '10/08 (H22/08)	KF-DET		A/B	●	●	○	○
Atraí Wagon	'05/05 (H17/05) – '07/08 (H19/08)	EF-DET	A/T	EFI	●	●	●	●
Atraí Wagon	'05/05 (H17/05) – '07/08 (H19/08)	EF-DET	A/T	ABS	●	●	●	●
Atraí Wagon	'05/05 (H17/05) – '07/08 (H19/08)	EF-DET	A/T	A/B	●	●	○	○
Atraí Wagon	'05/05 (H17/05) – '07/08 (H19/08)	EF-DET	M/T	EFI	●	●	●	●
Atraí Wagon	'05/05 (H17/05) – '07/08 (H19/08)	EF-DET	M/T	ABS	●	●	●	●
Atraí Wagon	'05/05 (H17/05) – '07/08 (H19/08)	EF-DET	M/T	A/B	●	●	○	○
Atraí Wagon	'03/05 (H15/05) – '05/04 (H17/04)	EF-VE		EFI	●	●	●	●
Atraí Wagon	'03/05 (H15/05) – '05/04 (H17/04)	EF-VE		ABS	●	●	●	●
Atraí Wagon	'03/05 (H15/05) – '05/04 (H17/04)	EF-VE		A/B	●	●	○	○
Atraí Wagon	'03/05 (H15/05) – '05/04 (H17/04)	EF-VE		KFS	●	●	●	●
Atraí Wagon	'03/05 (H15/05) – '05/04 (H17/04)	EF-DET		EFI	●	●	●	●
Atraí Wagon	'03/05 (H15/05) – '05/04 (H17/04)	EF-DET		A/T	●	●	●	●
Atraí Wagon	'03/05 (H15/05) – '05/04 (H17/04)	EF-DET		ABS	●	●	●	●
Atraí Wagon	'03/05 (H15/05) – '05/04 (H17/04)	EF-DET		A/B	●	●	○	○
Atraí Wagon	'03/05 (H15/05) – '05/04 (H17/04)	EF-DET		KFS	●	●	●	●
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	JB-DET		EFI	●	●	●	●
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	JB-DET		ABS	●	●	●	●
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	JB-DET		DVS	●	●	●	●
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	JB-DET		A/B	●	●	○	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	'01/10 (H13/10) – '02/10 (H14/10)	JB-DET		KFS	●	●	●	●
Atrai Wagon	'02/01 (H14/01) – '03/05 (H15/05)	EF-DET		EFI	●	●	●	●
Atrai Wagon	'02/01 (H14/01) – '03/05 (H15/05)	EF-DET		A/T	●	●	●	●
Atrai Wagon	'02/01 (H14/01) – '03/05 (H15/05)	EF-DET		ABS	●	●	●	●
Atrai Wagon	'02/01 (H14/01) – '03/05 (H15/05)	EF-DET		A/B	●	●	○	○
Atrai Wagon	'02/01 (H14/01) – '03/05 (H15/05)	EF-DET		KFS	●	●	●	●
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-VE	Truck Type	EFI	●	●	●	●
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-VE	Truck Type	ABS	●	●	●	●
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-VE	Truck Type	EPS	●	●	●	○
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-VE	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-VE	Cargo, Atrai Type	EFI	●	●	●	●
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-VE	Cargo, Atrai Type	ABS	●	●	●	●
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-VE	Cargo, Atrai Type	A/B	●	●	○	○
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-VE	Cargo, Atrai Type	KFS	●	●	●	●
Atrai Wagon	'01/01 (H13/01) – '02/01 (H14/01)	EF-DET		EFI	●	●	●	●
Atrai Wagon	'01/01 (H13/01) – '02/01 (H14/01)	EF-DET		ABS	●	●	●	●
Atrai Wagon	'01/01 (H13/01) – '02/01 (H14/01)	EF-DET		A/B	●	●	○	○
Atrai Wagon	'01/01 (H13/01) – '02/01 (H14/01)	EF-DET		KFS	●	●	●	●
Boone Luminas	'08/12 (H20/12) –	3SZ-VE		EFI	●	●	●	●
Boone Luminas	'08/12 (H20/12) –	3SZ-VE		A/T	●	●	●	●
Boone Luminas	'08/12 (H20/12) –	3SZ-VE		ABS	●	●	●	●
Boone Luminas	'08/12 (H20/12) –	3SZ-VE		VSC	●	●	●	●
Boone Luminas	'08/12 (H20/12) –	3SZ-VE		EPS	●	●	●	○
Boone Luminas	'08/12 (H20/12) –	3SZ-VE		A/B	●	●	○	○
Boone Luminas	'08/12 (H20/12) –	3SZ-VE		ITC	●	●	●	●
Boone Luminas	'08/12 (H20/12) –	3SZ-VE		KFS	●	●	●	●
Boone	'12/06 (H24/06) –	1KR-FE		EFI	●	●	●	●
Boone	'12/06 (H24/06) –	1KR-FE		CVT	●	●	●	●
Boone	'12/06 (H24/06) –	1KR-FE		eco IDLE	●	●	●	●
Boone	'12/06 (H24/06) –	1KR-FE		ABS/VSC	●	●	●	●
Boone	'12/06 (H24/06) –	1KR-FE		EPS	●	●	●	○
Boone	'12/06 (H24/06) –	1KR-FE		A/B	●	●	○	○
Boone	'12/06 (H24/06) –	1KR-FE		ITC	●	●	●	●
Boone	'12/06 (H24/06) –	1KR-FE		KFS	●	●	●	●
Boone	'12/06 (H24/06) –	1KR-FE		Meter	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1NR-FE		EFI	●	●	●	●
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1NR-FE		CVT	●	●	●	●
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1NR-FE		ABS/VSC	●	●	●	●
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1NR-FE		EPS	●	●	●	○
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1NR-FE		A/B	●	●	○	○
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1NR-FE		ITC	●	●	●	●
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1NR-FE		KFS	●	●	●	●
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1NR-FE		Meter	●	●	●	●
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1KR-FE		EFI	●	●	●	●
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1KR-FE		CVT	●	●	●	●
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1KR-FE		ABS/VSC	●	●	●	●
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1KR-FE		EPS	●	●	●	○
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1KR-FE		A/B	●	●	○	○
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1KR-FE		ITC	●	●	●	●
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1KR-FE		KFS	●	●	●	●
Boone	' 11/05 (H23/05) – ' 12/06 (H24/06)	1KR-FE		Meter	●	●	●	●
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1NR-FE		EFI	●	●	●	●
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1NR-FE		CVT	●	●	●	●
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1NR-FE		ABS/VSC	●	●	●	●
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1NR-FE		EPS	●	●	●	○
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1NR-FE		A/B	●	●	○	○
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1NR-FE		ITC	●	●	●	●
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1NR-FE		KFS	●	●	●	●
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1NR-FE		Meter	●	●	●	●
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1KR-FE		EFI	●	●	●	●
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1KR-FE		CVT	●	●	●	●
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1KR-FE		ABS/VSC	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1KR-FE		EPS	●	●	●	○
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1KR-FE		A/B	●	●	○	○
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1KR-FE		ITC	●	●	●	●
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1KR-FE		KFS	●	●	●	●
Boone	' 10/02 (H22/02) – ' 11/05 (H23/05)	1KR-FE		Meter	●	●	●	●
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	KJ-VET		EFI	●	●	●	●
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	KJ-VET		ABS	●	●	●	●
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	KJ-VET		EPS	●	●	●	○
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	KJ-VET		A/B	●	●	○	○
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	K3-VE		EFI	●	●	●	●
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	K3-VE		A/T	●	●	●	●
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	K3-VE		ABS	●	●	●	●
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	K3-VE		EPS	●	●	●	○
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	K3-VE		A/B	●	●	○	○
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	K3-VE		KFS	●	●	●	●
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	1KR-FE		EFI	●	●	●	●
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	1KR-FE		A/T	●	●	●	●
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	1KR-FE		ABS	●	●	●	●
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	1KR-FE		EPS	●	●	●	○
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	1KR-FE		A/B	●	●	○	○
Boone	' 05/11 (H17/11) – ' 10/02 (H22/02)	1KR-FE		KFS	●	●	●	●
Atrai Wagon	' 02/01 (H14/01) – ' 03/05 (H15/05)	EF-VE		EFI	●	●	●	●
Atrai Wagon	' 02/01 (H14/01) – ' 03/05 (H15/05)	EF-VE		ABS	●	●	●	●
Atrai Wagon	' 02/01 (H14/01) – ' 03/05 (H15/05)	EF-VE		A/B	●	●	○	○
Atrai Wagon	' 02/01 (H14/01) – ' 03/05 (H15/05)	EF-VE		KFS	●	●	●	●
Hijet/Atrai	' 02/01 (H14/01) – ' 04/12 (H16/12)	EF-SE	Truck Type	EFI	●	●	●	●
Hijet/Atrai	' 02/01 (H14/01) – ' 04/12 (H16/12)	EF-SE	Truck Type	ABS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-SE	Truck Type	EPS	●	●	●	○
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-SE	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-SE	Cargo, Atrai Type	EFI	●	●	●	●
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-SE	Cargo, Atrai Type	ABS	●	●	●	●
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-SE	Cargo, Atrai Type	A/B	●	●	○	○
Hijet/Atrai	'11/11 (H23/11) –	KF (N/A)	Truck Type	EFI	●	●	●	●
Hijet/Atrai	'11/11 (H23/11) –	KF (N/A)	Truck Type	ABS	●	●	●	●
Hijet/Atrai	'11/11 (H23/11) –	KF (N/A)	Truck Type	EPS	●	●	●	○
Hijet/Atrai	'11/11 (H23/11) –	KF (N/A)	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'11/11 (H23/11) –	KF (N/A)	Cargo Type	EFI	●	●	●	●
Hijet/Atrai	'11/11 (H23/11) –	KF (N/A)	Cargo Type	ABS	●	●	●	●
Hijet/Atrai	'11/11 (H23/11) –	KF (N/A)	Cargo Type	A/B	●	●	○	○
Hijet/Atrai	'10/08 (H22/08) – '11/11 (H23/11)	KF-VE	Truck Type	EFI	●	●	●	●
Hijet/Atrai	'10/08 (H22/08) – '11/11 (H23/11)	KF-VE	Truck Type	ABS	●	●	●	●
Hijet/Atrai	'10/08 (H22/08) – '11/11 (H23/11)	KF-VE	Truck Type	EPS	●	●	●	○
Hijet/Atrai	'10/08 (H22/08) – '11/11 (H23/11)	KF-VE	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'10/08 (H22/08) – '11/11 (H23/11)	KF-VE	Cargo Type	EFI	●	●	●	●
Hijet/Atrai	'10/08 (H22/08) – '11/11 (H23/11)	KF-VE	Cargo Type	ABS	●	●	●	●
Hijet/Atrai	'10/08 (H22/08) – '11/11 (H23/11)	KF-VE	Cargo Type	A/B	●	●	○	○
Hijet/Atrai	'10/08 (H22/08) – '11/11 (H23/11)	KF-DET		EFI	●	●	●	●
Hijet/Atrai	'10/08 (H22/08) – '11/11 (H23/11)	KF-DET		ABS	●	●	●	●
Hijet/Atrai	'10/08 (H22/08) – '11/11 (H23/11)	KF-DET		A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	KF-VE	Truck Type	EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	KF-VE	Truck Type	ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	KF-VE	Truck Type	EPS	●	●	●	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	KF-VE	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	KF-VE	Cargo Type	EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	KF-VE	Cargo Type	ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	KF-VE	Cargo Type	A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	KF-DET		EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	KF-DET		ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	KF-DET		A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VN		EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VN		ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VN		A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE (HV)		EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE (HV)		A/T	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE (HV)		ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE (HV)		EPS	●	●	●	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE (HV)		A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Truck Type	EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Truck Type	ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Truck Type	EPS	●	●	●	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Truck Type	EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Truck Type	ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Truck Type	EPS	●	●	●	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Cargo Type	EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Cargo Type	ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Cargo Type	A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Cargo Type	EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Cargo Type	ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-VE	Cargo Type	A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-SE	Truck Type	EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-SE	Truck Type	ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-SE	Truck Type	EPS	●	●	●	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-SE	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-SE	Cargo Type	EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-SE	Cargo Type	ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-SE	Cargo Type	A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-DET	A/T	EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-DET	A/T	ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-DET	A/T	A/B	●	●	○	○
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-DET	M/T	EFI	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-DET	M/T	ABS	●	●	●	●
Hijet/Atrai	'04/12 (H16/12) – '10/08 (H22/08)	EF-DET	M/T	A/B	●	●	○	○
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-DET		EFI	●	●	●	●
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-DET		ABS	●	●	●	●
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-DET		A/B	●	●	○	○
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-DET		KFS	●	●	●	●
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-VE	Truck Type	EFI	●	●	●	●
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-VE	Truck Type	ABS	●	●	●	●
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-VE	Truck Type	EPS	●	●	●	○
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-VE	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-VE	Cargo, Atrai Type	EFI	●	●	●	●
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-VE	Cargo, Atrai Type	ABS	●	●	●	●
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-VE	Cargo, Atrai Type	A/B	●	●	○	○
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-VE	Cargo, Atrai Type	KFS	●	●	●	●
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-SE	Truck Type	EFI	●	●	●	●
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-SE	Truck Type	ABS	●	●	●	●
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-SE	Truck Type	EPS	●	●	●	○
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-SE	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-SE	Cargo, Atrai Type	EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-SE	Cargo, Atrai Type	ABS	●	●	●	●
Hijet/Atrai	'01/05 (H13/05) – '01/09 (H13/09)	EF-SE	Cargo, Atrai Type	A/B	●	●	○	○
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-DET		EFI	●	●	●	●
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-DET		A/T	●	●	●	●
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-DET		ABS	●	●	●	●
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-DET		A/B	●	●	○	○
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-DET		KFS	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-VN		EFI	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-VN		A/B	●	●	○	○
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-VE	Truck Type	EFI	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-VE	Truck Type	ABS	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-VE	Truck Type	EPS	●	●	●	○
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-VE	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-VE	Cargo, Atrai Type	EFI	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-VE	Cargo, Atrai Type	ABS	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-VE	Cargo, Atrai Type	A/B	●	●	○	○
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-VE	Cargo, Atrai Type	KFS	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-SE	Truck Type	EFI	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-SE	Truck Type	ABS	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-SE	Truck Type	EPS	●	●	●	○
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-SE	Truck Type	A/B	●	●	○	○
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-SE	Cargo, Atrai Type	EFI	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-SE	Cargo, Atrai Type	ABS	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-SE	Cargo, Atrai Type	A/B	●	●	○	○
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-DET		EFI	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-DET		ABS	●	●	●	●
Hijet/Atrai	'01/10 (H13/10) – '02/01 (H14/01)	EF-DET		A/B	●	●	○	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Hi jet/Atrai	' 01/10 (H13/10) – ' 02/01 (H14/01)	EF-DET		KFS	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-VN		EFI	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-VN		A/B	●	●	○	○
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-VE	Truck Type	EFI	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-VE	Truck Type	ABS	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-VE	Truck Type	EPS	●	●	●	○
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-VE	Truck Type	A/B	●	●	○	○
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-VE	Cargo, Atrai Type	EFI	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-VE	Cargo, Atrai Type	ABS	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-VE	Cargo, Atrai Type	A/B	●	●	○	○
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-VE	Cargo, Atrai Type	KFS	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-SE	Truck Type	EFI	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-SE	Truck Type	ABS	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-SE	Truck Type	EPS	●	●	●	○
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-SE	Truck Type	A/B	●	●	○	○
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-SE	Cargo, Atrai Type	EFI	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-SE	Cargo, Atrai Type	ABS	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-SE	Cargo, Atrai Type	A/B	●	●	○	○
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-DET		EFI	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-DET		ABS	●	●	●	●
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-DET		A/B	●	●	○	○
Hi jet/Atrai	' 01/09 (H13/09) – ' 01/10 (H13/10)	EF-DET		KFS	●	●	●	●
Hi jet/Atrai	' 01/05 (H13/05) – ' 01/09 (H13/09)	EF-VN		EFI	●	●	●	●
Hi jet/Atrai	' 01/05 (H13/05) – ' 01/09 (H13/09)	EF-VN		A/B	●	●	○	○
Storia	' 02/08 (H14/08) –	K3-VE2		EFI	●	●	●	●
Storia	' 02/08 (H14/08) –	K3-VE2		A/T	●	●	●	●
Storia	' 02/08 (H14/08) –	K3-VE2		ABS	●	●	●	●
Storia	' 02/08 (H14/08) –	K3-VE2		DVS	●	●	●	●
Storia	' 02/08 (H14/08) –	K3-VE2		A/B	●	●	○	○
Storia	' 02/08 (H14/08) –	K3-VE2		KFS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-VN		EFI	●	●	●	●
Hijet/Atrai	'02/01 (H14/01) – '04/12 (H16/12)	EF-VN		A/B	●	●	○	○
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		EFI	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		CVT	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		eco IDLE	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		ABS/VSC	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		EPS	●	●	●	○
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		A/B	●	●	○	○
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		ITC	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		KFS	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		PSB-D	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		PSB-P	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		Meter	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (T/C)		DSS	●	●	●	○
Boone	'04/05 (H16/05) – '05/11 (H17/11)	K3-VE		EFI	●	●	●	●
Boone	'04/05 (H16/05) – '05/11 (H17/11)	K3-VE		A/T	●	●	●	●
Boone	'04/05 (H16/05) – '05/11 (H17/11)	K3-VE		ABS	●	●	●	●
Boone	'04/05 (H16/05) – '05/11 (H17/11)	K3-VE		EPS	●	●	●	○
Boone	'04/05 (H16/05) – '05/11 (H17/11)	K3-VE		A/B	●	●	○	○
Boone	'04/05 (H16/05) – '05/11 (H17/11)	K3-VE		KFS	●	●	●	●
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (N/A)	Present ECO IDLE	EFI	●	●	●	●
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (N/A)	Present ECO IDLE	CVT	●	●	●	●
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (N/A)	Present ECO IDLE	eco IDLE	●	●	●	●
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (N/A)	Present ECO IDLE	ABS/VSC	●	●	●	●
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (N/A)	Present ECO IDLE	EPS	●	●	●	○
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (N/A)	Present ECO IDLE	A/B	●	●	○	○
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (N/A)	Present ECO IDLE	ITC	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE Conte	' 11/06 (H23/06) – ' 12/04 (H24/04)	KF (N/A)	Present ECO IDLE	KFS	●	●	●	●
MOVE Conte	' 11/06 (H23/06) – ' 12/04 (H24/04)	KF (N/A)	Without ECO IDLE	EFI	●	●	●	●
MOVE Conte	' 11/06 (H23/06) – ' 12/04 (H24/04)	KF (N/A)	Without ECO IDLE	CVT	●	●	●	●
MOVE Conte	' 11/06 (H23/06) – ' 12/04 (H24/04)	KF (N/A)	Without ECO IDLE	ABS	●	●	●	●
MOVE Conte	' 11/06 (H23/06) – ' 12/04 (H24/04)	KF (N/A)	Without ECO IDLE	EPS	●	●	●	○
MOVE Conte	' 11/06 (H23/06) – ' 12/04 (H24/04)	KF (N/A)	Without ECO IDLE	A/B	●	●	○	○
MOVE Conte	' 11/06 (H23/06) – ' 12/04 (H24/04)	KF (N/A)	Without ECO IDLE	ITC	●	●	●	●
MOVE Conte	' 11/06 (H23/06) – ' 12/04 (H24/04)	KF (N/A)	Without ECO IDLE	KFS	●	●	●	●
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-VE		EFI	●	●	●	●
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-VE		CVT	●	●	●	●
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-VE		ABS	●	●	●	●
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-VE		EPS	●	●	●	○
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-VE		A/B	●	●	○	○
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-VE		ITC	●	●	●	●
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-VE		KFS	●	●	●	●
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-DET		EFI	●	●	●	●
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-DET		CVT	●	●	●	●
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-DET		ABS	●	●	●	●
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-DET		EPS	●	●	●	○
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-DET		A/B	●	●	○	○
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-DET		ITC	●	●	●	●
MOVE Conte	' 09/12 (H21/12) – ' 11/06 (H23/06)	KF-DET		KFS	●	●	●	●
MOVE Conte	' 08/08 (H20/08) – ' 09/12 (H21/12)	KF-VE		EFI	●	●	●	●
MOVE Conte	' 08/08 (H20/08) – ' 09/12 (H21/12)	KF-VE		CVT	●	●	●	●
MOVE Conte	' 08/08 (H20/08) – ' 09/12 (H21/12)	KF-VE		ABS	●	●	●	●
MOVE Conte	' 08/08 (H20/08) – ' 09/12 (H21/12)	KF-VE		EPS	●	●	●	○
MOVE Conte	' 08/08 (H20/08) – ' 09/12 (H21/12)	KF-VE		A/B	●	●	○	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE Conte	'08/08 (H20/08) – '09/12 (H21/12)	KF-VE		ITC	●	●	●	●
MOVE Conte	'08/08 (H20/08) – '09/12 (H21/12)	KF-VE		KFS	●	●	●	●
MOVE Conte	'08/08 (H20/08) – '09/12 (H21/12)	KF-DET		EFI	●	●	●	●
MOVE Conte	'08/08 (H20/08) – '09/12 (H21/12)	KF-DET		CVT	●	●	●	●
MOVE Conte	'08/08 (H20/08) – '09/12 (H21/12)	KF-DET		ABS	●	●	●	●
MOVE Conte	'08/08 (H20/08) – '09/12 (H21/12)	KF-DET		EPS	●	●	●	○
MOVE Conte	'08/08 (H20/08) – '09/12 (H21/12)	KF-DET		A/B	●	●	○	○
MOVE Conte	'08/08 (H20/08) – '09/12 (H21/12)	KF-DET		ITC	●	●	●	●
MOVE Conte	'08/08 (H20/08) – '09/12 (H21/12)	KF-DET		KFS	●	●	●	●
MOVE	'12/12 (H24/12) –	KF (N/A, T/C)		EFI	●	●	●	●
MOVE	'12/12 (H24/12) –	KF (N/A, T/C)		CVT	●	●	●	●
MOVE	'12/12 (H24/12) –	KF (N/A, T/C)		eco IDLE	●	●	●	●
MOVE	'12/12 (H24/12) –	KF (N/A, T/C)		ABS/VSC	●	●	●	●
MOVE	'12/12 (H24/12) –	KF (N/A, T/C)		EPS	●	●	●	○
MOVE	'12/12 (H24/12) –	KF (N/A, T/C)		A/B	●	●	○	○
MOVE	'12/12 (H24/12) –	KF (N/A, T/C)		ITC	●	●	●	●
MOVE	'12/12 (H24/12) –	KF (N/A, T/C)		KFS	●	●	●	●
MOVE	'12/12 (H24/12) –	KF (N/A, T/C)		Meter	●	●	●	●
MOVE	'12/12 (H24/12) –	KF (N/A, T/C)		Auto Leveling	●	●	●	●
MOVE	'12/12 (H24/12) –	KF (N/A, T/C)		PCB	●	●	●	○
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyless	EFI	●	●	●	●
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyless	CVT	●	●	●	●
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyless	eco IDLE	●	●	●	●
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyless	ABS/VSC	●	●	●	●
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyless	EPS	●	●	●	○
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyless	A/B	●	●	○	○
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyless	ITC	●	●	●	●
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyless	Meter	●	●	●	●
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyfree	EFI	●	●	●	●
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyfree	CVT	●	●	●	●
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyfree	eco IDLE	●	●	●	●
MOVE	'12/05 (H24/05) – '12/12 (H24/12)	KF (N/A, T/C)	Keyfree	ABS/VSC	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	' 12/05 (H24/05) – ' 12/12 (H24/12)	KF (N/A, T/C)	Keyfree	EPS	●	●	●	○
MOVE	' 12/05 (H24/05) – ' 12/12 (H24/12)	KF (N/A, T/C)	Keyfree	A/B	●	●	○	○
MOVE	' 12/05 (H24/05) – ' 12/12 (H24/12)	KF (N/A, T/C)	Keyfree	ITC	●	●	●	●
MOVE	' 12/05 (H24/05) – ' 12/12 (H24/12)	KF (N/A, T/C)	Keyfree	KFS	●	●	●	●
MOVE	' 12/05 (H24/05) – ' 12/12 (H24/12)	KF (N/A, T/C)	Keyfree	PSB-D	●	●	●	●
MOVE	' 12/05 (H24/05) – ' 12/12 (H24/12)	KF (N/A, T/C)	Keyfree	PSB-P	●	●	●	●
MOVE	' 12/05 (H24/05) – ' 12/12 (H24/12)	KF (N/A, T/C)	Keyfree	Meter	●	●	●	●
MOVE	' 12/05 (H24/05) – ' 12/12 (H24/12)	KF (N/A, T/C)	Keyfree	DSS	●	●	●	○
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (T/C)		EFI	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (T/C)		CVT	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (T/C)		ABS/VSC	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (T/C)		EPS	●	●	●	○
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (T/C)		A/B	●	●	○	○
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (T/C)		ITC	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (T/C)		KFS	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (T/C)		PSB-D	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (T/C)		PSB-P	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (T/C)		Meter	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (T/C)		DSS	●	●	●	○
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyless	EFI	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyless	CVT	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyless	eco IDLE	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyless	ABS/VSC	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyless	EPS	●	●	●	○
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyless	A/B	●	●	○	○
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyless	ITC	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyless	Meter	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyfree	EFI	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyfree	CVT	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyfree	eco IDLE	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyfree	ABS/VSC	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyfree	EPS	●	●	●	○
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyfree	A/B	●	●	○	○
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyfree	ITC	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyfree	KFS	●	●	●	●
MOVE	' 11/11 (H23/11) – ' 12/05 (H24/05)	KF (N/A)	Keyfree	Meter	●	●	●	●
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (N/A)		EFI	●	●	●	●
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (N/A)		CVT	●	●	●	●
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (N/A)		eco IDLE	●	●	●	●
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (N/A)		ABS/VSC	●	●	●	●
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (N/A)		EPS	●	●	●	○
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (N/A)		A/B	●	●	○	○
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (N/A)		ITC	●	●	●	●
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (N/A)		KFS	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyless	EFI	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyless	CVT	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyless	eco IDLE	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyless	ABS/VSC	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyless	EPS	●	●	●	○
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyless	A/B	●	●	○	○
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyless	ITC	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyless	PSB-D	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyless	PSB-P	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyless	Meter	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyless	DSS	●	●	●	○
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	EFI	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	CVT	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	eco IDLE	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	ABS/VSC	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	EPS	●	●	●	○
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	A/B	●	●	○	○
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	ITC	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	KFS	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	PSB-D	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	PSB-P	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	Meter	●	●	●	●
MOVE	' 11/08 (H23/08) – ' 11/11 (H23/11)	KF (N/A)	Keyfree	DSS	●	●	●	○
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (T/C)		EFI	●	●	●	●
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (T/C)		CVT	●	●	●	●
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (T/C)		ABS	●	●	●	●
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (T/C)		EPS	●	●	●	○
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (T/C)		A/B	●	●	○	○
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (T/C)		ITC	●	●	●	●
MOVE Conte	' 12/04 (H24/04) – ' 12/05 (H24/05)	KF (T/C)		KFS	●	●	●	●
MOVE	' 10/12 (H22/12) – ' 11/08 (H23/08)	KF (N/A)	Keyless	EFI	●	●	●	●
MOVE	' 10/12 (H22/12) – ' 11/08 (H23/08)	KF (N/A)	Keyless	CVT	●	●	●	●
MOVE	' 10/12 (H22/12) – ' 11/08 (H23/08)	KF (N/A)	Keyless	eco IDLE	●	●	●	●
MOVE	' 10/12 (H22/12) – ' 11/08 (H23/08)	KF (N/A)	Keyless	ABS/VSC	●	●	●	●
MOVE	' 10/12 (H22/12) – ' 11/08 (H23/08)	KF (N/A)	Keyless	EPS	●	●	●	○
MOVE	' 10/12 (H22/12) – ' 11/08 (H23/08)	KF (N/A)	Keyless	A/B	●	●	○	○
MOVE	' 10/12 (H22/12) – ' 11/08 (H23/08)	KF (N/A)	Keyless	ITC	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyless	PSB-D	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyless	PSB-P	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyless	Meter	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyless	DSS	●	●	●	○
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	EFI	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	CVT	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	eco IDLE	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	ABS/VSC	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	EPS	●	●	●	○
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	A/B	●	●	○	○
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	ITC	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	KFS	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	PSB-D	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	PSB-P	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	Meter	●	●	●	●
MOVE	'10/12 (H22/12) – '11/08 (H23/08)	KF (N/A)	Keyfree	DSS	●	●	●	○
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Without Push Start	EFI	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Without Push Start	CVT	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Without Push Start	ABS	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Without Push Start	EPS	●	●	●	○
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Without Push Start	A/B	●	●	○	○
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Without Push Start	ITC	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Without Push Start	KFS	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Equipped Push Start	EFI	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Equipped Push Start	CVT	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Equipped Push Start	ABS	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Equipped Push Start	EPS	●	●	●	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Equipped Push Start	A/B	●	●	○	○
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Equipped Push Start	ITC	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Equipped Push Start	KFS	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-VE	Equipped Push Start	Power Supply	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Without Push Start	EFI	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Without Push Start	CVT	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Without Push Start	ABS	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Without Push Start	EPS	●	●	●	○
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Without Push Start	A/B	●	●	○	○
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Without Push Start	ITC	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Without Push Start	KFS	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Equipped Push Start	EFI	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Equipped Push Start	CVT	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Equipped Push Start	ABS	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Equipped Push Start	EPS	●	●	●	○
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Equipped Push Start	A/B	●	●	○	○
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Equipped Push Start	ITC	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Equipped Push Start	KFS	●	●	●	●
MOVE	'09/12 (H21/12) – '10/12 (H22/12)	KF-DET	Equipped Push Start	Power Supply	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Without Push Start	EFI	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Without Push Start	CVT	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Without Push Start	ABS	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Without Push Start	EPS	●	●	●	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Without Push Start	A/B	●	●	○	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Without Push Start	ITC	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Without Push Start	KFS	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Equipped Push Start	EFI	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Equipped Push Start	CVT	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Equipped Push Start	ABS	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Equipped Push Start	EPS	●	●	●	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Equipped Push Start	A/B	●	●	○	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Equipped Push Start	ITC	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Equipped Push Start	KFS	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-VE	Equipped Push Start	Power Supply	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	EFI	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	CVT	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	ABS	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	VSC	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	EPS	●	●	●	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	A/B	●	●	○	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	ITC	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	KFS	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	ACC	●	●	●	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	PSB-D	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	PSB-P	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	IMG	●	●	●	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	EFI	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	CVT	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	ABS	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	VSC	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	EPS	●	●	●	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	A/B	●	●	○	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	ITC	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	KFS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Without Push Start	ACC	●	●	●	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	EFI	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	CVT	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	ABS	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	VSC	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	EPS	●	●	●	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	A/B	●	●	○	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	ITC	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	KFS	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	Power Supply	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	ACC	●	●	●	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	PSB-D	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	PSB-P	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	IMG	●	●	●	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	EFI	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	CVT	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	ABS	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	VSC	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	EPS	●	●	●	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	A/B	●	●	○	○
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	ITC	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	KFS	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	Power Supply	●	●	●	●
MOVE	'08/12 (H20/12) – '09/12 (H21/12)	KF-DET	Equipped Push Start	ACC	●	●	●	○
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-VE		EFI	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-VE		CVT	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-VE		ABS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-VE		EPS	●	●	●	○
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-VE		A/B	●	●	○	○
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-VE		ITC	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-VE		KFS	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-VE		Power Supply	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	EFI	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	CVT	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	ABS	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	VSC	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	EPS	●	●	●	○
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	A/B	●	●	○	○
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	ITC	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	KFS	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	Power Supply	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	ACC	●	●	●	○
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	PSB-D	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	PSB-P	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Equipped Precrash	IMG	●	●	●	○
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Without Precrash	EFI	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Without Precrash	CVT	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Without Precrash	ABS	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Without Precrash	VSC	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Without Precrash	EPS	●	●	●	○
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Without Precrash	A/B	●	●	○	○
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Without Precrash	ITC	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Without Precrash	KFS	●	●	●	●
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Without Precrash	Power Supply	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	'06/10 (H18/10) – '08/12 (H20/12)	KF-DET	Without Precrash	ACC	●	●	●	○
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	JB-DET		EFI	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	JB-DET		A/T	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	JB-DET		ABS	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	JB-DET		DVS	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	JB-DET		EPS	●	●	●	○
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	JB-DET		A/B	●	●	○	○
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	JB-DET		KFS	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	JB-DET		ACC	●	●	●	○
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	Except CVT	EFI	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	Except CVT	A/T	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	Except CVT	ABS	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	Except CVT	EPS	●	●	●	○
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	Except CVT	A/B	●	●	○	○
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	Except CVT	KFS	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	CVT	EFI	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	CVT	CVT	●	●	●	○
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	CVT	ABS	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	CVT	EPS	●	●	●	○
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	CVT	A/B	●	●	○	○
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-VE	CVT	KFS	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-DET		EFI	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-DET		A/T	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-DET		ABS	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-DET		DVS	●	●	●	●
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-DET		EPS	●	●	●	○
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-DET		A/B	●	●	○	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
MOVE	'04/12 (H16/12) – '06/10 (H18/10)	EF-DET		KFS	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	JB-DET		EFI	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	JB-DET		A/T	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	JB-DET		ABS	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	JB-DET		DVS	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	JB-DET		EPS	●	●	●	○
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	JB-DET		A/B	●	●	○	○
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	JB-DET		KFS	●	●	●	●
MOVE	'02/10 (H14/10) – '04/12 (H16/12)	JB-DET		ACC	●	●	●	○
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		EFI	●	●	●	●
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		CVT	●	●	●	●
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		eco IDLE	●	●	●	●
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		ABS/VSC	●	●	●	●
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		EPS	●	●	●	○
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		A/B	●	●	○	○
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		ITC	●	●	●	●
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		KFS	●	●	●	●
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		PSB-D	●	●	●	●
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		PSB-P	●	●	●	●
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		Meter	●	●	●	●
MOVE	'11/08 (H23/08) – '11/11 (H23/11)	KF (T/C)		DSS	●	●	●	○
COO	'10/07 (H22/07) –	3SZ-VE		EFI	●	●	●	●
COO	'10/07 (H22/07) –	3SZ-VE		A/T	●	●	●	●
COO	'10/07 (H22/07) –	3SZ-VE		ABS	●	●	●	●
COO	'10/07 (H22/07) –	3SZ-VE		VSC	●	●	●	●
COO	'10/07 (H22/07) –	3SZ-VE		EPS	●	●	●	○
COO	'10/07 (H22/07) –	3SZ-VE		KFS	●	●	●	●
COO	'10/07 (H22/07) –	3SZ-VE		A/B	●	●	○	○
Hijet/Atrai	'11/11 (H23/11) –	KF (T/C)		EFI	●	●	●	●
Hijet/Atrai	'11/11 (H23/11) –	KF (T/C)		ABS	●	●	●	●
Hijet/Atrai	'11/11 (H23/11) –	KF (T/C)		A/B	●	●	○	○
Storia	'02/08 (H14/08) –	K3-VE		EFI	●	●	●	●
Storia	'02/08 (H14/08) –	K3-VE		A/T	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Storia	'02/08 (H14/08) -	K3-VE		ABS	●	●	●	●
Storia	'02/08 (H14/08) -	K3-VE		DVS	●	●	●	●
Storia	'02/08 (H14/08) -	K3-VE		A/B	●	●	○	○
Storia	'02/08 (H14/08) -	K3-VE		KFS	●	●	●	●
Storia	'02/08 (H14/08) -	JC-DET		EFI	●	●	●	●
Storia	'02/08 (H14/08) -	JC-DET		A/B	●	●	○	○
Storia	'02/08 (H14/08) -	EJ-VE		EFI	●	●	●	●
Storia	'02/08 (H14/08) -	EJ-VE		ABS	●	●	●	●
Storia	'02/08 (H14/08) -	EJ-VE		A/B	●	●	○	○
Storia	'02/08 (H14/08) -	EJ-VE		KFS	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE2		EFI	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE2		A/T	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE2		ABS	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE2		DVS	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE2		A/B	●	●	○	○
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE2		KFS	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE		EFI	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE		A/T	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE		ABS	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE		DVS	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE		A/B	●	●	○	○
Storia	'02/01 (H14/01) - '02/08 (H14/08)	K3-VE		KFS	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	EJ-VE		EFI	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	EJ-VE		ABS	●	●	●	●
Storia	'02/01 (H14/01) - '02/08 (H14/08)	EJ-VE		A/B	●	●	○	○
Storia	'02/01 (H14/01) - '02/08 (H14/08)	EJ-VE		KFS	●	●	●	●
Storia	'00/12 (H12/12) - '02/01 (H14/01)	K3-VE2		EFI	●	●	●	●
Storia	'00/12 (H12/12) - '02/01 (H14/01)	K3-VE2		A/T	●	●	●	●
Storia	'00/12 (H12/12) - '02/01 (H14/01)	K3-VE2		ABS	●	●	●	●
Storia	'00/12 (H12/12) - '02/01 (H14/01)	K3-VE2		DVS	●	●	●	●
Storia	'00/12 (H12/12) - '02/01 (H14/01)	K3-VE2		A/B	●	●	○	○
Storia	'00/12 (H12/12) - '02/01 (H14/01)	K3-VE2		KFS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Storia	'00/12 (H12/12) – '02/01 (H14/01)	EJ-VE		EFI	●	●	●	●
Storia	'00/12 (H12/12) – '02/01 (H14/01)	EJ-VE		ABS	●	●	●	●
Storia	'00/12 (H12/12) – '02/01 (H14/01)	EJ-VE		A/B	●	●	○	○
Storia	'00/12 (H12/12) – '02/01 (H14/01)	EJ-VE		KFS	●	●	●	●
Storia	'00/05 (H12/05) – '00/12 (H12/12)	K3-VE2		EFI	●	●	●	●
Storia	'00/05 (H12/05) – '00/12 (H12/12)	K3-VE2		A/T	●	●	●	●
Storia	'00/05 (H12/05) – '00/12 (H12/12)	K3-VE2		ABS	●	●	●	●
Storia	'00/05 (H12/05) – '00/12 (H12/12)	K3-VE2		DVS	●	●	●	●
Storia	'00/05 (H12/05) – '00/12 (H12/12)	K3-VE2		A/B	●	●	○	○
Storia	'00/05 (H12/05) – '00/12 (H12/12)	K3-VE2		KFS	●	●	○	○
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (T/C)		EFI	●	●	●	●
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (T/C)		CVT	●	●	●	●
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (T/C)		ABS	●	●	●	●
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (T/C)		EPS	●	●	●	○
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (T/C)		A/B	●	●	○	○
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (T/C)		ITC	●	●	●	●
MOVE Conte	'11/06 (H23/06) – '12/04 (H24/04)	KF (T/C)		KFS	●	●	●	●
COO	'10/07 (H22/07) –	K3-VE		EFI	●	●	●	●
COO	'10/07 (H22/07) –	K3-VE		A/T	●	●	●	●
COO	'10/07 (H22/07) –	K3-VE		ABS	●	●	●	●
COO	'10/07 (H22/07) –	K3-VE		VSC	●	●	●	●
COO	'10/07 (H22/07) –	K3-VE		EPS	●	●	●	○
COO	'10/07 (H22/07) –	K3-VE		KFS	●	●	●	●
COO	'10/07 (H22/07) –	K3-VE		A/B	●	●	○	○
Boone	'04/05 (H16/05) – '05/11 (H17/11)	1KR-FE		EFI	●	●	●	●
Boone	'04/05 (H16/05) – '05/11 (H17/11)	1KR-FE		A/T	●	●	●	●
Boone	'04/05 (H16/05) – '05/11 (H17/11)	1KR-FE		ABS	●	●	●	●
Boone	'04/05 (H16/05) – '05/11 (H17/11)	1KR-FE		EPS	●	●	●	○
Boone	'04/05 (H16/05) – '05/11 (H17/11)	1KR-FE		A/B	●	●	○	○
Boone	'04/05 (H16/05) – '05/11 (H17/11)	1KR-FE		KFS	●	●	●	●

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
C00	'06/05 (H18/05) – '10/07 (H22/07)	K3-VE		EFI	●	●	●	●
C00	'06/05 (H18/05) – '10/07 (H22/07)	K3-VE		A/T	●	●	●	●
C00	'06/05 (H18/05) – '10/07 (H22/07)	K3-VE		ABS	●	●	●	●
C00	'06/05 (H18/05) – '10/07 (H22/07)	K3-VE		VSC	●	●	●	●
C00	'06/05 (H18/05) – '10/07 (H22/07)	K3-VE		EPS	●	●	●	○
C00	'06/05 (H18/05) – '10/07 (H22/07)	K3-VE		A/B	●	●	○	○
C00	'06/05 (H18/05) – '10/07 (H22/07)	K3-VE		KFS	●	●	●	●
C00	'06/05 (H18/05) – '10/07 (H22/07)	3SZ-VE		EFI	●	●	●	●
C00	'06/05 (H18/05) – '10/07 (H22/07)	3SZ-VE		A/T	●	●	●	●
C00	'06/05 (H18/05) – '10/07 (H22/07)	3SZ-VE		ABS	●	●	●	●
C00	'06/05 (H18/05) – '10/07 (H22/07)	3SZ-VE		VSC	●	●	●	●
C00	'06/05 (H18/05) – '10/07 (H22/07)	3SZ-VE		EPS	●	●	●	○
C00	'06/05 (H18/05) – '10/07 (H22/07)	3SZ-VE		A/B	●	●	○	○
C00	'06/05 (H18/05) – '10/07 (H22/07)	3SZ-VE		KFS	●	●	●	●
YRV	'00/12 (H12/12) –	K3-VET		EFI	●	●	●	●
YRV	'00/12 (H12/12) –	K3-VET		A/T	●	●	●	●
YRV	'00/12 (H12/12) –	K3-VET		ABS	●	●	●	●
YRV	'00/12 (H12/12) –	K3-VET		DVS	●	●	●	●
YRV	'00/12 (H12/12) –	K3-VET		A/B	●	●	○	○
YRV	'00/12 (H12/12) –	K3-VET		KFS	●	●	●	●
YRV	'00/12 (H12/12) –	K3-VE		EFI	●	●	●	●
YRV	'00/12 (H12/12) –	K3-VE		A/T	●	●	●	●
YRV	'00/12 (H12/12) –	K3-VE		ABS	●	●	●	●
YRV	'00/12 (H12/12) –	K3-VE		DVS	●	●	●	●
YRV	'00/12 (H12/12) –	K3-VE		A/B	●	●	○	○
YRV	'00/12 (H12/12) –	K3-VE		KFS	●	●	●	●
YRV	'00/12 (H12/12) –	EJ-VE		EFI	●	●	●	●
YRV	'00/12 (H12/12) –	EJ-VE		ABS	●	●	●	●
YRV	'00/12 (H12/12) –	EJ-VE		A/B	●	●	○	○
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VET		EFI	●	●	●	●
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VET		A/T	●	●	●	●
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VET		ABS	●	●	●	●
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VET		DVS	●	●	●	●
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VET		A/B	●	●	○	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VET		KFS	●	●	○	○
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VE		EFI	●	●	●	●
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VE		A/T	●	●	●	●
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VE		ABS	●	●	●	●
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VE		DVS	●	●	●	●
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VE		A/B	●	●	○	○
YRV	'00/08 (H12/08) – '00/12 (H12/12)	K3-VE		KFS	●	●	○	○
YRV	'00/08 (H12/08) – '00/12 (H12/12)	EJ-VE		EFI	●	●	●	●
YRV	'00/08 (H12/08) – '00/12 (H12/12)	EJ-VE		ABS	●	●	●	●
YRV	'00/08 (H12/08) – '00/12 (H12/12)	EJ-VE		A/B	●	●	○	○
MOVE Latte	'04/08 (H16/08) – '08/12 (H20/12)	EF-VE		EFI	●	●	●	●
MOVE Latte	'04/08 (H16/08) – '08/12 (H20/12)	EF-VE		ABS	●	●	●	●
MOVE Latte	'04/08 (H16/08) – '08/12 (H20/12)	EF-VE		EPS	●	●	●	○
MOVE Latte	'04/08 (H16/08) – '08/12 (H20/12)	EF-VE		A/B	●	●	○	○
MOVE Latte	'04/08 (H16/08) – '08/12 (H20/12)	EF-VE		KFS	●	●	●	●
MOVE Latte	'04/08 (H16/08) – '08/12 (H20/12)	EF-DET		EFI	●	●	●	●
MOVE Latte	'04/08 (H16/08) – '08/12 (H20/12)	EF-DET		A/T	●	●	●	●
MOVE Latte	'04/08 (H16/08) – '08/12 (H20/12)	EF-DET		ABS	●	●	●	●
MOVE Latte	'04/08 (H16/08) – '08/12 (H20/12)	EF-DET		EPS	●	●	●	○
MOVE Latte	'04/08 (H16/08) – '08/12 (H20/12)	EF-DET		A/B	●	●	○	○
MOVE Conte	'12/05 (H24/05) –	KF (N/A, T/C)		EFI	●	●	●	●
MOVE Conte	'12/05 (H24/05) –	KF (N/A, T/C)		CVT	●	●	●	●
MOVE Conte	'12/05 (H24/05) –	KF (N/A, T/C)		eco IDLE	●	●	●	●
MOVE Conte	'12/05 (H24/05) –	KF (N/A, T/C)		ABS/VSC	●	●	●	●
MOVE Conte	'12/05 (H24/05) –	KF (N/A, T/C)		EPS	●	●	●	○
MOVE Conte	'12/05 (H24/05) –	KF (N/A, T/C)		A/B	●	●	○	○
MOVE Conte	'12/05 (H24/05) –	KF (N/A, T/C)		ITC	●	●	●	●
MOVE Conte	'12/05 (H24/05) –	KF (N/A, T/C)		KFS	●	●	●	●
Storia	'00/05 (H12/05) – '00/12 (H12/12)	EJ-VE		EFI	●	●	●	●
Storia	'00/05 (H12/05) – '00/12 (H12/12)	EJ-VE		ABS	●	●	●	●
Storia	'00/05 (H12/05) – '00/12 (H12/12)	EJ-VE		A/B	●	●	○	○

Vehicle Name	Year	Option1	Option2	System Name	Read TroubleCode	Clear TroubleCode	DataStream	ActiveTest
Storia	'00/05 (H12/05) – '00/12 (H12/12)	EJ-VE		KFS	●	●	○	○