

NOTE:

●: This function is supported

▲: This function is the new feature in this version

○: This function is not supported

※: This function may be supported which depends on the actual condition of the vehicle

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
BERLINGO	ABS	●	○	○	●
BERLINGO	Airbag	●	○	○	○
BERLINGO	Engine ECU(1.1 L HDY/HDZ BOSCH MA3.1)	●	○	○	●
BERLINGO	Engine ECU(1.4 L KFX MMIAP)	●	○	○	●
BERLINGO	Engine ECU(1.8 L LFX MMIAP)	●	○	○	●
BERLINGO (B9)	Gearbox	●	●	●	●
BERLINGO (B9)	ABS81	●	●	●	●
BERLINGO (B9)	AUTORADIO	●	●	●	●
BERLINGO (B9)	Airbag.	●	●	●	●
BERLINGO (B9)	Alarm	●	●	●	●
BERLINGO (B9)	Anti-slip mode selector.	●	○	●	●
BERLINGO (B9)	BECB	●	●	●	●
BERLINGO (B9)	BECB GEN2	●	●	●	●
BERLINGO (B9)	BOITIER NOMADE	●	●	●	●
BERLINGO (B9)	BSI - Bodywork Conversion Unit	●	●	●	●
BERLINGO (B9)	BSI - Built-in Systems Interface.	●	●	●	●
BERLINGO (B9)	BSI - Engine Relay Unit	●	●	●	●
BERLINGO (B9)	BSI - Trailer relay unit.	●	●	●	●
BERLINGO (B9)	CD player.	●	●	●	○
BERLINGO (B9)	CLIM	●	●	●	●
BERLINGO (B9)	CLIM REGULEE	●	●	●	●
BERLINGO (B9)	Central voltage retention device .	●	○	●	○
BERLINGO (B9)	DSG	●	●	●	●
BERLINGO (B9)	DSG UDS	●	●	●	●
BERLINGO (B9)	EDC16C3	●	●	●	●
BERLINGO (B9)	EDC17C10 BR2	●	●	●	●
BERLINGO (B9)	EMF A	●	●	●	●
BERLINGO (B9)	EMF C	●	●	●	●
BERLINGO (B9)	ESP81	●	●	●	●
BERLINGO (B9)	HDI SID807	●	●	●	●
BERLINGO (B9)	HDI SID807 BR2	●	●	●	●
BERLINGO (B9)	High frequency receiver.	●	●	●	●
BERLINGO (B9)	Instrument panel.	●	●	●	●
BERLINGO (B9)	KML	●	●	●	●
BERLINGO (B9)	ME745	●	●	●	●
BERLINGO (B9)	MEV17 4 2	●	●	●	●
BERLINGO (B9)	MEV17 4 EURO5	●	●	●	●
BERLINGO (B9)	PADDGO	●	●	●	●
BERLINGO (B9)	PADDGO E5	●	●	●	●
BERLINGO (B9)	Parking aid.	●	●	●	●
BERLINGO (B9)	Power steering electric pump unit.	●	●	●	●
BERLINGO (B9)	RADIONAV RNEG	●	●	●	●
BERLINGO (B9)	RD45	●	●	●	●
BERLINGO (B9)	RNEG2010	●	●	●	●
BERLINGO (B9)	Rain sensor.	●	●	●	○
BERLINGO (B9)	Service module.	●	●	●	●
BERLINGO (B9)	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
BERLINGO 2	ABS8.1 BOSCH	●	●	●	●
BERLINGO 2	Additional heating	●	●	●	●
BERLINGO 2	Airbag	●	●	●	○
BERLINGO 2	Anti-lock brake system(ABR5.3)	●	○	○	●
BERLINGO 2	Anti-lock brake system(ABS8 BOSCH)	●	●	●	●
BERLINGO 2	Anti-lock brake system(ESP8 BOSCH)	●	●	●	●
BERLINGO 2	Anti-lock brake system(ESP BOSCH5.7)	●	●	●	●
BERLINGO 2	BSI - Alarm	●	○	○	●
BERLINGO 2	BSI - BSI	●	●	●	●
BERLINGO 2	BSI - Rain sensor/ Brightness	●	○	○	●
BERLINGO 2	CD player	●	●	●	●
BERLINGO 2	ESP8.1 BOSCH	●	●	●	●
BERLINGO 2	Engine ECU((N6A/N6B/NFU) BOSCH ME749 Bio Flex)	●	●	●	●
BERLINGO 2	Engine ECU((N6A/N6B/NFU) BOSCH ME749)	●	●	●	●
BERLINGO 2	Engine ECU(2.0L RFN MM48P)	●	●	●	●
BERLINGO 2	Engine ECU(9HX BOSCH EDC16C34 DV6ATED4)	●	●	●	●
BERLINGO 2	Engine ECU(KFV SAGEM S2000PM1)	●	●	●	●
BERLINGO 2	Engine ECU(KFV SAGEM S2000PM2)	●	●	●	●
BERLINGO 2	Engine ECU(N6A BOSCH ME745)	●	●	●	●
BERLINGO 2	Engine ECU(NFR BOSCH ME745)	●	●	●	●
BERLINGO 2	Engine ECU(NFS BOSCH ME745)	●	●	●	●
BERLINGO 2	Engine ECU(NFU BOSCH ME744)	●	●	●	●
BERLINGO 2	Engine ECU(NFU BOSCH ME745)	●	●	●	●
BERLINGO 2	Engine ECU(RHY SIEMENS SID801)	●	●	●	●
BERLINGO 2	Engine ECU(TU3A J34P)	●	●	●	●
BERLINGO 2	Engine ECU(WJY DCN2)	●	●	●	●
BERLINGO 2	Gas injection(SAX500 GNV)	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
BERLINGO 2	Gas injection(SAX500 GPL)	●	●	●	●
BERLINGO 2	Instrument panel	●	●	●	●
BERLINGO 2	Multifunction display SAGEM A	●	●	●	●
BERLINGO 2	Multifunction display SAGEM B	●	●	●	●
BERLINGO 2	Parking assistance	●	●	●	●
BERLINGO 2	Radio post-equipment	●	●	●	●
BERLINGO 2	Radio post-equipment RDE Wire	●	●	●	●
BERLINGO 2	Stolen vehicle location control unit	●	●	●	●
BERLINGO 2	Switch module at the steering wheel(Top of column)	●	○	○	●
BERLINGO 2	Telematics unit	●	●	●	●
BERLINGO Electric (B9e)	air conditioning compressor	●	●	●	●
BERLINGO Electric (B9e)	ABS81	●	●	●	●
BERLINGO Electric (B9e)	AUTORADIO	●	●	●	●
BERLINGO Electric (B9e)	Airbag.	●	●	●	●
BERLINGO Electric (B9e)	Alarm	●	●	●	●
BERLINGO Electric (B9e)	BSI - Built-in Systems Interface.	●	●	●	●
BERLINGO Electric (B9e)	BSI - Engine Relay Unit	●	●	●	●
BERLINGO Electric (B9e)	Battery charge status unit generation 2.	●	●	●	●
BERLINGO Electric (B9e)	CLIM	●	●	●	●
BERLINGO Electric (B9e)	CLIM REGULEE	●	●	●	●
BERLINGO Electric (B9e)	Drive train interface ECU.	●	●	●	●
BERLINGO Electric (B9e)	EMF A	●	●	●	●
BERLINGO Electric (B9e)	EMF C	●	●	●	●
BERLINGO Electric (B9e)	ESP81	●	●	●	●
BERLINGO Electric (B9e)	Electric machine management ECU.	●	●	●	●
BERLINGO Electric (B9e)	Electric vehicle management ECU	●	●	●	●
BERLINGO Electric (B9e)	Instrument panel	●	●	●	●
BERLINGO Electric (B9e)	Onboard charger of the traction battery.	●	●	●	●
BERLINGO Electric (B9e)	Parking aid.	●	●	●	●
BERLINGO Electric (B9e)	Passenger compartment air heating resistor	●	●	●	●
BERLINGO Electric (B9e)	Power steering electric pump unit.	●	●	●	●
BERLINGO Electric (B9e)	RADIONAV RNEG	●	●	●	●
BERLINGO Electric (B9e)	RD45	●	●	●	●
BERLINGO Electric (B9e)	RNEG2010	●	●	●	●
BERLINGO Electric (B9e)	Rain sensor.	●	●	●	○
BERLINGO Electric (B9e)	Service module.	●	●	●	●
BERLINGO Electric (B9e)	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
BERLINGO Electric (B9e)	Traction battery ECU.	●	●	●	●
BERLINGO Electric (B9e)	Traction battery cell electronics.01	●	○	●	●
BERLINGO Electric (B9e)	Traction battery cell electronics.02	●	○	●	●
BERLINGO Electric (B9e)	Traction battery cell electronics.03	●	○	●	●
BERLINGO Electric (B9e)	Traction battery cell electronics.04	●	○	●	●
BERLINGO Electric (B9e)	Traction battery cell electronics.05	●	○	●	●
BERLINGO Electric (B9e)	Traction battery cell electronics.06	●	○	●	●
BERLINGO Electric (B9e)	Traction battery cell electronics.07	●	○	●	●
BERLINGO Electric (B9e)	Traction battery cell electronics.08	●	○	●	●
BERLINGO Electric (B9e)	Traction battery cell electronics.09	●	○	●	●
BERLINGO Electric (B9e)	Traction battery cell electronics.10	●	○	●	●
C-CROSSER	heating/ventilation	●	●	●	●
C-CROSSER	ABS	●	●	●	●
C-CROSSER	BOITE GETRAG	●	●	●	●
C-CROSSER	BV CVT	●	●	●	●
C-CROSSER	Built-in Systems Interface.	●	●	●	●
C-CROSSER	Driver and passenger airbags.	●	●	●	●
C-CROSSER	Driver door module .	●	●	●	●
C-CROSSER	EDC16CP39	●	●	●	●
C-CROSSER	EDC16CP39 E5	●	●	●	●
C-CROSSER	ESP	●	●	●	●
C-CROSSER	Hands-free kit (telephone).	●	●	●	●
C-CROSSER	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
C-CROSSER	Instrument panel.	●	●	●	●
C-CROSSER	Left rear door switch panel.	●	●	●	●
C-CROSSER	Locking and immobilizer control module.	●	●	●	●
C-CROSSER	MIVEC	●	●	●	●
C-CROSSER	Navigation	●	●	●	○
C-CROSSER	Parking aid.	●	●	●	●
C-CROSSER	Passenger door module .	●	●	●	●
C-CROSSER	Radio or radiotelephone (radio part).	●	●	●	●
C-CROSSER	Rain and Brightness Sensor	●	●	●	●
C-CROSSER	Rear final drive piloted clutch.	●	●	●	●
C-CROSSER	Right rear door switch panel.	●	●	●	●
C-CROSSER	Shift lever.	●	●	●	●
C-CROSSER	Steering wheel angle sensor.	●	●	●	○
C-CROSSER	Sunroof.	●	●	●	●
C-ELYSEE	ABSMK100	●	●	●	●
C-ELYSEE	Airbag.	●	●	●	●
C-ELYSEE	BSI2010 - Built-in Systems Interface.	●	●	●	●
C-ELYSEE	BVA AL4	●	●	●	●
C-ELYSEE	DAE A515	●	●	●	●
C-ELYSEE	EDC17C10 BR2	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C-ELYSEE	EMF A UDS	●	●	●	●
C-ELYSEE	EMF C UDS	●	●	●	●
C-ELYSEE	ESPMK100	●	●	●	●
C-ELYSEE	Instrument panel.	●	●	●	●
C-ELYSEE	MAPS UDS	●	●	●	●
C-ELYSEE	ME745 EC5	●	●	●	●
C-ELYSEE	Multiplexed additive pump.	●	●	●	●
C-ELYSEE	Parking Assistance	●	●	●	●
C-ELYSEE	RD45	●	●	●	●
C-ELYSEE	RDE	●	●	●	●
C-ELYSEE	Siren	●	●	●	●
C-ELYSEE	Switch Module at the Steering Wheel	●	●	●	●
C-ELYSEE	Trailer relay unit.	●	●	●	●
C-ELYSEE	V46	●	●	●	●
C-ELYSEE	V46 21	●	●	●	●
C-ELYSEE 4	ABS	●	●	●	●
C-ELYSEE 4	Airbag	●	●	●	●
C-ELYSEE 4	Central locking control unit	●	●	●	●
C-ELYSEE 4	Engine ECU(1.6 L NFU BOSCH ME744)	●	●	●	●
C-ELYSEE 4	Engine ECU(NFU J35)	●	●	●	●
C-ELYSEE 4	Gearbox ECU	●	●	●	●
C-ELYSEE 4	Transponder	●	○	○	●
C-ELYSEE 5	ABS	●	●	●	●
C-ELYSEE 5	Airbag	●	●	●	●
C-ELYSEE 5	Central locking control unit	●	●	●	●
C-ELYSEE 5	Engine ECU(1.6 L NFU BOSCH ME744)	●	●	●	●
C-ELYSEE 5	Engine ECU(NFU J35)	●	●	●	●
C-ELYSEE 5	Gearbox ECU	●	●	●	●
C-ELYSEE 5	Transponder	●	○	○	●
C-QUATRE 4	ABS8.1 BOSCH	●	●	●	●
C-QUATRE 4	Air conditioning	●	●	●	●
C-QUATRE 4	Airbag	●	●	●	●
C-QUATRE 4	Alarm	●	●	●	●
C-QUATRE 4	BSI - BSI	●	●	●	●
C-QUATRE 4	BSI - Engine relay unit	●	●	●	●
C-QUATRE 4	BSI - Trailer relay unit	●	●	●	●
C-QUATRE 4	CD player	●	●	●	●
C-QUATRE 4	Driver's door module	●	●	●	●
C-QUATRE 4	ESP8.1 BOSCH	●	●	●	●
C-QUATRE 4	Engine ECU(MM6KP Bio Flex)	●	●	●	●
C-QUATRE 4	Engine ECU(MM6KP Non Bio Flex)	●	●	●	●
C-QUATRE 4	Engine ECU(N6A BOSCH ME745)	●	●	●	●
C-QUATRE 4	Engine ECU(RFJ MM6LPB)	●	●	●	●
C-QUATRE 4	Gearbox ECU	●	●	●	●
C-QUATRE 4	Hands Free Kit	●	●	●	●
C-QUATRE 4	Instrument panel	●	●	●	●
C-QUATRE 4	Multifunction screen	●	●	●	●
C-QUATRE 4	Parking assistance	●	●	●	●
C-QUATRE 4	Passenger's door module	●	●	●	●
C-QUATRE 4	Power steering	●	●	●	●
C-QUATRE 4	Radio	●	●	●	●
C-QUATRE 4	Steering wheel with fixed central controls	●	●	●	●
C-QUATRE 4	Telematic(RT3)	●	●	●	●
C-QUATRE 4	Telematic(RT4)	●	●	●	●
C-QUATRE 5	ABS8.1 BOSCH	●	●	●	●
C-QUATRE 5	Air conditioning	●	●	●	●
C-QUATRE 5	Airbag	●	●	●	●
C-QUATRE 5	Alarm	●	●	●	●
C-QUATRE 5	BSI - BSI	●	●	●	●
C-QUATRE 5	BSI - Engine relay unit	●	●	●	●
C-QUATRE 5	BSI - Trailer relay unit	●	●	●	●
C-QUATRE 5	CD player	●	●	●	●
C-QUATRE 5	Driver's door module	●	●	●	●
C-QUATRE 5	ESP8.1 BOSCH	●	●	●	●
C-QUATRE 5	Engine ECU(N6A BOSCH ME745)	●	●	●	●
C-QUATRE 5	Engine ECU(RFJ MM6LPB)	●	●	●	●
C-QUATRE 5	Gearbox ECU	●	●	●	●
C-QUATRE 5	Hands Free Kit	●	●	●	●
C-QUATRE 5	Instrument panel	●	●	●	●
C-QUATRE 5	Multifunction screen	●	●	●	●
C-QUATRE 5	Parking assistance	●	●	●	●
C-QUATRE 5	Passenger's door module	●	●	●	●
C-QUATRE 5	Power steering	●	●	●	●
C-QUATRE 5	Radio	●	●	●	●
C-QUATRE 5	Rain sensor/ Brightness	●	●	●	○
C-QUATRE 5	Steering wheel with fixed central controls	●	●	●	●
C-QUATRE 5	Telematic(RT3)	●	●	●	●
C-QUATRE 5	Telematic(RT4)	●	●	●	●
C-TRIOMPHE	ABS8.1 BOSCH	●	●	●	●
C-TRIOMPHE	Air conditioning	●	●	●	●
C-TRIOMPHE	Airbag	●	●	●	●
C-TRIOMPHE	Alarm	●	●	●	●
C-TRIOMPHE	Anti-lock brake system(ABS8 BOSCH)	●	●	●	●
C-TRIOMPHE	Anti-lock brake system(ESP8 BOSCH)	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C-TRIOMPHE	BSI - BSI	●	●	●	●
C-TRIOMPHE	BSI - Engine relay unit	●	●	●	●
C-TRIOMPHE	BSI - Trailer relay unit	●	●	●	●
C-TRIOMPHE	CD player	●	●	●	●
C-TRIOMPHE	Directional headlamps	●	●	●	●
C-TRIOMPHE	Driver's door module	●	●	●	●
C-TRIOMPHE	ESP8.1 BOSCH	●	●	●	●
C-TRIOMPHE	Engine ECU(RFJ MM6LPB)	●	●	●	●
C-TRIOMPHE	Gearbox ECU	●	●	●	●
C-TRIOMPHE	Hands Free Kit	●	●	●	●
C-TRIOMPHE	Instrument panel	●	●	●	●
C-TRIOMPHE	Multifunction screen	●	●	●	●
C-TRIOMPHE	Parking assistance	●	●	●	●
C-TRIOMPHE	Passenger's door module	●	●	●	●
C-TRIOMPHE	Power steering	●	●	●	●
C-TRIOMPHE	Radio	●	●	●	●
C-TRIOMPHE	Rain sensor/ Brightness	●	●	●	○
C-TRIOMPHE	Steering wheel with fixed central controls	●	●	●	●
C-TRIOMPHE	Telematic(RT3)	●	●	●	●
C-TRIOMPHE	Telematic(RT4)	●	●	●	●
C-ZERO	A/C compressor and passenger compartment heating control module.	●	●	●	●
C-ZERO	Built-in Systems Interface.	●	●	●	●
C-ZERO	Electric machine management ECU.	●	●	●	●
C-ZERO	Electric vehicle management ECU	●	●	●	●
C-ZERO	Electronic Stability Program.	●	●	●	●
C-ZERO	Gateway wiring housing .	●	●	●	●
C-ZERO	HVAC	●	●	●	●
C-ZERO	Independent telematic unit (BTA).	●	●	●	●
C-ZERO	Instrument panel	●	●	●	●
C-ZERO	ORC	●	●	●	●
C-ZERO	Onboard charger of the traction battery.	●	●	●	●
C-ZERO	Power steering.	●	●	●	●
C-ZERO	Radio.	●	●	●	●
C-ZERO	SRS	●	●	●	●
C-ZERO	Steering wheel angle sensor.	●	●	●	●
C-ZERO	Traction battery ECU.	●	●	●	●
C-ZERO	Traction battery cells management ECU.01	●	○	●	●
C-ZERO	Traction battery cells management ECU.02	●	○	●	●
C-ZERO	Traction battery cells management ECU.03	●	○	●	●
C-ZERO	Traction battery cells management ECU.04	●	○	●	●
C-ZERO	Traction battery cells management ECU.05	●	○	●	●
C-ZERO	Traction battery cells management ECU.06	●	○	●	●
C-ZERO	Traction battery cells management ECU.07	●	○	●	●
C-ZERO	Traction battery cells management ECU.08	●	○	●	●
C-ZERO	Traction battery cells management ECU.09	●	○	●	●
C-ZERO	Traction battery cells management ECU.10	●	○	●	●
C-ZERO	Traction battery cells management ECU.11	●	○	●	●
C-ZERO	Traction battery cells management ECU.12	●	○	●	●
C1 (B0)	ABS90 T	○	●	●	●
C1 (B0)	ABS 8 0 C1	○	●	●	●
C1 (B0)	Airbag.	●	●	●	●
C1 (B0)	Coded anti-start.	○	●	●	●
C1 (B0)	ESP 8 0 C1	○	●	●	●
C1 (B0)	Gearbox	○	●	●	●
C1 (B0)	HDI SID805	●	●	●	●
C1 (B0)	ME795	○	●	●	●
C1 (B0)	Power steering.	●	●	●	●
C1 (B0)	Radio.	●	●	●	●
C1 (B4)	A/C ECU.	●	●	●	●
C1 (B4)	ABS/ESP.	●	●	●	●
C1 (B4)	Airbags and pre-tensioners control unit.	●	●	●	●
C1 (B4)	Coded Anti-start/Hands-free Starting Access Electronic Module	○	●	●	●
C1 (B4)	Engine Management (Motor 1KR)	●	●	●	●
C1 (B4)	Gearbox	●	●	●	●
C1 (B4)	Hands-free Unit (Entry and Start): ACCs and Start up	●	●	●	●
C1 (B4)	Hands-free Unit (Entry and Start): Start-up Monitoring	○	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C1 (B4)	Hands-free Unit (Entry and Start): Starting Authorisation	○	●	●	●
C1 (B4)	Instrument panel.	●	●	●	●
C1 (B4)	Multi-function screen.	○	●	●	●
C1 (B4)	Power steering.	●	●	●	●
C1 (B4)	Start and Stop control ECU.	●	●	●	●
C1 (B4)	V46	●	●	●	●
C2	ABS	●	●	●	●
C2	Air conditioning	●	●	●	●
C2	Airbag	●	●	●	●
C2	Anti-lock brake system(ESP)	●	●	●	●
C2	BSI - Alarm	●	○	○	○
C2	BSI - BSI	●	○	○	●
C2	BSI - Rain sensor/ Brightness	●	○	○	○
C2	BSI - Switch module at the steering wheel(Top of column)	●	○	○	●
C2	CD player	●	●	●	●
C2	Controlled manual gearbox ECU	●	●	●	●
C2	Electric power steering ECU	●	●	●	●
C2	Engine ECU(8HX BOSCH EDC16C34 DV4TD)	●	●	●	●
C2	Engine ECU(8HX SIEMENS SID802)	●	●	●	●
C2	Engine ECU(8HX SIEMENS SID804)	●	●	●	●
C2	Engine ECU(8HZ BOSCH EDC16C34 DV4TD)	●	●	●	●
C2	Engine ECU(8HZ SIEMENS SID804)	●	●	●	●
C2	Engine ECU(HFX MM48P)	●	●	●	●
C2	Engine ECU(KFV SAGEM S2000PM1)	●	●	●	●
C2	Engine ECU(KFV SAGEM S2000PM2)	●	●	●	●
C2	Engine ECU(NFS BOSCH ME744)	●	●	●	●
C2	Engine ECU(NFU BOSCH ME744)	●	●	●	●
C2	Instrument panel	●	●	●	●
C2	Multifunction display SAGEM A	●	●	●	●
C2	Multifunction display SIEMENS B	●	●	●	●
C2	Multifunction display SIEMENS C	●	●	●	●
C2	Navigation	●	●	●	●
C2	Parking assistance	●	●	●	●
C2	Radio	●	●	●	●
C2	Telematics unit	●	●	●	●
C2 CHINE	ABS	●	●	●	●
C2 CHINE	Air conditioning	●	●	●	●
C2 CHINE	Airbag	●	●	●	○
C2 CHINE	Auto gearbox AL4 TA2000	●	●	●	●
C2 CHINE	BSI - BSI	●	●	●	●
C2 CHINE	BSI - Switch module at the steering wheel(Top of column)	●	○	○	●
C2 CHINE	Engine ECU(1.6 L NFU BOSCH ME745)	●	●	●	●
C2 CHINE	Engine ECU(J34P)	●	●	●	●
C2 CHINE	Instrument panel	●	●	●	●
C3	ABS MK60	●	●	●	●
C3	ABS MK70	●	●	●	●
C3	Air conditioning	●	●	●	●
C3	Airbag	●	●	●	●
C3	Anti-lock brake system(ESP)	●	●	●	●
C3	Auto gearbox AL4	●	●	●	●
C3	BSI - Alarm	●	○	○	●
C3	BSI - BSI	●	●	●	●
C3	BSI - Rain sensor/ Brightness	●	○	○	●
C3	BSI - Switch module at the steering wheel(Top of column)	●	○	○	●
C3	CD player	●	●	●	●
C3	Controlled manual gearbox ECU	●	●	●	●
C3	Diesel additive function	●	●	●	●
C3	Driving school mode	●	○	○	●
C3	ECU Reversible 'Stop-Start' alternator	●	●	●	●
C3	Electric power steering ECU	●	●	●	●
C3	Engine ECU(8HX BOSCH EDC16C34 DV4TD)	●	●	●	●
C3	Engine ECU(8HX SIEMENS SID802)	●	●	●	●
C3	Engine ECU(8HX SIEMENS SID804)	●	●	●	●
C3	Engine ECU(8HY DELPHI C6)	●	●	●	●
C3	Engine ECU(8HZ BOSCH EDC16C34 DV4TD)	●	●	●	●
C3	Engine ECU(8HZ SIEMENS SID804)	●	●	●	●
C3	Engine ECU(8HZ SIEMENS SID806)	●	●	●	●
C3	Engine ECU(9HX BOSCH EDC16C34 DV6ATED4)	●	●	●	●
C3	Engine ECU(9HZ (FAP) BOSCH EDC16C34 DV6TED4)	●	●	●	●
C3	Engine ECU(HFX MM48P)	●	●	●	●
C3	Engine ECU(KFU MM6LP)	●	●	●	●
C3	Engine ECU(KFV BOSCH ME744)	●	●	●	●
C3	Engine ECU(KFV BOSCH ME749)	●	●	●	●
C3	Engine ECU(KFV SAGEM S2000PM1)	●	●	●	●
C3	Engine ECU(KFV SAGEM S2000PM2)	●	●	●	●
C3	Engine ECU(N6A BOSCH ME744)	●	●	●	●
C3	Engine ECU(N6A BOSCH ME749)	●	●	●	●
C3	Engine ECU(NFR BOSCH ME749)	●	●	●	●
C3	Engine ECU(NFS BOSCH ME749)	●	●	●	●
C3	Engine ECU(NFU BOSCH ME744)	●	●	●	●
C3	Engine ECU(NFU BOSCH ME749)	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C3	Gas injection(SAX500 GNV)	●	●	●	●
C3	Gas injection(SAX500 GPL)	●	●	●	●
C3	Instrument panel	●	●	●	●
C3	Multifunction display SAGEM A	●	●	●	●
C3	Multifunction display SIEMENS B	●	●	●	●
C3	Multifunction display SIEMENS C	●	●	●	●
C3	Navigation	●	●	●	●
C3	Parking assistance	●	●	●	●
C3	Radio post-equipment	●	●	●	●
C3	Radio post-equipment RDE Wire	●	●	●	●
C3	Telematic (RASTREADOR)	●	●	●	●
C3	Telematics unit	●	●	●	●
C3 A51	A/C ECU.	●	●	●	●
C3 A51	ABSMK100	●	●	●	●
C3 A51	ABSMK70 1	●	●	●	●
C3 A51	AUTORADIO	●	●	●	●
C3 A51	Airbag.	●	●	●	●
C3 A51	Alarm	●	●	●	●
C3 A51	BECB	●	●	●	●
C3 A51	BECB GEN2	●	●	●	●
C3 A51	BSI - Built-in Systems Interface.	●	●	●	●
C3 A51	BSI - Engine Relay Unit	●	●	●	●
C3 A51	BSI - Trailer relay unit.	●	●	●	●
C3 A51	BVA AL4	●	●	●	●
C3 A51	BVMP	●	●	●	●
C3 A51	CFC300P	●	●	●	●
C3 A51	DMTC	●	○	●	○
C3 A51	DMTR	●	●	●	○
C3 A51	Driver door module .	●	●	●	●
C3 A51	Driving school module.	●	●	●	○
C3 A51	EDC16C3	●	●	●	●
C3 A51	EDC16C3DV4	●	●	●	●
C3 A51	EDC17C10	●	●	●	●
C3 A51	EDC17C10 BR2	●	●	●	●
C3 A51	EDC17C60	●	●	●	●
C3 A51	EMF A	●	●	●	●
C3 A51	EMF C	●	●	●	●
C3 A51	ESPMK100	●	●	●	●
C3 A51	ESPMK60 0	●	●	●	●
C3 A51	HDI SID807	●	●	●	●
C3 A51	HDI SID807 BR2	●	●	●	●
C3 A51	Hands-free kit (telephone).	●	●	●	●
C3 A51	High frequency receiver.	●	●	●	●
C3 A51	Instrument panel.	●	●	●	●
C3 A51	J34P	●	●	●	○
C3 A51	MAPS UDS	●	●	●	●
C3 A51	MEV17 4 2	●	●	●	●
C3 A51	MEV17 4 EURO5	●	●	●	●
C3 A51	Multiplexed additive pump.	●	●	●	●
C3 A51	Parking aid.	●	●	●	●
C3 A51	Power steering.	●	●	●	●
C3 A51	RADIONAV RNEG	●	●	●	●
C3 A51	RD45	●	●	●	●
C3 A51	RNEG2010	●	●	●	●
C3 A51	Rain sensor.	●	●	●	○
C3 A51	Seat belts not fastened LED unit.	●	○	●	○
C3 A51	Service module.	●	●	●	●
C3 A51	Switch Module at the Steering Wheel	●	●	●	●
C3 A51	V341	●	●	●	●
C3 A51	V46	●	●	●	●
C3 A51	VD46	●	●	●	●
C3 Ai51	ABSMK70 1	●	●	●	●
C3 Ai51	Air Conditioning	●	●	●	●
C3 Ai51	Anti-theft alarm.	●	●	●	●
C3 Ai51	BSI - Built-in Systems Interface.	●	●	●	●
C3 Ai51	BSI - Trailer relay unit.	●	●	●	●
C3 Ai51	Driver and passenger airbags.	●	●	●	●
C3 Ai51	ESPMK60 0	●	●	●	●
C3 Ai51	Electric power steering.	●	●	●	●
C3 Ai51	Gearbox.	●	●	●	●
C3 Ai51	Instrument panel.	●	●	●	●
C3 Ai51	ME749	●	●	●	●
C3 Ai51	ME749 EC5	●	●	●	●
C3 Ai51	Parking aid.	●	●	●	●
C3 Ai51	Radio.	●	●	●	●
C3 Ai51	Rain and brightness sensor (CDPL).	●	●	●	○
C3 Ai51	Services module.	●	●	●	●
C3 Ai51	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
C3 Ai51	Telematics.	●	●	●	●
C3 Ai51	V344	●	●	●	●
C3 Ai51	V345	●	●	●	●
C3 Aircross (Ai58)	ABSMK70 1	●	●	●	●
C3 Aircross (Ai58)	Air Conditioning	●	●	●	●
C3 Aircross (Ai58)	Anti-theft alarm.	●	●	●	●
C3 Aircross (Ai58)	BSI - Built-in Systems Interface.	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C3 Aircross (Ai58)	BSI - Trailer relay unit.	●	●	●	●
C3 Aircross (Ai58)	Driver and passenger airbags.	●	●	●	●
C3 Aircross (Ai58)	ESPMK60 0	●	●	●	●
C3 Aircross (Ai58)	Electric power steering.	●	●	●	●
C3 Aircross (Ai58)	Gearbox.	●	●	●	●
C3 Aircross (Ai58)	Instrument panel.	●	●	●	●
C3 Aircross (Ai58)	ME749	●	●	●	●
C3 Aircross (Ai58)	ME749 EC5	●	●	●	●
C3 Aircross (Ai58)	Parking aid.	●	●	●	●
C3 Aircross (Ai58)	Radio.	●	●	●	●
C3 Aircross (Ai58)	Rain and brightness sensor (CDPL).	●	●	●	○
C3 Aircross (Ai58)	Services module.	●	●	●	●
C3 Aircross (Ai58)	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
C3 Aircross (Ai58)	Telematics.	●	●	●	●
C3 Aircross (Ai58)	V344	●	●	●	●
C3 Aircross (Ai58)	V345	●	●	●	●
C3 PICASSO (A58)	A/C ECU.	●	●	●	●
C3 PICASSO (A58)	ABSMK100	●	●	●	●
C3 PICASSO (A58)	ABSMK70 1	●	●	●	●
C3 PICASSO (A58)	AUTORADIO	●	●	●	●
C3 PICASSO (A58)	Airbag.	●	●	●	●
C3 PICASSO (A58)	Alarm	●	●	●	●
C3 PICASSO (A58)	BECB	●	●	●	●
C3 PICASSO (A58)	BECB GEN2	●	●	●	●
C3 PICASSO (A58)	BSI - Built-in Systems Interface.	●	●	●	●
C3 PICASSO (A58)	BSI - Engine Relay Unit	●	●	●	●
C3 PICASSO (A58)	BSI - Trailer relay unit.	●	●	●	●
C3 PICASSO (A58)	Central voltage retention device .	●	○	●	○
C3 PICASSO (A58)	Driver door module .	●	●	●	●
C3 PICASSO (A58)	EDC16C3	●	●	●	●
C3 PICASSO (A58)	EDC17C10	●	●	●	●
C3 PICASSO (A58)	EDC17C10 BR2	●	●	●	●
C3 PICASSO (A58)	EMF A	●	●	●	●
C3 PICASSO (A58)	EMF C	●	●	●	●
C3 PICASSO (A58)	ESPMK100	●	●	●	●
C3 PICASSO (A58)	ESPMK60 0	●	●	●	●
C3 PICASSO (A58)	Electric power steering.	●	●	●	●
C3 PICASSO (A58)	Gearbox.	●	●	●	●
C3 PICASSO (A58)	HDI SID807	●	●	●	●
C3 PICASSO (A58)	HDI SID807 BR2	●	●	●	●
C3 PICASSO (A58)	Hands-free kit (telephone).	●	●	●	●
C3 PICASSO (A58)	High frequency receiver.	●	●	●	●
C3 PICASSO (A58)	Instrument panel.	●	●	●	●
C3 PICASSO (A58)	MED17 4 EURO4	●	●	●	●
C3 PICASSO (A58)	MEV17 4 2	●	●	●	●
C3 PICASSO (A58)	MEV17 4 EURO4	●	●	●	●
C3 PICASSO (A58)	MEV17 4 EURO5	●	●	●	●
C3 PICASSO (A58)	Multiplexed additive pump.	●	●	●	●
C3 PICASSO (A58)	Parking aid.	●	●	●	●
C3 PICASSO (A58)	RADIONAV RNEG	●	●	●	●
C3 PICASSO (A58)	RD45	●	●	●	●
C3 PICASSO (A58)	RNEG2010	●	●	●	●
C3 PICASSO (A58)	Rain sensor.	●	●	●	○
C3 PICASSO (A58)	Seat belts not fastened LED unit.	●	○	●	○
C3 PICASSO (A58)	Service module.	●	●	●	●
C3 PICASSO (A58)	Switch Module at the Steering Wheel	●	●	●	●
C3 PICASSO (A58)	VD46	●	●	●	●
C3 PICASSO (Ai58)	ABSMK70 1	●	●	●	●
C3 PICASSO (Ai58)	Air Conditioning	●	●	●	●
C3 PICASSO (Ai58)	Anti-theft alarm.	●	●	●	●
C3 PICASSO (Ai58)	BSI - Built-in Systems Interface.	●	●	●	●
C3 PICASSO (Ai58)	BSI - Trailer relay unit.	●	●	●	●
C3 PICASSO (Ai58)	Driver and passenger airbags.	●	●	●	●
C3 PICASSO (Ai58)	ESPMK60 0	●	●	●	●
C3 PICASSO (Ai58)	Electric power steering.	●	●	●	●
C3 PICASSO (Ai58)	Gearbox.	●	●	●	●
C3 PICASSO (Ai58)	Instrument panel.	●	●	●	●
C3 PICASSO (Ai58)	ME749	●	●	●	●
C3 PICASSO (Ai58)	ME749 EC5	●	●	●	●
C3 PICASSO (Ai58)	Parking aid.	●	●	●	●
C3 PICASSO (Ai58)	Radio.	●	●	●	●
C3 PICASSO (Ai58)	Rain and brightness sensor (CDPL).	●	●	●	○
C3 PICASSO (Ai58)	Services module.	●	●	●	●
C3 PICASSO (Ai58)	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
C3 PICASSO (Ai58)	Telematics.	●	●	●	●
C3 PICASSO (Ai58)	V344	●	●	●	●
C3 PICASSO (Ai58)	V345	●	●	●	●
C3 PLURIEL	ABS	●	●	●	●
C3 PLURIEL	Air conditioning	●	●	●	●
C3 PLURIEL	Airbag	●	●	●	●
C3 PLURIEL	Anti-lock brake system(ESP)	●	●	●	●
C3 PLURIEL	BSI - Alarm	●	○	○	●
C3 PLURIEL	BSI - BSI	●	●	●	●
C3 PLURIEL	BSI - Rain sensor/ Brightness	●	○	○	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C3 PLURIEL	BSI - Switch module under the steering wheel	●	○	○	●
C3 PLURIEL	CD player	●	●	●	●
C3 PLURIEL	Driving school mode	●	○	○	●
C3 PLURIEL	Electric power steering ECU	●	●	●	●
C3 PLURIEL	Engine ECU(8HX SIEMENS SID802)	●	●	●	●
C3 PLURIEL	Engine ECU(8HX SIEMENS SID804)	●	●	●	●
C3 PLURIEL	Engine ECU(8HZ BOSCH EDC16C34 DV4TD)	●	●	●	●
C3 PLURIEL	Engine ECU(8HZ SIEMENS SID804)	●	●	●	●
C3 PLURIEL	Engine ECU(KFV SAGEM S2000PM1)	●	●	●	●
C3 PLURIEL	Engine ECU(KFV SAGEM S2000PM2)	●	●	●	●
C3 PLURIEL	Engine ECU(NFU BOSCH ME744)	●	●	●	●
C3 PLURIEL	Gearbox ECU	●	●	●	●
C3 PLURIEL	Instrument panel	●	●	●	●
C3 PLURIEL	Multifunction display SAGEM A	●	●	●	●
C3 PLURIEL	Multifunction display SIEMENS B	●	●	●	●
C3 PLURIEL	Multifunction display SIEMENS C	●	●	●	●
C3 PLURIEL	Navigation	●	●	●	●
C3 PLURIEL	Parking assistance	●	●	●	●
C3 PLURIEL	Radio post-equipment	●	●	●	●
C3 PLURIEL	Sun roof	●	●	●	●
C3 PLURIEL	Telematics unit	●	●	●	●
C3 R	ABS MK70	●	●	●	●
C3 R	ABS MK70.1	●	●	●	●
C3 R	Air conditioning	●	●	●	●
C3 R	Airbag	●	●	●	●
C3 R	Alarm	●	●	●	●
C3 R	Auto gearbox AL4	●	●	●	●
C3 R	BSI - BSI	●	●	●	●
C3 R	BSI - Engine relay unit	●	●	●	●
C3 R	BSI - Trailer relay unit	●	●	●	●
C3 R	CD player	●	●	●	●
C3 R	Controlled manual gearbox ECU	●	●	●	●
C3 R	Driving school mode	●	○	○	○
C3 R	ECU Reversible 'Stop-Start' alternator	●	●	●	●
C3 R	ESP MK60	●	●	●	●
C3 R	ESP MK60-0	●	●	●	●
C3 R	Electric power steering ECU	●	●	●	●
C3 R	Engine ECU(8HZ BOSCH EDC16C34 DV4TD)	●	●	●	●
C3 R	Engine ECU(8HZ SIEMENS SID806)	●	●	●	●
C3 R	Engine ECU(9HX BOSCH EDC16C34 DV6ATED4)	●	●	●	●
C3 R	Engine ECU(9HZ (FAP) BOSCH EDC16C34 DV6TED4)	●	●	●	●
C3 R	Engine ECU(KFU MM6LPC)	●	●	●	●
C3 R	Engine ECU(KFV SAGEM S2000PM2)	●	●	●	●
C3 R	Engine ECU(N6A BOSCH ME745)	●	●	●	●
C3 R	Engine ECU(NFR BOSCH ME745)	●	●	●	●
C3 R	Engine ECU(NFS BOSCH ME745)	●	●	●	●
C3 R	Engine ECU(NFU BOSCH ME745)	●	●	●	●
C3 R	Engine ECU(TU1A J34P)	●	●	●	●
C3 R	Engine ECU(TU3A J34P)	●	●	●	●
C3 R	Gas injection(SAX500 GNV)	●	●	●	●
C3 R	Gas injection(SAX500 GPL)	●	●	●	●
C3 R	Hands Free Kit	●	●	●	●
C3 R	High frequency receiver	●	●	●	●
C3 R	Instrument panel	●	●	●	●
C3 R	Mobile Housing	●	●	●	●
C3 R	Multifunction screen A	●	●	●	●
C3 R	Multifunction screen C	●	●	●	●
C3 R	Multiplexed diesel additive pump	●	●	●	●
C3 R	Parking assistance	●	●	●	●
C3 R	Radio	●	●	●	●
C3 R	Rain sensor/ Brightness	●	●	●	○
C3 R	Switch module at the steering wheel(Top of column)	●	●	●	●
C3 R	Telematic(RT3)	●	●	●	●
C3 R	Telematic(RT4)	●	●	●	●
C3 R	Telematic(RT5)	●	●	●	●
C4	audio amplifier.	●	●	●	○
C4	heating/ventilation	●	●	●	●
C4	A/T electric control.	●	●	●	●
C4	ABS81	●	●	●	●
C4	ABS8 BOSCH	●	●	●	●
C4	ADDGO3	●	●	●	●
C4	AUTORADIO	●	●	●	●
C4	Anti-theft alarm.	●	●	●	●
C4	BECB	●	●	●	●
C4	BECB GEN2	●	●	●	●
C4	BLVV	●	●	●	●
C4	BOITIER NOMADE	●	●	●	●
C4	BOITIER TELEMATIQUE	●	●	●	●
C4	BSI - Built-in Systems Interface.	●	●	●	●
C4	BSI - Engine Relay Unit	●	●	●	●
C4	BSI - Trailer relay unit.	●	●	●	●
C4	BTA	●	●	●	●
C4	BVA AL4	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C4	BVA AM6	●	●	●	●
C4	BVA AM6 AT6 EURO5	●	●	●	●
C4	CD player.	●	●	●	○
C4	CFC300P	●	●	●	●
C4	DCM34	●	●	●	●
C4	DCM35	●	●	●	●
C4	DCM35 BR2	●	●	●	●
C4	Driver and passenger airbags.	●	●	●	●
C4	Driver door electronics.	●	●	●	●
C4	Driver seat memorizing unit.	●	●	●	●
C4	Driving school module.	●	●	●	○
C4	ECU at the top of the steering column .	●	●	●	●
C4	EDC15C2	●	●	●	●
C4	EDC16C3	●	●	●	●
C4	EMF A	●	●	●	●
C4	EMF C	●	●	●	●
C4	ESP81	●	●	●	●
C4	ESP8 BOSCH	●	●	●	●
C4	Electric secondary brake.	●	●	●	●
C4	GEP CAN	●	●	●	●
C4	GEP KWP	●	●	●	●
C4	HDI SID803	●	●	●	●
C4	HDI SID803A	●	●	●	●
C4	HDI SID807	●	●	●	●
C4	HDI SID807 BR2	●	●	●	●
C4	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
C4	High frequency receiver.	●	●	●	●
C4	Instrument panel.	●	●	●	●
C4	KML	●	●	●	●
C4	Lane Departure Warning System	●	●	●	●
C4	Light pack unit.	●	●	●	●
C4	ME745	●	●	●	●
C4	ME749	●	●	●	●
C4	MED17 4 2	●	●	●	●
C4	MED17 4 EURO4	●	●	●	●
C4	MED17 4 EURO5	●	●	●	●
C4	MEV17 4 2	●	●	●	●
C4	MEV17 4 EURO4	●	●	●	●
C4	MEV17 4 EURO5	●	●	●	●
C4	MMGKP	●	●	●	●
C4	MM6LP	●	●	●	●
C4	MM6LPB	●	●	●	●
C4	MM6LPC	●	●	●	●
C4	PADDGO	●	●	●	●
C4	PADDGO E5	●	●	●	●
C4	Parking aid.	●	●	●	●
C4	Passenger door electronics.	●	●	●	●
C4	Pneumatic suspension.	●	●	●	●
C4	RADIONAV RNEG	●	●	●	●
C4	RADIONAV RNEG ECO	●	●	●	●
C4	RD45	●	●	●	●
C4	RNEG2010	●	●	●	●
C4	Rain and Brightness Sensor	●	●	●	○
C4	Remote Instrument Panel (IP) unit.	●	●	●	●
C4	Under inflation detection.	●	●	●	●
C4	Windscreen wiper.	●	●	●	○
C4 (B7)	audio amplifier.	●	●	●	○
C4 (B7)	A/C ECU.	●	●	●	●
C4 (B7)	ABS81	●	●	●	●
C4 (B7)	Airbag.	●	●	●	●
C4 (B7)	Anti-theft alarm.	●	●	●	●
C4 (B7)	BLVV	●	●	●	●
C4 (B7)	BSI2010 - Built-in Systems Interface.	●	●	●	●
C4 (B7)	BTA	●	●	●	●
C4 (B7)	BTA CN	●	●	●	●
C4 (B7)	BVA AL4	●	●	●	●
C4 (B7)	BVA AM6 AT6 EURO5	●	●	●	●
C4 (B7)	BVA AM6 AT6 UDS	●	●	●	●
C4 (B7)	Battery charge status unit.	●	●	●	●
C4 (B7)	CFC300P	●	●	●	●
C4 (B7)	COM2008P	●	●	●	●
C4 (B7)	DCM35 BR2	●	●	●	●
C4 (B7)	DMTC	●	○	●	○
C4 (B7)	DMTR	●	●	●	○
C4 (B7)	DSG	●	●	●	●
C4 (B7)	DSG UDS	●	●	●	●
C4 (B7)	Driver door module .	●	●	●	●
C4 (B7)	Driver seat memorizing unit.	●	●	●	●
C4 (B7)	Driving school module.	●	●	●	○
C4 (B7)	EDC17C10 BR2	●	●	●	●
C4 (B7)	EMF A UDS	●	●	●	●
C4 (B7)	EMF C UDS	●	●	●	●
C4 (B7)	ESP81	●	●	●	●
C4 (B7)	Electric secondary brake.	●	●	●	●
C4 (B7)	Engine Relay Unit	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C4 (B7)	HDC	●	●	●	●
C4 (B7)	HDI SID807 BR2	●	●	●	●
C4 (B7)	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
C4 (B7)	Instrument panel	●	●	●	●
C4 (B7)	Lane Departure Warning System	●	●	●	●
C4 (B7)	MATT C 2010	●	●	●	○
C4 (B7)	MATT M 2010	●	●	●	○
C4 (B7)	MATT P 2010	●	●	●	○
C4 (B7)	ME745	●	●	●	●
C4 (B7)	ME745 EC5	●	●	●	●
C4 (B7)	MED17 4 2	●	●	●	●
C4 (B7)	MEV17 4 2	●	●	●	●
C4 (B7)	MEVD17 4 2	●	●	●	●
C4 (B7)	MM6KP	●	●	●	●
C4 (B7)	MRN	●	●	●	●
C4 (B7)	Monitoring of the blind spot.	●	●	●	●
C4 (B7)	Multiplexed additive pump.	●	●	●	●
C4 (B7)	Multiplexed control panel.	●	●	●	●
C4 (B7)	Parking aid.	●	●	●	●
C4 (B7)	Power steering electric pump unit.	●	●	●	●
C4 (B7)	RADIONAV RNEGC	●	●	●	●
C4 (B7)	RD45	●	●	●	●
C4 (B7)	RD5	●	●	●	●
C4 (B7)	RNEG2010	●	●	●	●
C4 (B7)	Rain and Brightness Sensor	●	●	●	●
C4 (B7)	Seat belts not fastened LED unit.	●	○	●	○
C4 (B7)	Steering wheel with integral controls (VCI).	●	●	●	●
C4 (B7)	Supply protection and management unit.	●	●	●	●
C4 (B7)	Trailer relay unit.	●	●	●	●
C4 (B7)	V46 21	●	●	●	●
C4 (B7)	V46 32	●	●	●	●
C4 (B7)	VD46	●	●	●	●
C4 Aircross	Gearbox	●	●	●	●
C4 Aircross	heating/ventilation	●	●	●	●
C4 Aircross	ABS 4x4	●	●	●	●
C4 Aircross	Anti-theft alarm.	●	●	●	●
C4 Aircross	Built-in Systems Interface.	●	●	●	●
C4 Aircross	CMM 4A92	●	●	●	●
C4 Aircross	Driver and passenger airbags.	●	●	●	●
C4 Aircross	Driver door module .	●	●	●	●
C4 Aircross	ECU-Start and Stop	●	●	●	●
C4 Aircross	ESP 4x4	●	●	●	●
C4 Aircross	HDI 4N13	●	●	●	●
C4 Aircross	HDI SID807 J3J4	●	●	●	●
C4 Aircross	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
C4 Aircross	Instrument panel.	●	●	●	●
C4 Aircross	KOS	●	●	●	●
C4 Aircross	MIVEC	●	●	●	●
C4 Aircross	Navigation	●	●	●	○
C4 Aircross	Parking aid.	●	●	●	●
C4 Aircross	Power steering.	●	●	●	●
C4 Aircross	Radio or radiotelephone (radio part).	●	●	●	●
C4 Aircross	Rain and Brightness Sensor	●	●	●	●
C4 Aircross	Rear final drive piloted clutch.	●	●	●	●
C4 Aircross	Starting authorization ECU.	●	●	●	●
C4 Aircross	Steering wheel angle sensor.	●	●	●	○
C4 Aircross	WCM	●	●	●	●
C4 CACTUS	ABS or ESP ECU.	●	●	●	●
C4 CACTUS	Air Conditioning	●	●	●	●
C4 CACTUS	Airbag.	●	●	●	●
C4 CACTUS	BSI2010 - Built-in Systems Interface.	●	●	●	●
C4 CACTUS	Battery charge status unit.	●	●	●	●
C4 CACTUS	CFC300P	●	●	●	●
C4 CACTUS	DMTC	●	○	●	○
C4 CACTUS	DMTR	●	●	●	○
C4 CACTUS	EDC17C10 BR2	●	●	●	●
C4 CACTUS	EDC17C60	●	●	●	●
C4 CACTUS	Electric power steering.	●	●	●	●
C4 CACTUS	External CD player.	●	●	●	●
C4 CACTUS	Independent telematic unit (BTA).	●	●	●	●
C4 CACTUS	Instrument panel.	●	●	●	●
C4 CACTUS	MAPS UDS	●	●	●	●
C4 CACTUS	Multiplexed control panel.	●	●	●	●
C4 CACTUS	PADDGO	●	●	●	●
C4 CACTUS	PADDGO TI E6	●	●	●	●
C4 CACTUS	Parking aid.	●	●	●	●
C4 CACTUS	Rain and Brightness Sensor	●	●	●	●
C4 CACTUS	Seat belts not fastened LED unit.	●	○	●	○
C4 CACTUS	Steering wheel with integral controls (VCI).	●	●	●	●
C4 CACTUS	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
C4 CACTUS	Telematics Unit SMEG PLUS	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C4 CACTUS	Touch screen.	●	●	●	●
C4 CACTUS	Trailer relay unit.	●	●	●	●
C4 CACTUS	V46	●	●	●	●
C4 CACTUS	VD46	●	●	●	●
C4 L (B7)	Hands free starting access electronic module.	●	●	●	●
C4 L (B7)	A/C ECU.	●	●	●	●
C4 L (B7)	ABS81	●	●	●	●
C4 L (B7)	Airbag.	●	●	●	●
C4 L (B7)	Anti-theft alarm.	●	●	●	●
C4 L (B7)	BLVV	●	●	●	●
C4 L (B7)	BSI2010 - Built-in Systems Interface.	●	●	●	●
C4 L (B7)	BTA	●	●	●	●
C4 L (B7)	BTA CN	●	●	●	●
C4 L (B7)	BVA AL4	●	●	●	●
C4 L (B7)	BVA AM6 AT6 EURO5	●	●	●	●
C4 L (B7)	BVA AM6 AT6 UDS	●	●	●	●
C4 L (B7)	Battery charge status unit.	●	●	●	●
C4 L (B7)	CFC300P	●	●	●	●
C4 L (B7)	COM2008P	●	●	●	●
C4 L (B7)	DCM35 BR2	●	●	●	●
C4 L (B7)	DMTC	●	○	●	○
C4 L (B7)	DMTR	●	●	●	○
C4 L (B7)	DSG	●	●	●	●
C4 L (B7)	DSG UDS	●	●	●	●
C4 L (B7)	EDC17C10 BR2	●	●	●	●
C4 L (B7)	EMF A UDS	●	●	●	●
C4 L (B7)	EMF C UDS	●	●	●	●
C4 L (B7)	ESP81	●	●	●	●
C4 L (B7)	Electric Steering Lock	●	●	●	●
C4 L (B7)	Electronic key reader.	●	●	●	●
C4 L (B7)	Engine Relay Unit	●	●	●	●
C4 L (B7)	HDC	●	●	●	●
C4 L (B7)	HDI SID807 BR2	●	●	●	●
C4 L (B7)	Instrument panel	●	●	●	●
C4 L (B7)	MATT C 2010	●	●	●	○
C4 L (B7)	MATT M 2010	●	●	●	○
C4 L (B7)	MATT P 2010	●	●	●	○
C4 L (B7)	ME745	●	●	●	●
C4 L (B7)	ME745 EC5	●	●	●	●
C4 L (B7)	MED17 4 2	●	●	●	●
C4 L (B7)	MEV17 4 2	●	●	●	●
C4 L (B7)	MEVD17 4 2	●	●	●	●
C4 L (B7)	MM6KP	●	●	●	●
C4 L (B7)	MRN	●	●	●	●
C4 L (B7)	Multiplexed control panel.	●	●	●	●
C4 L (B7)	Parking aid.	●	●	●	●
C4 L (B7)	Power steering electric pump unit.	●	●	●	●
C4 L (B7)	RADIONAV RNEGC	●	●	●	●
C4 L (B7)	RD45	●	●	●	●
C4 L (B7)	RD5	●	●	●	●
C4 L (B7)	RNEG2010	●	●	●	●
C4 L (B7)	Rain and Brightness Sensor	●	●	●	●
C4 L (B7)	Steering wheel with integral controls (VCI).	●	●	●	●
C4 L (B7)	Supply protection and management unit.	●	●	●	●
C4 L (B7)	V46 21	●	●	●	●
C4 L (B7)	V46 32	●	●	●	●
C4 L (B7)	VD46	●	●	●	●
C4 PICASSO	audio amplifier.	●	●	●	○
C4 PICASSO	heating/ventilation	●	●	●	●
C4 PICASSO	A/T electric control.	●	●	●	●
C4 PICASSO	ABS81	●	●	●	●
C4 PICASSO	ABS8 BOSCH	●	●	●	●
C4 PICASSO	ADDGO3	●	●	●	●
C4 PICASSO	AUTORADIO	●	●	●	●
C4 PICASSO	Anti-theft alarm.	●	●	●	●
C4 PICASSO	BECB	●	●	●	●
C4 PICASSO	BECB GEN2	●	●	●	●
C4 PICASSO	BLVV	●	●	●	●
C4 PICASSO	BOITIER NOMADE	●	●	●	●
C4 PICASSO	BOITIER TELEMATIQUE	●	●	●	●
C4 PICASSO	BSI - Built-in Systems Interface.	●	●	●	●
C4 PICASSO	BSI - Engine Relay Unit	●	●	●	●
C4 PICASSO	BSI - Trailer relay unit.	●	●	●	●
C4 PICASSO	BTA	●	●	●	●
C4 PICASSO	BVA AL4	●	●	●	●
C4 PICASSO	BVA AM6	●	●	●	●
C4 PICASSO	BVA AM6 AT6 EURO5	●	●	●	●
C4 PICASSO	CD player.	●	●	●	○
C4 PICASSO	CFC300P	●	●	●	●
C4 PICASSO	Central voltage retention device .	●	○	●	○
C4 PICASSO	DCM34	●	●	●	●
C4 PICASSO	DCM35	●	●	●	●
C4 PICASSO	DCM35 BR2	●	●	●	●
C4 PICASSO	Driver and passenger airbags.	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C4 PICASSO	Driver door electronics.	●	●	●	●
C4 PICASSO	Driver seat memorizing unit.	●	●	●	●
C4 PICASSO	ECU at the top of the steering column .	●	●	●	●
C4 PICASSO	EDC15C2	●	●	●	●
C4 PICASSO	EDC16C3	●	●	●	●
C4 PICASSO	ESP81	●	●	●	●
C4 PICASSO	ESP8 BOSCH	●	●	●	●
C4 PICASSO	Electric secondary brake.	●	●	●	●
C4 PICASSO	GEP	●	●	●	●
C4 PICASSO	HDI SID803	●	●	●	●
C4 PICASSO	HDI SID803A	●	●	●	●
C4 PICASSO	HDI SID807	●	●	●	●
C4 PICASSO	HDI SID807 BR2	●	●	●	●
C4 PICASSO	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
C4 PICASSO	High frequency receiver.	●	●	●	●
C4 PICASSO	Instrument panel.	●	●	●	●
C4 PICASSO	KML	●	●	●	●
C4 PICASSO	Lane Departure Warning System	●	●	●	●
C4 PICASSO	Light pack unit.	●	●	●	●
C4 PICASSO	ME745	●	●	●	●
C4 PICASSO	ME749	●	●	●	●
C4 PICASSO	MED17 4 2	●	●	●	●
C4 PICASSO	MED17 4 EURO4	●	●	●	●
C4 PICASSO	MED17 4 EURO5	●	●	●	●
C4 PICASSO	MEV17 4 2	●	●	●	●
C4 PICASSO	MEV17 4 EURO4	●	●	●	●
C4 PICASSO	MEV17 4 EURO5	●	●	●	●
C4 PICASSO	MM6KP	●	●	●	●
C4 PICASSO	MM6LP	●	●	●	●
C4 PICASSO	MM6LPB	●	●	●	●
C4 PICASSO	MM6LPC	●	●	●	●
C4 PICASSO	PADDGO	●	●	●	●
C4 PICASSO	PADDGO E5	●	●	●	●
C4 PICASSO	Parking aid.	●	●	●	●
C4 PICASSO	Passenger door electronics.	●	●	●	●
C4 PICASSO	Pneumatic suspension.	●	●	●	●
C4 PICASSO	RADIONAV RNEG	●	●	●	●
C4 PICASSO	RADIONAV RNEG ECO	●	●	●	●
C4 PICASSO	RD45	●	●	●	●
C4 PICASSO	RNEG2010	●	●	●	●
C4 PICASSO	Rain and Brightness Sensor	●	●	●	○
C4 PICASSO	Remote Instrument Panel (IP) unit.	●	●	●	●
C4 PICASSO	Under inflation detection.	●	●	●	●
C4 PICASSO	Windscreen wiper.	●	●	●	○
C4 PICASSO (B78)	Hands free starting access electronic module.	●	●	●	●
C4 PICASSO (B78)	audio amplifier.	●	●	●	○
C4 PICASSO (B78)	A/T electric control.	●	●	●	●
C4 PICASSO (B78)	ABS/ESP.	●	●	●	●
C4 PICASSO (B78)	Additional heating.	●	●	●	●
C4 PICASSO (B78)	Air Conditioning	●	●	●	●
C4 PICASSO (B78)	Airbag.	●	●	●	●
C4 PICASSO (B78)	Anti-theft alarm.	●	●	●	●
C4 PICASSO (B78)	BSI2010 - Built-in Systems Interface.	●	●	●	●
C4 PICASSO (B78)	BVA AM6 AT6 UDS	●	●	●	●
C4 PICASSO (B78)	Battery charge status unit.	●	●	●	●
C4 PICASSO (B78)	CFC300P	●	●	●	●
C4 PICASSO (B78)	CIROCCO	●	●	●	●
C4 PICASSO (B78)	COMBINE UDS	●	●	●	●
C4 PICASSO (B78)	Central voltage retention device .	●	○	●	○
C4 PICASSO (B78)	DCM62	●	●	●	●
C4 PICASSO (B78)	Diesel Additive Function	●	●	●	●
C4 PICASSO (B78)	Door control pad.	●	●	●	●
C4 PICASSO (B78)	Driver seat memorizing unit.	●	●	●	●
C4 PICASSO (B78)	EDC17C10 BR2	●	●	●	●
C4 PICASSO (B78)	Electric Steering Lock	●	●	●	●
C4 PICASSO (B78)	Electric power steering.	●	●	●	●
C4 PICASSO (B78)	Electronic key reader.	●	●	●	●
C4 PICASSO (B78)	Engine Relay Unit	●	●	●	●
C4 PICASSO (B78)	External CD player.	●	●	●	●
C4 PICASSO (B78)	HDI SID807 BR2	●	●	●	●
C4 PICASSO (B78)	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
C4 PICASSO (B78)	Independent telematic unit (BTA).	●	●	●	●
C4 PICASSO (B78)	Left hand front wiper motor.	●	●	●	●
C4 PICASSO (B78)	Left hand reversible seat belt reel.	●	●	●	●
C4 PICASSO (B78)	MED17 4 2	●	●	●	●
C4 PICASSO (B78)	MED17 4 4	●	●	●	●
C4 PICASSO (B78)	MEV17 4 2	●	●	●	●
C4 PICASSO (B78)	Motorized boot ECU.	●	●	●	●
C4 PICASSO (B78)	Multifunction camera or multifunction video camera.	●	●	●	●
C4 PICASSO (B78)	Multiplexed control panel.	●	●	●	●
C4 PICASSO (B78)	Panoramic vision assistance ECU.	●	●	●	●
C4 PICASSO (B78)	Parking aid.	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C4 PICASSO (B78)	Rain and Brightness Sensor	●	●	●	●
C4 PICASSO (B78)	Right hand front wiper motor.	●	●	●	●
C4 PICASSO (B78)	Right hand reversible seat belt reel.	●	●	●	●
C4 PICASSO (B78)	Signalling fuse box .	●	●	●	●
C4 PICASSO (B78)	Siren	●	●	●	●
C4 PICASSO (B78)	Steering wheel with integral controls (VCI).	●	●	●	●
C4 PICASSO (B78)	Supply protection and management unit.	●	●	●	●
C4 PICASSO (B78)	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
C4 PICASSO (B78)	Telematics Unit SMEG PLUS	●	●	●	●
C4 PICASSO (B78)	Trailer relay unit.	●	●	●	●
C4 PICASSO (B78)	Vehicle distance assistance.	●	●	●	●
C4 SEDAN	audio amplifier.	●	●	●	○
C4 SEDAN	heating/ventilation	●	●	●	●
C4 SEDAN	A/T electric control.	●	●	●	●
C4 SEDAN	ABS81	●	●	●	●
C4 SEDAN	ABS8 BOSCH	●	●	●	●
C4 SEDAN	ADDGO3	●	●	●	●
C4 SEDAN	AUTORADIO	●	●	●	●
C4 SEDAN	Anti-theft alarm.	●	●	●	●
C4 SEDAN	BECB	●	●	●	●
C4 SEDAN	BECB GEN2	●	●	●	●
C4 SEDAN	BLVV	●	●	●	●
C4 SEDAN	BOITIER NOMADE	●	●	●	●
C4 SEDAN	BOITIER TELEMATIQUE	●	●	●	●
C4 SEDAN	BSI - Built-in Systems Interface.	●	●	●	●
C4 SEDAN	BSI - Engine Relay Unit	●	●	●	●
C4 SEDAN	BSI - Trailer relay unit.	●	●	●	●
C4 SEDAN	BTA	●	●	●	●
C4 SEDAN	BVA AL4	●	●	●	●
C4 SEDAN	BVA AM6	●	●	●	●
C4 SEDAN	BVA AM6 AT6 EURO5	●	●	●	●
C4 SEDAN	CD player.	●	●	●	○
C4 SEDAN	CFC300P	●	●	●	●
C4 SEDAN	DCM34	●	●	●	●
C4 SEDAN	DCM35	●	●	●	●
C4 SEDAN	DCM35 BR2	●	●	●	●
C4 SEDAN	Driver and passenger airbags.	●	●	●	●
C4 SEDAN	Driver door electronics.	●	●	●	●
C4 SEDAN	Driver seat memorizing unit.	●	●	●	●
C4 SEDAN	Driving school module.	●	●	●	○
C4 SEDAN	ECU at the top of the steering column .	●	●	●	●
C4 SEDAN	EDC15C2	●	●	●	●
C4 SEDAN	EDC16C3	●	●	●	●
C4 SEDAN	EMF A	●	●	●	●
C4 SEDAN	EMF C	●	●	●	●
C4 SEDAN	ESP81	●	●	●	●
C4 SEDAN	ESP8 BOSCH	●	●	●	●
C4 SEDAN	Electric secondary brake.	●	●	●	●
C4 SEDAN	GEP	●	●	●	●
C4 SEDAN	HDI SID803	●	●	●	●
C4 SEDAN	HDI SID803A	●	●	●	●
C4 SEDAN	HDI SID807	●	●	●	●
C4 SEDAN	HDI SID807 BR2	●	●	●	●
C4 SEDAN	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
C4 SEDAN	High frequency receiver.	●	●	●	●
C4 SEDAN	Instrument panel.	●	●	●	●
C4 SEDAN	KML	●	●	●	●
C4 SEDAN	Lane Departure Warning System	●	●	●	●
C4 SEDAN	Light pack unit.	●	●	●	●
C4 SEDAN	ME745	●	●	●	●
C4 SEDAN	ME749	●	●	●	●
C4 SEDAN	MED17 4 2	●	●	●	●
C4 SEDAN	MED17 4 EURO4	●	●	●	●
C4 SEDAN	MED17 4 EURO5	●	●	●	●
C4 SEDAN	MEV17 4 2	●	●	●	●
C4 SEDAN	MEV17 4 EURO4	●	●	●	●
C4 SEDAN	MEV17 4 EURO5	●	●	●	●
C4 SEDAN	MM6KP	●	●	●	●
C4 SEDAN	MM6LP	●	●	●	●
C4 SEDAN	MM6LPB	●	●	●	●
C4 SEDAN	MM6LPC	●	●	●	●
C4 SEDAN	PADDGO	●	●	●	●
C4 SEDAN	PADDGO E5	●	●	●	●
C4 SEDAN	Parking aid.	●	●	●	●
C4 SEDAN	Passenger door electronics.	●	●	●	●
C4 SEDAN	Pneumatic suspension.	●	●	●	●
C4 SEDAN	RADIONAV RNEG	●	●	●	●
C4 SEDAN	RADIONAV RNEG ECO	●	●	●	●
C4 SEDAN	RD45	●	●	●	●
C4 SEDAN	RNEG2010	●	●	●	●
C4 SEDAN	Rain and Brightness Sensor	●	●	●	○
C4 SEDAN	Remote Instrument Panel (IP) unit.	●	●	●	●
C4 SEDAN	Under inflation detection.	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C4 SEDAN	Windscreen wiper.	●	●	●	○
C5	ABS	●	●	●	●
C5	Additional heating	●	●	●	●
C5	Air conditioning	●	●	●	●
C5	Airbag	●	●	●	○
C5	Anti-lock brake system(ESP)	●	●	●	●
C5	Auto gearbox 4HP20	●	●	●	●
C5	Auto gearbox AL4	●	●	●	●
C5	BSI - Alarm	●	●	●	●
C5	BSI - BSI	●	●	●	●
C5	BSI - Driver's door module	●	●	●	●
C5	BSI - Passenger's door module	●	●	●	●
C5	BSI - Switch module at the steering wheel(Top of column)	●	○	○	●
C5	CD player	●	●	●	●
C5	Car-phone	●	●	●	●
C5	Diesel additive function(ADDG02)	●	●	●	●
C5	Diesel additive function(ADDITIF FAP)	●	●	●	●
C5	Engine ECU(1.8L 6FZ SAGEM S2000P)	●	●	●	●
C5	Engine ECU(2.0 L RHS BOSCH EDC15C2)	●	●	●	●
C5	Engine ECU(2.0 L RHY BOSCH EDC15C2)	●	●	●	●
C5	Engine ECU(2.0 L RHZ BOSCH EDC15C2)	●	●	●	●
C5	Engine ECU(2.0L RFN MM48P)	●	●	●	●
C5	Engine ECU(2.0L RLZ SIEMENS Sirius81)	○	●	●	●
C5	Engine ECU(2.2 L 4HX BOSCH EDC15C2)	●	●	●	●
C5	Engine ECU(3.0L XFX BOSCH ME746)	●	●	●	●
C5	Engine ECU(6FZ SAGEM S2000PM1)	●	●	●	●
C5	Engine ECU(RFN MM6LP)	●	●	●	●
C5	Engine ECU(RHY SIEMENS SID801)	●	●	●	●
C5	Instrument panel	●	●	●	●
C5	Left-hand headlamp	●	●	●	●
C5	Multifunction display AUTOPC	●	●	●	●
C5	Multifunction display SAGEM A	●	●	●	●
C5	Multifunction display SAGEM B	●	●	●	●
C5	Multifunction display SIEMENS C	●	●	●	●
C5	Multifunction display VDO D	●	●	●	●
C5	Navigation(Navigation SIEMENS)	●	●	●	●
C5	Navigation(Navigation VDO)	●	●	●	●
C5	Parking assistance	●	●	●	●
C5	Radio post-equipment	●	●	●	●
C5	Right-hand headlamp	●	●	●	●
C5	Sun roof	●	●	●	●
C5	Suspension	●	●	●	●
C5	Suspension(ECOTECH SUSPENSION)	●	●	●	●
C5	Telematics unit	●	●	●	●
C5 (X7)	ABS/traction control.	●	●	●	●
C5 (X7)	audio amplifier.	●	●	●	○
C5 (X7)	heating/ventilation	●	●	●	●
C5 (X7)	AUTORADIO	●	●	●	●
C5 (X7)	Active damper electronic unit.	●	●	●	●
C5 (X7)	Additional heating.	●	●	●	●
C5 (X7)	Anti-theft alarm.	●	●	●	●
C5 (X7)	BASHE 5.	●	●	●	●
C5 (X7)	BECB	●	●	●	●
C5 (X7)	BECB GEN2	●	●	●	●
C5 (X7)	BOITIER NOMADE	●	●	●	●
C5 (X7)	BOITIER TELEMATIQUE	●	●	●	●
C5 (X7)	BSI - Built-in Systems Interface.	●	●	●	●
C5 (X7)	BSI - Engine Relay Unit	●	●	●	●
C5 (X7)	BSI - Trailer relay unit.	●	●	●	●
C5 (X7)	BTA	●	●	●	●
C5 (X7)	BTA CN	●	●	●	●
C5 (X7)	BVA AL4	●	●	●	●
C5 (X7)	BVA AM6	●	●	●	●
C5 (X7)	BVA AM6 AT6 EURO5	●	●	●	●
C5 (X7)	BVA AM6 AT6 UDS	●	●	●	●
C5 (X7)	CD player.	●	●	●	○
C5 (X7)	CFC300P	●	●	●	●
C5 (X7)	CSS	●	●	●	●
C5 (X7)	DCM34	●	●	●	●
C5 (X7)	DCM34 P	●	●	●	●
C5 (X7)	DCM35	●	●	●	●
C5 (X7)	DCM35 BR2	●	●	●	●
C5 (X7)	DMTC	●	○	●	○
C5 (X7)	DMTR	●	●	●	○
C5 (X7)	DSG	●	●	●	●
C5 (X7)	DSG UDS	●	●	●	●
C5 (X7)	Driver and passenger airbags.	●	●	●	●
C5 (X7)	Driver door module .	●	●	●	●
C5 (X7)	Driver seat memorizing unit.	●	●	●	●
C5 (X7)	ECU at the top of the steering column .	●	●	●	●
C5 (X7)	EDC16C3	●	●	●	●
C5 (X7)	EDC16CP39	●	●	●	●
C5 (X7)	EDC17CP11	●	●	●	●
C5 (X7)	EDC17CP42	●	●	●	●
C5 (X7)	EMF A	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C5 (X7)	EMF C	●	●	●	●
C5 (X7)	Electric secondary brake.	●	●	●	●
C5 (X7)	Electronically managed suspension.	●	●	●	●
C5 (X7)	HDI SID807	●	●	●	●
C5 (X7)	HDI SID807 BR2	●	●	●	●
C5 (X7)	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
C5 (X7)	High frequency receiver.	●	●	●	●
C5 (X7)	Instrument panel.	●	●	●	●
C5 (X7)	KML	●	●	●	●
C5 (X7)	Lane Departure Warning System	●	●	●	●
C5 (X7)	MD SERV	●	●	●	●
C5 (X7)	ME747	●	●	●	●
C5 (X7)	MED17 4 2	●	●	●	●
C5 (X7)	MED17 4 EURO5	●	●	●	●
C5 (X7)	MEV17 4 2	●	●	●	●
C5 (X7)	MM6KP	●	●	●	●
C5 (X7)	MRN	●	●	●	●
C5 (X7)	Motorized boot ECU.	●	●	●	●
C5 (X7)	Parking aid.	●	●	●	●
C5 (X7)	Power steering electric pump unit.	●	●	●	●
C5 (X7)	RADIONAV NG4	●	●	●	●
C5 (X7)	RADIONAV RNEG	●	●	●	●
C5 (X7)	RADIONAV RNEGC	●	●	●	●
C5 (X7)	RD45	●	●	●	●
C5 (X7)	RNEG2010	●	●	●	●
C5 (X7)	Rain and Brightness Sensor	●	●	●	○
C5 (X7)	SID201	●	●	●	●
C5 (X7)	Seat belts not fastened LED unit.	●	○	●	○
C5 (X7)	Windscreen wiper.	●	●	●	○
C5 R	Additional heating	●	●	●	●
C5 R	Air conditioning	●	●	●	●
C5 R	Airbag	●	●	●	●
C5 R	Alarm	●	●	●	●
C5 R	Anti-lock brake system(ESP)	●	●	●	●
C5 R	Auto gearbox 4HP20	●	●	●	●
C5 R	Auto gearbox AL4	●	●	●	●
C5 R	Auto gearbox AM6	●	●	●	●
C5 R	BSI - BSI	●	●	●	●
C5 R	BSI - Engine relay unit	●	●	●	●
C5 R	BSI - Trailer relay unit	●	●	●	●
C5 R	CD player	●	●	●	●
C5 R	Deflation detection	●	●	●	●
C5 R	Diesel additive function	●	●	●	●
C5 R	Directional headlamps	●	●	●	○
C5 R	Driver's door module	●	●	●	●
C5 R	Electric pump unit(GEP)	●	●	●	●
C5 R	Engine ECU(2.2 L 4HX BOSCH EDC15C2)	●	●	●	●
C5 R	Engine ECU(4HP BOSCH EDC16CP39 DW12BTED4)	●	●	●	●
C5 R	Engine ECU(4HR BOSCH EDC16CP39 DW12BTED4)	●	●	●	●
C5 R	Engine ECU(4HS BOSCH EDC16CP39 DW12BTED4)	●	●	●	●
C5 R	Engine ECU(4HT BOSCH EDC16CP39 DW12BTED4)	●	●	●	●
C5 R	Engine ECU(6FY MM6LPB)	●	●	●	●
C5 R	Engine ECU(6FZ SAGEM S2000PM2)	●	●	●	●
C5 R	Engine ECU(9HY BOSCH EDC16C34 DV6TED4)	●	●	●	●
C5 R	Engine ECU(9HZ (FAP) BOSCH EDC16C34 DV6ATED4)	●	●	●	●
C5 R	Engine ECU(RFJ MM6LPB)	●	●	●	●
C5 R	Engine ECU(RHL SIEMENS SID803)	●	●	●	●
C5 R	Engine ECU(RHL SIEMENS SID803A)	●	●	●	●
C5 R	Engine ECU(RHR SIEMENS SID803)	●	●	●	●
C5 R	Engine ECU(RHR SIEMENS SID803A)	●	●	●	●
C5 R	Engine ECU(XFU BOSCH ME747)	●	●	●	●
C5 R	Engine ECU(XFV BOSCH ME747)	●	●	●	●
C5 R	Hands Free Kit	●	●	●	●
C5 R	Instrument panel	●	●	●	●
C5 R	Lane departure warning system	●	●	●	●
C5 R	Multifunction screen SAGEM A	●	●	●	●
C5 R	Multifunction screen SAGEM C	●	●	●	●
C5 R	Parking assistance	●	●	●	●
C5 R	Passenger's door module	●	●	●	●
C5 R	Radio post-equipment	●	●	●	●
C5 R	Rain sensor/ Brightness	●	●	●	○
C5 R	Sun roof	●	●	●	●
C5 R	Suspension(ECOTECH SUSPENSION)	●	●	●	●
C5 R	Switch module at the steering wheel(Top of column)	●	●	●	●
C5 R	Telematic(RT3)	●	●	●	●
C5 R	Telematic(RT4)	●	●	●	●
C5 R	Telematic(RT5)	●	●	●	●
C6	heating/ventilation	●	●	●	●
C6	Additional heating.	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C6	Anti-theft alarm.	●	●	●	●
C6	BECB	●	●	●	●
C6	BECB GEN2	●	●	●	●
C6	BOITIER NOMADE	●	●	●	●
C6	BSI - Boot wiring housing .	●	●	●	●
C6	BSI - Built-in Systems Interface.	●	●	●	●
C6	BSI - Engine Relay Unit	●	●	●	●
C6	BSI - Trailer relay unit.	●	●	●	●
C6	BVA AM6	●	●	●	●
C6	BVA AM6 AT6 EURO5	●	●	●	●
C6	CD player.	●	●	●	○
C6	CDSPD	●	○	●	●
C6	CDSPG	●	○	●	●
C6	CSS	●	●	●	●
C6	Driver and passenger airbags.	●	●	●	●
C6	Driver door electronics.	●	●	●	●
C6	Driver seat memorizing unit.	●	●	●	●
C6	Driver seat panel.	●	●	●	●
C6	EDC16CP39	●	●	●	●
C6	EDC17CP11	●	●	●	●
C6	EMF A	●	●	●	●
C6	EMF C	●	●	●	●
C6	ESP81	●	●	●	●
C6	ESP EBC 440 CAN	●	●	●	●
C6	ESP EBC 440 K	●	●	●	●
C6	Electric secondary brake.	●	●	●	●
C6	Electronically managed suspension.	●	●	●	●
C6	High frequency receiver.	●	●	●	●
C6	High head vision.	●	●	●	●
C6	Instrument panel.	●	●	●	●
C6	KML	●	●	●	●
C6	Lane Departure Warning System	●	●	●	●
C6	Left headlamp beam level corrector .	●	●	●	●
C6	ME747	●	●	●	●
C6	Moving panel deflector.	●	●	●	●
C6	PROJECTEURS	●	●	●	●
C6	Parking aid.	●	●	●	●
C6	Passenger door electronics.	●	●	●	●
C6	Passenger seat memorization unit.	●	●	●	●
C6	Passenger seat panel.	●	●	●	●
C6	Pedestrian impact detection unit.	●	●	●	●
C6	Power steering electric pump unit.	●	●	●	●
C6	Radio or radiotelephone (radio part).	●	●	●	●
C6	Rain and Brightness Sensor	●	●	●	○
C6	Rear A/C table.	●	●	●	●
C6	Rear seat memorizing unit.	●	●	●	●
C6	Right headlamp beam corrector .	●	●	●	●
C6	SID201	●	●	●	●
C6	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
C6	Telematics .	●	●	●	●
C6	Under inflation detection.	●	●	●	●
C6	Windscreen wiper.	●	●	●	○
C8	ABS	●	○	○	●
C8	Additional heating	●	●	●	●
C8	Air conditioning	●	●	●	●
C8	Airbag	●	●	●	●
C8	Anti-lock brake system(ESP)	●	●	●	●
C8	Auto gearbox 4HP20	●	●	●	●
C8	Auto gearbox AL4	●	●	●	●
C8	BSI - Alarm	●	●	●	●
C8	BSI - BSI	●	●	●	●
C8	BSI - Driver's door module	●	●	●	●
C8	BSI - Passenger's door module	●	●	●	●
C8	BSI - Switch module at the steering wheel(Top of column)	●	○	○	●
C8	CD player	●	●	●	●
C8	Diesel additive function(ADDG02)	●	●	●	●
C8	Diesel additive function(ADDITIF FAP)	●	●	●	●
C8	Engine ECU(2.0 L RHM BOSCH EDC15C2)	●	●	●	●
C8	Engine ECU(2.0 L RHT BOSCH EDC15C2)	●	●	●	●
C8	Engine ECU(2.0 L RHW BOSCH EDC15C2)	●	●	●	●
C8	Engine ECU(2.0 L RHZ BOSCH EDC15C2)	●	●	●	●
C8	Engine ECU(2.0L RFN MM48P)	●	●	●	●
C8	Engine ECU(2.2 L 4HW BOSCH EDC15C2)	●	●	●	●
C8	Engine ECU(3.0L XFW BOSCH ME746)	●	●	●	●
C8	Engine ECU(3FZ MM4MP2)	●	●	●	●
C8	Engine ECU(3FZ MM6LP)	●	●	●	●
C8	Engine ECU(RFN MM4MP2)	●	●	●	●
C8	Engine ECU(RFN MM6LP)	●	●	●	●
C8	Front sunroof	●	●	●	●
C8	Instrument panel	●	●	●	●
C8	LEDs and odometer ECU	●	○	○	●
C8	Left-hand headlamp	●	●	●	●
C8	Memory unit	●	●	●	●
C8	Middle sunroof	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
C8	Multifunction display SAGEM B	●	●	●	●
C8	Parking assistance	●	●	●	●
C8	Radio post-equipment	●	●	●	●
C8	Rear sunroof	●	●	●	●
C8	Right-hand headlamp	●	●	●	●
C8	Sliding side doors module	●	●	●	●
C8	Telematic receiver command	●	●	●	●
C8	Telematics unit	●	●	●	●
C8 CAN	heating/ventilation	●	●	●	●
C8 CAN	AUTORADIO	●	●	●	●
C8 CAN	Additional heating.	●	●	●	●
C8 CAN	Anti-theft alarm.	●	●	●	●
C8 CAN	BOITIER NOMADE	●	●	●	●
C8 CAN	BOITIER TELEMATIQUE	●	●	●	●
C8 CAN	BSI - Built-in Systems Interface.	●	●	●	●
C8 CAN	BSI - Engine Relay Unit	●	●	●	●
C8 CAN	BSI - Trailer relay unit.	●	●	●	●
C8 CAN	BVA AL4	●	●	●	●
C8 CAN	BVA AM6	●	●	●	●
C8 CAN	BVA AM6 AT6 EURO5	●	●	●	●
C8 CAN	CD player.	●	●	●	○
C8 CAN	DCM35	●	●	●	●
C8 CAN	DCM35 BR2	●	●	●	●
C8 CAN	Diesel Additive	●	●	●	●
C8 CAN	Driver and passenger airbags.	●	●	●	●
C8 CAN	Driver seat memorizing unit.	●	●	●	●
C8 CAN	EDC15C2	●	●	●	●
C8 CAN	EDC16CP39	●	●	●	●
C8 CAN	EDPC	●	●	●	●
C8 CAN	EMF A	●	●	●	●
C8 CAN	EMF C	●	●	●	●
C8 CAN	ESP81	●	●	●	●
C8 CAN	ESP8 BOSCH	●	●	●	●
C8 CAN	Front sunroof.	●	●	●	●
C8 CAN	HDI SID803A	●	●	●	●
C8 CAN	Instrument panel.	●	●	●	●
C8 CAN	KML	●	●	●	●
C8 CAN	Left headlamp beam level corrector .	●	●	●	●
C8 CAN	MM6LPB	●	●	●	●
C8 CAN	Middle sunroof.	●	●	●	●
C8 CAN	Odometer warning lights unit.	●	●	●	●
C8 CAN	Parking aid.	●	●	●	●
C8 CAN	Passenger door electronics.	●	●	●	●
C8 CAN	Power steering electric pump unit.	●	●	●	●
C8 CAN	RADIONAV RNEG	●	●	●	●
C8 CAN	RD45	●	●	●	●
C8 CAN	RNEG2010	●	●	●	●
C8 CAN	Rain and Brightness Sensor	●	●	●	○
C8 CAN	Rear sunroof.	●	●	●	●
C8 CAN	Right headlamp beam corrector .	●	●	●	●
C8 CAN	Sliding side door modules (left hand or only).	●	●	●	●
C8 CAN	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
C8 CAN	Telematic receiver control .	●	○	●	●
C8 CAN	Under inflation detection.	●	●	●	●
DS 5LS	Hands free starting access electronic module.	●	●	●	●
DS 5LS	ABS/traction control.	●	●	●	●
DS 5LS	Gearbox	●	●	●	●
DS 5LS	audio amplifier.	●	●	●	○
DS 5LS	A/C ECU.	●	●	●	●
DS 5LS	Airbag.	●	●	●	●
DS 5LS	Anti-theft alarm.	●	●	●	●
DS 5LS	BSI2010 - Built-in Systems Interface.	●	●	●	●
DS 5LS	Battery charge status unit.	●	●	●	●
DS 5LS	EMF A UDS	●	●	●	○
DS 5LS	EMF C UDS	●	●	●	○
DS 5LS	Electric Steering Lock	●	●	●	●
DS 5LS	Electric secondary brake.	●	●	●	●
DS 5LS	Electronic key reader.	●	●	●	●
DS 5LS	Engine Relay Unit	●	●	●	●
DS 5LS	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
DS 5LS	Independent telematic unit (BTA CHINE).	●	●	●	●
DS 5LS	Instrument panel.	●	●	●	●
DS 5LS	MATT C 2010	●	●	●	○
DS 5LS	MATT M 2010	●	●	●	○
DS 5LS	MED17 4 2	●	●	●	●
DS 5LS	MED17 4 4	●	●	●	●
DS 5LS	MEVD17 4 2	●	●	●	●
DS 5LS	Multiplexed control panel.	●	●	●	●
DS 5LS	Parking aid.	●	●	●	●
DS 5LS	Power steering electric pump unit.	●	●	●	●
DS 5LS	Radio.	●	●	●	●
DS 5LS	Rain and Brightness Sensor	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
DS 5LS	Steering wheel with integral controls (VCI).	●	●	●	●
DS 5LS	Supply protection and management unit.	●	●	●	●
DS 5LS	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
DS 5LS	Telematics .	●	●	●	●
DS 5LS	Under inflation detection.	●	●	●	●
DS 5LS	V46 32	●	●	●	●
DS 5LS	Voltage retaining device.	●	●	●	○
DS 6WR	Hands free starting access electronic module.	●	●	●	●
DS 6WR	ABS/traction control.	●	●	●	●
DS 6WR	Airbag.	●	●	●	●
DS 6WR	Anti-theft alarm.	●	●	●	●
DS 6WR	Battery charge status unit.	●	●	●	●
DS 6WR	Electric Steering Lock	●	●	●	●
DS 6WR	Electronic key reader.	●	●	●	●
DS 6WR	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
DS 6WR	Instrument panel.	●	●	●	●
DS 6WR	MATT C 2010	●	●	●	○
DS 6WR	MATT M 2010	●	●	●	○
DS 6WR	MED17 4 2	●	●	●	●
DS 6WR	MED17 4 4	●	●	●	●
DS 6WR	MEVD17 4 2	●	●	●	●
DS 6WR	Multiplexed control panel.	●	●	●	●
DS 6WR	Parking aid.	●	●	●	●
DS 6WR	Power steering electric pump unit.	●	●	●	●
DS 6WR	Rain and Brightness Sensor	●	●	●	●
DS 6WR	Signalling fuse box .	●	●	●	●
DS 6WR	Supply protection and management unit.	●	●	●	●
DS 6WR	Telematics .	●	●	●	●
DS 6WR	V46 32	●	●	●	●
DS 6WR	Voltage retaining device.	●	●	●	○
DS3	A/C ECU.	●	●	●	●
DS3	ABSMK70 1	●	●	●	●
DS3	AUTORADIO	●	●	●	●
DS3	Airbag.	●	●	●	●
DS3	Alarm	●	●	●	●
DS3	BECB	●	●	●	●
DS3	BECB GEN2	●	●	●	●
DS3	BSI - Built-in Systems Interface.	●	●	●	●
DS3	BSI - Engine Relay Unit	●	●	●	●
DS3	BSI - Trailer relay unit.	●	●	●	●
DS3	BVA AL4	●	●	●	●
DS3	BVMP	●	●	●	●
DS3	CFC300P	●	●	●	●
DS3	DMTC	●	○	●	○
DS3	DMTR	●	●	●	○
DS3	EDC16C3	●	●	●	●
DS3	EDC17C10	●	●	●	●
DS3	EDC17C10 BR2	●	●	●	●
DS3	EDC17C60	●	●	●	●
DS3	EMF A	●	●	●	●
DS3	EMF C	●	●	●	●
DS3	ESPMK100	●	●	●	●
DS3	ESPMK60 0	●	●	●	●
DS3	HDI SID807	●	●	●	●
DS3	HDI SID807 BR2	●	●	●	●
DS3	Hands-free kit (telephone).	●	●	●	●
DS3	High frequency receiver.	●	●	●	●
DS3	Instrument panel.	●	●	●	●
DS3	MAPS UDS	●	●	●	●
DS3	MED17 4 2	●	●	●	●
DS3	MED17 4 EURO4	●	●	●	●
DS3	MEV17 4 2	●	●	●	●
DS3	MEV17 4 EURO5	●	●	●	●
DS3	PADDGO	●	●	●	●
DS3	PADDGO TI E6	●	●	●	●
DS3	Parking aid.	●	●	●	●
DS3	Power steering.	●	●	●	●
DS3	RADIONAV RNEG	●	●	●	●
DS3	RADIONAV RNEGC	●	●	●	●
DS3	RD45	●	●	●	●
DS3	RNEG2010	●	●	●	●
DS3	Rain sensor.	●	●	●	○
DS3	Seat belts not fastened LED unit.	●	○	●	○
DS3	Service module.	●	●	●	●
DS3	Switch Module at the Steering Wheel	●	●	●	●
DS3	V46	●	●	●	●
DS3	VD46	●	●	●	●
DS3	Vehicle distance assistance.	●	●	●	●
DS4	audio amplifier.	●	●	●	○
DS4	A/C ECU.	●	●	●	●
DS4	ABS81	●	●	●	●
DS4	Airbag.	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
DS4	Anti-theft alarm.	●	●	●	●
DS4	BLVV	●	●	●	●
DS4	BSI2010 - Built-in Systems Interface.	●	●	●	●
DS4	BTA	●	●	●	●
DS4	BTA CN	●	●	●	●
DS4	BVA AL4	●	●	●	●
DS4	BVA AM6 AT6 EURO5	●	●	●	●
DS4	BVA AM6 AT6 UDS	●	●	●	●
DS4	Battery charge status unit.	●	●	●	●
DS4	CFC300P	●	●	●	●
DS4	COM2008P	●	●	●	●
DS4	DCM35 BR2	●	●	●	●
DS4	DMTC	●	○	●	○
DS4	DMTR	●	●	●	○
DS4	DSG	●	●	●	●
DS4	DSG UDS	●	●	●	●
DS4	Driver door module .	●	●	●	●
DS4	Driver seat memorizing unit.	●	●	●	●
DS4	Driving school module.	●	●	●	○
DS4	EDC17C10 BR2	●	●	●	●
DS4	EMF A UDS	●	●	●	●
DS4	EMF C UDS	●	●	●	●
DS4	ESP81	●	●	●	●
DS4	Electric secondary brake.	●	●	●	●
DS4	Engine Relay Unit	●	●	●	●
DS4	HDC	●	●	●	●
DS4	HDI SID807 BR2	●	●	●	●
DS4	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
DS4	Instrument panel	●	●	●	●
DS4	Lane Departure Warning System	●	●	●	●
DS4	MATT C 2010	●	●	●	○
DS4	MATT M 2010	●	●	●	○
DS4	MATT P 2010	●	●	●	○
DS4	ME745	●	●	●	●
DS4	ME745 EC5	●	●	●	●
DS4	MED17 4 2	●	●	●	●
DS4	MEV17 4 2	●	●	●	●
DS4	MEVD17 4 2	●	●	●	●
DS4	MM6KP	●	●	●	●
DS4	MRN	●	●	●	●
DS4	Monitoring of the blind spot.	●	●	●	●
DS4	Multiplexed additive pump.	●	●	●	●
DS4	Multiplexed control panel.	●	●	●	●
DS4	Parking aid.	●	●	●	●
DS4	Power steering electric pump unit.	●	●	●	●
DS4	RADIONAV RNEGC	●	●	●	●
DS4	RD45	●	●	●	●
DS4	RD5	●	●	●	●
DS4	RNEG2010	●	●	●	●
DS4	Rain and Brightness Sensor	●	●	●	●
DS4	Seat belts not fastened LED unit.	●	○	●	○
DS4	Steering wheel with integral controls (VCI).	●	●	●	●
DS4	Supply protection and management unit.	●	●	●	●
DS4	Trailer relay unit.	●	●	●	●
DS4	V46 21	●	●	●	●
DS4	V46 32	●	●	●	●
DS4	VD46	●	●	●	●
DS5	Hands free starting access electronic module.	●	●	●	●
DS5	ABS/traction control.	●	●	●	●
DS5	audio amplifier.	●	●	●	○
DS5	Air Conditioning	●	●	●	●
DS5	Airbag.	●	●	●	●
DS5	Anti-theft alarm.	●	●	●	●
DS5	BLVV	●	●	●	●
DS5	BSI2010 - Built-in Systems Interface.	●	●	●	●
DS5	BTA	●	●	●	●
DS5	BTA CN	●	●	●	●
DS5	BVA AM6 AT6 EURO5	●	●	●	●
DS5	BVA AM6 AT6 UDS	●	●	●	●
DS5	Battery charge status unit.	●	●	●	●
DS5	CFC300P	●	●	●	●
DS5	CFC300P HY	●	●	●	●
DS5	Clock.	●	●	●	●
DS5	DCM35 BR2	●	●	●	●
DS5	DCM35 HY	●	●	●	●
DS5	DCM62	●	●	●	●
DS5	DMTC	●	○	●	○
DS5	DMTR	●	●	●	○
DS5	DSG	●	●	●	●
DS5	DSG UDS	●	●	●	●
DS5	Driver seat memorizing unit.	●	●	●	●
DS5	EDC17C60	●	●	●	●
DS5	EMF A UDS	●	●	●	○

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
DS5	EMF C UDS	●	●	●	●
DS5	Electric Steering Lock	●	●	●	●
DS5	Electric secondary brake.	●	●	●	●
DS5	Electronic key reader.	●	●	●	●
DS5	Engine Relay Unit	●	●	●	●
DS5	HDI SID807 BR2	●	●	●	●
DS5	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
DS5	High head vision.	●	●	●	●
DS5	Instrument panel	●	●	●	●
DS5	MATT C 2010	●	●	●	○
DS5	MATT M 2010	●	●	●	○
DS5	MED17 4 2	●	●	●	●
DS5	MEVD17 4 2	●	●	●	●
DS5	MRN	●	●	●	●
DS5	Multifunction camera or multifunction video camera.	●	●	●	●
DS5	Multiplexed control panel.	●	●	●	●
DS5	PADDGO E5	●	●	●	●
DS5	PADDGO TI E6	●	●	●	●
DS5	Parking aid.	●	●	●	●
DS5	Power steering electric pump unit.	●	●	●	●
DS5	RADIONAV RNEGC	●	●	●	●
DS5	RD45	●	●	●	●
DS5	RD5	●	●	●	●
DS5	RNEG2010	●	●	●	●
DS5	Rain and Brightness Sensor	●	●	●	●
DS5	Seat belts not fastened LED unit.	●	○	●	○
DS5	Steering wheel with integral controls (VCI).	●	●	●	●
DS5	Supply protection and management unit.	●	●	●	●
DS5	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
DS5	Telematic navigator.	●	○	●	●
DS5	Trailer relay unit.	●	●	●	●
DS5	Vibrators control ECU.	●	●	●	●
DS5	Windscreen wiper.	●	●	●	●
DS5 Hybrid4	Hands free starting access electronic module.	●	●	●	●
DS5 Hybrid4	ABS/traction control.	●	●	●	●
DS5 Hybrid4	audio amplifier.	●	●	●	○
DS5 Hybrid4	Air Conditioning	●	●	●	●
DS5 Hybrid4	Airbag.	●	●	●	●
DS5 Hybrid4	Anti-theft alarm.	●	●	●	●
DS5 Hybrid4	BLVV	●	●	●	●
DS5 Hybrid4	BSI2010 - Built-in Systems Interface.	●	●	●	●
DS5 Hybrid4	BTA	●	●	●	●
DS5 Hybrid4	BTA CN	●	●	●	●
DS5 Hybrid4	BVA AM6 AT6 EURO5	●	●	●	●
DS5 Hybrid4	BVA AM6 AT6 UDS	●	●	●	●
DS5 Hybrid4	Battery charge status unit.	●	●	●	●
DS5 Hybrid4	CFC300P	●	●	●	●
DS5 Hybrid4	CFC300P HY	●	●	●	●
DS5 Hybrid4	Clock.	●	●	●	●
DS5 Hybrid4	DCM35 BR2	●	●	●	●
DS5 Hybrid4	DCM35 HY	●	●	●	●
DS5 Hybrid4	DCM62	●	●	●	●
DS5 Hybrid4	DSG	●	●	●	●
DS5 Hybrid4	DSG UDS	●	●	●	●
DS5 Hybrid4	Driver seat memorizing unit.	●	●	●	●
DS5 Hybrid4	EDC17C60	●	●	●	●
DS5 Hybrid4	EMF A UDS	●	●	●	○
DS5 Hybrid4	EMF C UDS	●	●	●	●
DS5 Hybrid4	Electric Steering Lock	●	●	●	●
DS5 Hybrid4	Electric secondary brake.	●	●	●	●
DS5 Hybrid4	Electronic key reader.	●	●	●	●
DS5 Hybrid4	Engine Relay Unit	●	●	●	●
DS5 Hybrid4	HDI SID807 BR2	●	●	●	●
DS5 Hybrid4	Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
DS5 Hybrid4	High head vision.	●	●	●	●
DS5 Hybrid4	Hybrid control ECU 1.	●	●	●	●
DS5 Hybrid4	Hybrid control ECU 2.	●	●	●	●
DS5 Hybrid4	Hybrid mode selector.	●	○	●	●
DS5 Hybrid4	Instrument panel	●	●	●	●
DS5 Hybrid4	MATT C 2010	●	●	●	○
DS5 Hybrid4	MATT M 2010	●	●	●	○
DS5 Hybrid4	MED17 4 2	●	●	●	●
DS5 Hybrid4	MEVD17 4 2	●	●	●	●
DS5 Hybrid4	MRN	●	●	●	●
DS5 Hybrid4	Multifunction camera or multifunction video camera.	●	●	●	●
DS5 Hybrid4	Multiplexed control panel.	●	●	●	●
DS5 Hybrid4	PADDGO E5	●	●	●	●
DS5 Hybrid4	PADDGO TI E6	●	●	●	●
DS5 Hybrid4	Parking aid.	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
DS5 Hybrid4	Power steering electric pump unit.	●	●	●	●
DS5 Hybrid4	RADIONAV RNEGC	●	●	●	●
DS5 Hybrid4	RD45	●	●	●	●
DS5 Hybrid4	RD5	●	●	●	●
DS5 Hybrid4	RNEG2010	●	●	●	●
DS5 Hybrid4	Rain and Brightness Sensor	●	●	●	●
DS5 Hybrid4	Seat Belts Not Fastened LED Unit (TNB)	●	○	●	○
DS5 Hybrid4	Steering wheel with integral controls (VCI).	●	●	●	●
DS5 Hybrid4	Supply protection and management unit.	●	●	●	●
DS5 Hybrid4	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
DS5 Hybrid4	Telematic navigator.	●	○	●	●
DS5 Hybrid4	Traction battery ECU.	●	●	●	●
DS5 Hybrid4	Trailer relay unit.	●	●	●	●
DS5 Hybrid4	Vibrators control ECU.	●	●	●	●
DS5 Hybrid4	Windscreen wiper.	●	●	●	●
ELYSEE	Airbag	●	○	○	○
ELYSEE	Airbag(Sac SIEMENS)	●	●	●	●
ELYSEE	Anti-lock brake system	●	○	○	●
ELYSEE	Auto gearbox AL4 TA2000	●	●	●	●
ELYSEE	Auto gearbox AL4 TA96	●	●	●	●
ELYSEE	Engine ECU(1.4L KFX BOSCH MP5.2)	●	●	●	●
ELYSEE	Engine ECU(1.6 L NFU BOSCH ME744)	●	●	●	●
ELYSEE	Engine ECU(1.6 L NFZ BOSCH MP5.2)	●	●	●	●
ELYSEE	Transponder	●	○	○	●
EVASION / SYNERGIE	Engine ECU(1.9 L DHX BOSCH AS3-VP20)	●	○	○	●
EVASION / SYNERGIE	Engine ECU(2.0 L RGX BOSCH MP3.2)	●	●	●	●
EVASION / SYNERGIE	Engine ECU(2.1 L P8C LUCAS EPIC)	●	○	○	●
FUKANG	ABS8.1 BOSCH	●	●	●	●
FUKANG	Anti-lock brake system(ABS Bosch 5.3)	●	○	○	●
FUKANG	Auto gearbox AL4 TA2000	●	●	●	●
FUKANG	Auto gearbox AL4 TA96	●	●	●	●
FUKANG	Engine ECU(1.4 L KFX BOSCH MP5.2)	○	●	●	●
FUKANG	Engine ECU(1.6 L NFU BOSCH ME744)	●	●	●	●
FUKANG	Engine ECU(1.6 L NFZ BOSCH MP5.2)	○	●	●	●
FUKANG	Transponder	●	○	○	●
FUKANG 988	ABS8.1 BOSCH	●	●	●	●
FUKANG 988	Anti-lock brake system(ABS Bosch 5.3)	●	○	○	●
FUKANG 988	Auto gearbox AL4 TA2000	●	●	●	●
FUKANG 988	Auto gearbox AL4 TA96	●	●	●	●
FUKANG 988	Engine ECU(1.4 L KFX BOSCH MP5.2)	○	●	●	●
FUKANG 988	Engine ECU(1.6 L NFU BOSCH ME744)	●	●	●	●
FUKANG 988	Engine ECU(1.6 L NFZ BOSCH MP5.2)	○	●	●	●
FUKANG 988	Transponder	●	○	○	●
JUMPER / RELAY	ABS BOSCH	●	○	○	●
JUMPER / RELAY	Engine ECU(2.0L RFL MM48P)	○	●	●	○
JUMPER / RELAY	Engine ECU(2.8 L BOSCH EDC15C7)	○	●	●	○
JUMPER / RELAY	Engine ECU(4HY BOSCH EDC15C7)	○	●	●	○
JUMPER / RELAY	Engine ECU(RHV BOSCH EDC15C7)	○	●	●	○
JUMPER 2 / RELAY 2	Engine ECU(2.0L RFW MM48P)	●	●	●	●
JUMPER 2 / RELAY 2	Engine ECU(2.8 L BOSCH EDC15C7)	○	●	●	○
JUMPER 2 / RELAY 2	Engine ECU(4HY BOSCH EDC15C7)	○	●	●	○
JUMPER 2 / RELAY 2	Engine ECU(EDC16C39 SOFIM 2.3)	●	●	●	●
JUMPER 2 / RELAY 2	Engine ECU(RHV BOSCH EDC15C7)	○	●	●	○
JUMPER 3	heating/ventilation	●	●	●	●
JUMPER 3	ABS80	●	●	●	●
JUMPER 3	ASR80	●	●	●	●
JUMPER 3	Additional heating.	●	●	●	○
JUMPER 3	Built-in Systems Interface (BSI) (Body Computer)	●	●	●	●
JUMPER 3	Driver and passenger airbags.	●	●	●	●
JUMPER 3	EDC16C39	●	●	●	●
JUMPER 3	EDC17CP52	●	●	●	●
JUMPER 3	ESP80	●	●	●	●
JUMPER 3	Electronically managed suspension.	●	●	●	●
JUMPER 3	Instrument panel.	●	●	●	●
JUMPER 3	PUMA	●	●	●	●
JUMPER 3	Parking aid.	●	●	●	●
JUMPER 3	Power steering.	●	●	●	●
JUMPER 3	SAC TRW	●	●	●	●
JUMPER 3	Tachograph.	●	●	●	●
JUMPER 3	Telematics .	●	●	●	●
JUMPER 3 Euro 5	ABS90 F	●	●	●	●
JUMPER 3 Euro 5	Additional heating.	●	●	●	○
JUMPER 3 Euro 5	Air Conditioning	●	●	●	●
JUMPER 3 Euro 5	Airbag.	●	●	●	●
JUMPER 3 Euro 5	Built-in Systems Interface.	●	●	●	●
JUMPER 3 Euro 5	CTM	●	●	●	●
JUMPER 3 Euro 5	EDC17CP52 UDS	●	●	●	●
JUMPER 3 Euro 5	ESP90 F	●	●	●	●
JUMPER 3 Euro 5	Electronically managed suspension.	●	●	●	●
JUMPER 3 Euro 5	Instrument panel	●	●	●	●
JUMPER 3 Euro 5	Lane Departure Warning System	●	●	●	●
JUMPER 3 Euro 5	Parking aid.	●	●	●	●
JUMPER 3 Euro 5	Power steering.	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
JUMPER 3 Euro 5	Radio.	●	●	●	●
JUMPER 3 Euro 5	Radionavigation LTM	●	●	●	●
JUMPER 3 Euro 5	SID208	●	●	●	●
JUMPER 3 Euro 5	Tachograph.	●	●	●	●
JUMPER 3 Euro 5	Trailer relay unit.	●	●	●	●
JUMPER 3 Euro 5	Under inflation detection.	●	●	●	●
JUMPER 3 Minibus	heating/ventilation	●	●	●	●
JUMPER 3 Minibus	ABS80	●	●	●	●
JUMPER 3 Minibus	ASR80	●	●	●	●
JUMPER 3 Minibus	Additional heating.	●	●	●	○
JUMPER 3 Minibus	Built-in Systems Interface.	●	●	●	●
JUMPER 3 Minibus	Driver and passenger airbags.	●	●	●	●
JUMPER 3 Minibus	EDC16C39	●	●	●	●
JUMPER 3 Minibus	EDC17CP52	●	●	●	●
JUMPER 3 Minibus	ESP80	●	●	●	●
JUMPER 3 Minibus	Electronically managed suspension.	●	●	●	●
JUMPER 3 Minibus	Instrument panel.	●	●	●	●
JUMPER 3 Minibus	PUMA	●	●	●	●
JUMPER 3 Minibus	Parking aid.	●	●	●	●
JUMPER 3 Minibus	Power steering.	●	●	●	●
JUMPER 3 Minibus	SAC TRW	●	●	●	●
JUMPER 3 Minibus	Tachograph.	●	●	●	●
JUMPER 3 Minibus	Telematics .	●	●	●	●
JUMPY / DISPATCH	ABS	●	○	○	●
JUMPY / DISPATCH	Additional heating	●	●	●	●
JUMPY / DISPATCH	Auto gearbox	●	●	●	●
JUMPY / DISPATCH	BSI	●	○	○	●
JUMPY / DISPATCH	Engine ECU(1.9 L DHX BOSCH AS3-VP20)	●	○	○	●
JUMPY / DISPATCH	Engine ECU(2.0 L RFN MM48P)	●	●	●	●
JUMPY / DISPATCH	Engine ECU(2.0 L RHW BOSCH EDC15C2)	●	●	●	●
JUMPY / DISPATCH	Engine ECU(2.0 L RHX BOSCH EDC15C2)	●	●	●	●
JUMPY / DISPATCH	Engine ECU(2.0 L RHZ BOSCH EDC15C2)	●	●	●	●
JUMPY / DISPATCH	Engine(1.9 L WJY LUCAS DCN2)	●	●	●	●
JUMPY 2 / DISPATCH 2	ABS electronic distribution	●	○	○	●
JUMPY 2 / DISPATCH 2	Additional heating	●	●	●	●
JUMPY 2 / DISPATCH 2	Airbag	●	●	●	○
JUMPY 2 / DISPATCH 2	Auto gearbox AL4	●	●	●	●
JUMPY 2 / DISPATCH 2	BSI(Passenger compartment protection ecu)	●	○	○	●
JUMPY 2 / DISPATCH 2	Engine ECU(2.0 L RFN MM48P)	●	●	●	●
JUMPY 2 / DISPATCH 2	Engine ECU(2.0 L RHW BOSCH EDC15C2)	●	●	●	●
JUMPY 2 / DISPATCH 2	Engine ECU(2.0 L RHX BOSCH EDC15C2)	●	●	●	●
JUMPY 2 / DISPATCH 2	Engine ECU(2.0 L RHZ BOSCH EDC15C2)	●	●	●	●
JUMPY 2 / DISPATCH 2	Engine(1.9 L WJY LUCAS DCN2)	●	●	●	●
JUMPY 3	Gearbox	●	●	●	●
JUMPY 3	heating/ventilation	●	●	●	●
JUMPY 3	ABS81	●	●	●	●
JUMPY 3	ABS8 BOSCH	●	●	●	●
JUMPY 3	AUTORADIO	●	●	●	●
JUMPY 3	Additional heating.	●	●	●	●
JUMPY 3	Anti-slip mode selector.	●	○	●	●
JUMPY 3	Anti-theft alarm.	●	●	●	●
JUMPY 3	BOITIER NOMADE	●	●	●	●
JUMPY 3	BOITIER TELEMATIQUE	●	●	●	●
JUMPY 3	BSI - Bodywork Conversion Unit	●	●	●	●
JUMPY 3	BSI - Built-in Systems Interface.	●	●	●	●
JUMPY 3	BSI - Engine Relay Unit	●	●	●	●
JUMPY 3	BSI - Trailer relay unit.	●	●	●	●
JUMPY 3	Battery charge status unit.	●	●	●	●
JUMPY 3	CD player.	●	●	●	○
JUMPY 3	DCM35	●	●	●	●
JUMPY 3	DCM35 BR2	●	●	●	●
JUMPY 3	DSG	●	●	●	●
JUMPY 3	DSG UDS	●	●	●	●
JUMPY 3	Driver and passenger airbags.	●	●	●	●
JUMPY 3	EDC16C3	●	●	●	●
JUMPY 3	EDC17C10 BR2	●	●	●	●
JUMPY 3	EMF A	●	●	●	●
JUMPY 3	EMF C	●	●	●	●
JUMPY 3	ESP81	●	●	●	●
JUMPY 3	ESP8 BOSCH	●	●	●	●
JUMPY 3	HDI SID803A	●	●	●	●
JUMPY 3	High frequency receiver.	●	●	●	●
JUMPY 3	Instrument panel.	●	●	●	●
JUMPY 3	KML	●	●	●	●
JUMPY 3	MM6KP	●	●	●	●
JUMPY 3	Parking aid.	●	●	●	●
JUMPY 3	Pneumatic suspension.	●	●	●	●
JUMPY 3	Power steering electric pump unit.	●	●	●	●
JUMPY 3	RADIONAV RNEG	●	●	●	●
JUMPY 3	RD45	●	●	●	●
JUMPY 3	RNEG2010	●	●	●	●
JUMPY 3	Rain and Brightness Sensor	●	●	●	○
JUMPY 3	Rear A/C table.	●	●	●	●
JUMPY 3	Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
NEMO	ABS81	●	●	●	●
NEMO	BVMP	●	●	●	●
NEMO	BVMP MTA	●	●	●	●
NEMO	Built-in Systems Interface.	●	●	●	●
NEMO	Driver and passenger airbags.	●	●	●	●
NEMO	EDC16C34	●	●	●	●
NEMO	ESP81	●	●	●	●
NEMO	ESP90 F	●	●	●	●
NEMO	HDI 8DF2	●	●	●	●
NEMO	HDI 8DF3	●	●	●	●
NEMO	Instrument panel.	●	●	●	●
NEMO	Parking aid.	●	●	●	●
NEMO	Telematics unit.	●	●	●	●
NEMO	V342	●	●	●	●
NEMO	V34P	●	●	●	●
SAXO	ABS	●	○	○	●
SAXO	Additional heating	●	●	●	●
SAXO	Airbag	●	●	●	●
SAXO	Electric motor	●	○	○	○
SAXO	Engine ECU(1.0 L CDY/CDZ BOSCH MA3.1)	●	○	○	●
SAXO	Engine ECU(1.1 L HDY/HDZ BOSCH MA3.1)	●	○	○	●
SAXO	Engine ECU(1.1 L HFX BOSCH M7.4.4)	●	●	●	●
SAXO	Engine ECU(1.4 L KFW SAGEM S2000)	●	●	●	●
SAXO	Engine ECU(1.4 L KFX BOSCH MP7.3)	●	●	●	●
SAXO	Engine ECU(1.4 L KFX MM1AP)	●	○	○	●
SAXO	Engine ECU(1.5L VJX/VJU BOSCH AS4-VP20)	●	●	●	●
SAXO	Engine ECU(1.6 L NFT BOSCH M7.4.4)	●	●	●	●
SAXO	Engine ECU(1.6 L NFX MM1AP)	●	○	○	●
SAXO	Engine ECU(1.6 L NFX MM48P)	●	●	●	●
SAXO	Engine ECU(1.6 L NFZ BOSCH MP5.2)	●	●	●	●
SAXO	Engine ECU(1.6 L NFZ BOSCH MP7.2)	●	●	●	○
SAXO	Transponder VALEO	●	○	○	●
XANTIA	Engine ECU(1.8L LFX BOSCH MP5.1)	●	●	●	●
XANTIA	Engine ECU(1.8L LFX BOSCH MP5.1.1)	●	○	○	●
XANTIA	Engine ECU(1.8L LFX MM1AP)	●	○	○	●
XANTIA	Engine ECU(1.8L LFX SAGEM SL96)	●	○	○	●
XANTIA	Engine ECU(1.9L DHX BOSCH AS3-VP20)	●	○	○	●
XANTIA	Engine ECU(2.0L R6E BOSCH MP5.2)	●	●	●	●
XANTIA	Engine ECU(2.0L RFT BOSCH MP3.2)	●	●	●	●
XANTIA	Engine ECU(2.0L RFV BOSCH MP5.1.1)	●	○	○	●
XANTIA	Engine ECU(2.0L RFV BOSCH MP5.2)	●	●	●	●
XANTIA	Engine ECU(2.0L RFX BOSCH MP3.2)	●	●	●	●
XANTIA	Engine ECU(2.0L RFX BOSCH MP3.2)	●	●	●	●
XANTIA	Engine ECU(2.1L P8C LUCAS EPIC)	●	○	○	●
XANTIA	Engine ECU(3.0L XFZ BOSCH MP7.0)	●	○	○	●
XANTIA 2	Auto gearbox AL4	●	○	○	●
XANTIA 2	Auto gearbox ZF 4HP20	●	●	●	●
XANTIA 2	Engine ECU(1.8 L LFX MM1AP)	○	○	○	●
XANTIA 2	Engine ECU(1.8 L LFX BOSCH MP5.2)	●	●	●	●
XANTIA 2	Engine ECU(1.8 L LFX BOSCH MP7.3)	●	●	●	●
XANTIA 2	Engine ECU(1.8 L LFX SAGEM SL96)	●	○	○	●
XANTIA 2	Engine ECU(1.9 L DHX BOSCH AS3-VP20)	●	○	○	●
XANTIA 2	Engine ECU(2.0 L R6E BOSCH MP5.2)	●	●	●	●
XANTIA 2	Engine ECU(2.0 L RFV BOSCH MP5.2)	●	●	●	●
XANTIA 2	Engine ECU(2.0 L RFX BOSCH MP3.2)	●	●	●	●
XANTIA 2	Engine ECU(2.0 L RHY BOSCH EDC15C2)	●	●	●	●
XANTIA 2	Engine ECU(2.0 L RHZ BOSCH EDC15C2)	●	●	●	●
XANTIA 2	Engine ECU(2.1 L P8C LUCAS EPIC)	●	○	○	●
XANTIA 2	Engine ECU(3.0 L XFZ BOSCH MP7.0)	●	○	○	●
XM	Engine(2.0 L RFZ BOSCH MP5.1)	●	●	●	●
XM	Engine(2.0 L RGY BOSCH MP3.2)	●	●	●	●
XM	Multiplexing	○	●	●	○
XM MULTIPLEXEE	Engine ECU(2.0 L R6E BOSCH MP5.2)	●	●	●	●
XM MULTIPLEXEE	Engine ECU(2.0 L RFV BOSCH MP5.1.1)	●	○	○	●
XM MULTIPLEXEE	Engine ECU(2.0 L RFV BOSCH MP5.2)	●	●	●	●
XM MULTIPLEXEE	Engine ECU(2.0 L RFX BOSCH MP3.2)	●	○	○	●
XM MULTIPLEXEE	Engine ECU(2.1 L P8C LUCAS EPIC)	●	○	○	●
XM MULTIPLEXEE	Engine ECU(2.5 L THY BOSCH MSA11 VP36)	●	○	○	●
XM MULTIPLEXEE	Engine ECU(3.0 L XFZ BOSCH MP7.0)	●	○	○	●
XM MULTIPLEXEE	Engine(2.0 L RFZ BOSCH MP5.1)	●	●	●	●
XM MULTIPLEXEE	Engine(2.0 L RGY BOSCH MP3.2)	●	○	○	●
XSARA	ABS electronic distribution	●	○	○	●
XSARA	ABS mechanical distribution	●	○	○	●
XSARA	Engine ECU(1.4 L KFX BOSCH MP7.3)	●	●	●	●
XSARA	Engine ECU(1.4 L KFX MM1AP)	●	○	○	●
XSARA	Engine ECU(1.4L KFX SAGEM SL96)	●	○	○	●
XSARA	Engine ECU(1.6 L NFZ BOSCH MP5.2)	●	●	●	●
XSARA	Engine ECU(1.6 L NFZ BOSCH MP7.2)	●	●	●	●
XSARA	Engine ECU(1.8 L LFX MM1AP)	●	○	○	●
XSARA	Engine ECU(1.8L LFX SAGEM SL96)	●	○	○	●
XSARA	Engine ECU(1.9 L DHV BOSCH AS3-VP20)	●	○	○	●
XSARA	Engine ECU(2.0 L R6E BOSCH MP5.2)	●	●	●	●
XSARA	Engine ECU(2.0 L RFX MM1AP)	●	○	○	●
XSARA	Engine ECU(2.0 L RFV BOSCH MP5.2)	●	●	●	●
XSARA	Engine ECU(2.0 L RHY BOSCH EDC15C2)	●	●	●	●
XSARA 2	ABS electronic distribution	●	○	○	●

Vehicle Model	System Name	Information	Read TroubleCode	Clear TroubleCode	Read DataStream
XSARA 2	Additional heating	●	●	●	●
XSARA 2	Air conditioning	●	●	●	●
XSARA 2	Airbag	●	●	●	○
XSARA 2	Auto gearbox AL4	●	●	●	●
XSARA 2	BSI - Alarm	●	●	●	●
XSARA 2	BSI - BSI	●	○	○	●
XSARA 2	BSI - Switch module at the steering wheel(Top of column)	●	○	○	●
XSARA 2	CD player	●	●	●	●
XSARA 2	Car-phone	●	●	●	●
XSARA 2	Display or Autopc(AUTOPC)	●	●	●	●
XSARA 2	Driving school mode	●	○	○	●
XSARA 2	Engine ECU(1.4L KFW SAGEM S2000P)	●	●	●	●
XSARA 2	Engine ECU(1.6L NFU BOSCH ME744)	●	●	●	●
XSARA 2	Engine ECU(1.9L WJY LUCAS DCN2)	●	●	●	●
XSARA 2	Engine ECU(2.0 L RHY BOSCH EDC15C2)	●	●	●	●
XSARA 2	Engine ECU(2.0 L RHZ BOSCH EDC15C2)	●	●	●	●
XSARA 2	Engine ECU(2.0L RFN MM48P)	●	●	●	●
XSARA 2	Engine ECU(2.0L RFS MM48P)	●	●	●	●
XSARA 2	Engine ECU(8HZ BOSCH EDC16C3 (DV4))	●	●	●	●
XSARA 2	Engine ECU(RFN MM4MP2)	●	●	●	●
XSARA 2	Engine ECU(RHY SIEMENS SID801)	●	●	●	●
XSARA 2	Instrument panel	●	●	●	●
XSARA 2	Multifunction display A	●	●	●	●
XSARA 2	Multifunction display B	●	●	●	●
XSARA 2	Multifunction display C	●	●	●	●
XSARA 2	Navigation	●	●	●	●
XSARA 2	Parking assistance	●	●	●	●
XSARA 2	Radio post-equipment	●	●	●	●
XSARA PICASSO	ABS electronic distribution	●	○	○	●
XSARA PICASSO	Additional heating	●	●	●	●
XSARA PICASSO	Air conditioning	●	●	●	●
XSARA PICASSO	Airbag	●	●	●	●
XSARA PICASSO	Anti-lock brake system(ESP)	●	●	●	●
XSARA PICASSO	BSI - BSI ECU	●	●	●	●
XSARA PICASSO	CD player	●	●	●	●
XSARA PICASSO	Diesel additive function	●	●	●	●
XSARA PICASSO	Engine ECU(1.6L NFV BOSCH M744)	●	●	●	●
XSARA PICASSO	Engine ECU(1.6L NFZ BOSCH MP7.2)	●	●	●	●
XSARA PICASSO	Engine ECU(1.8L 6FZ SAGEM S2000P)	●	●	●	●
XSARA PICASSO	Engine ECU(2.0 L BOSCH EDC15C2)	●	●	●	●
XSARA PICASSO	Engine ECU(2.0L RFM MM48P)	●	●	●	●
XSARA PICASSO	Engine ECU(6FZ SAGEM S2000PM1)	●	●	●	●
XSARA PICASSO	Engine ECU(6FZ SAGEM S2000PM2)	●	●	●	●
XSARA PICASSO	Engine ECU(N6A BOSCH ME745)	●	●	●	●
XSARA PICASSO	Engine ECU(NFR BOSCH ME745)	●	●	●	●
XSARA PICASSO	Engine ECU(NFS BOSCH ME745)	●	●	●	●
XSARA PICASSO	Engine ECU(NFU BOSCH ME745)	●	●	●	●
XSARA PICASSO	Instrument panel	●	●	●	●
XSARA PICASSO	Left hand side airbag	●	○	○	○
XSARA PICASSO	Multifunction display VDO B	●	●	●	●
XSARA PICASSO	Multifunction display VDO C	●	●	●	●
XSARA PICASSO	Navigation	●	●	●	●
XSARA PICASSO	Radio post-equipment	●	●	●	●
XSARA PICASSO	Right hand side airbag	●	○	○	○
ZX	Engine ECU(1.1 L HDY/HDZ BOSCH MA3.1)	●	○	○	●
ZX	Engine ECU(1.4 L KFX MM1AP)	●	○	○	●
ZX	Engine ECU(1.6 L NFZ BOSCH MP5.2)	●	●	●	●
ZX	Engine ECU(1.8 L LFY BOSCH MP5.2)	●	●	●	●
ZX	Engine ECU(2.0 L RFS MM1AP)	●	○	○	●
ZX	Engine(1.6 L BFZ SAGEM CCM4GJ)	●	○	○	●
ZX	Engine(1.8 L LFZ BOSCH MP5.1)	●	●	●	●
ZX	Engine(2.0 L RFT BOSCH MP3.2)	○	●	●	○
ZX	Engine(2.0 L RFY BOSCH MP3.2)	○	●	●	○