



TabScan - Lexus - V2.90 Diagnostic Coverage

NOTES:

- : This function is supported ▲: This function is the new feature in this version
 ○: This function is not supported ※: This function may be supported which depends on the actual condition of the vehicle

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rx450h	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Rx450h	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Rx450h	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Rx450h	Radar cruise	○	●	●	●	●	0003 0035 0036
Rx450h	Occupant detection	○	●	●	●	●	0032
Rx450h	Telematics	○	●	●	●	●	0048 0124
Rx450h	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Rx450h	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Sc430	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Sc430	AFS	○	●	●	●	●	
Sc430	Air conditioner	○	●	●	●	●	0065
Sc430	Body no.2	○	●	●	●	●	
Sc430	Body no.3	○	●	●	●	●	
Sc430	Body no.4	○	●	○	●	●	
Sc430	Body no.5	○	○	○	●	●	
Sc430	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Sc430	Combination switch	○	○	○	●	●	
Sc430	Cruise control	○	●	●	●	●	0003 0036
Sc430	Driver door	○	●	●	●	●	
Sc430	Driver seat	○	○	○	●	●	
Sc430	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Sc430	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Sc430	Gateway	○	●	●	●	●	0002 0019 0007 0020
Sc430	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Sc430	Occupant detection	○	●	●	●	●	0032
Sc430	Passenger door	○	●	●	●	●	
Sc430	Passenger seat	○	○	○	●	●	
Sc430	Retractable hardtop	○	●	●	●	●	
Sc430	Srs airbag	○	●	●	●	●	0006
Sc430	Steering pad switch	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Sc430	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Sc430	Tilt&telescopic	○	●	●	●	●	0026
Sc430	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Ct200h	A/C(CAN)	○	●	●	●	●	
Ct200h	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Ct200h	Electric power steering	○	●	●	●	●	
Ct200h	HV	○	●	●	●	●	0002 0006
Ct200h	Meter (can)	○	●	●	●	●	
Ct200h	Mirror	○	●	●	●	●	
Ct200h	Security (can)	○	●	●	●	●	
Ct200h	Pre-crash 1 (can)	○	●	●	●	●	
Ct200h	Radar cruise (built-dss1)	○	●	●	●	●	
Ct200h	Two pre-crash	○	●	●	●	●	
Gs250	A/C(CAN)	○	●	●	●	●	
Gs250	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Gs250	Charging control	○	●	●	●	●	
Gs250	Electric power steering	○	●	●	●	●	
Gs250	Gateway	○	●	●	●	●	0002 0019 0007 0020
Gs250	Meter (can)	○	●	●	●	●	
Gs250	Pre-crash 1 (can)	○	●	●	●	●	
Gs250	Radar cruise (built-dss1)	○	●	●	●	●	
Gs250	Two pre-crash	○	●	●	●	●	
Gs300h	A/C(CAN)	○	●	●	●	●	
Gs300h	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Gs300h	Cruise control	○	●	●	●	●	0003 0036
Gs300h	Electric power steering	○	●	●	●	●	
Gs300h	Grille shutter	○	●	●	●	●	
Gs300h	HV	○	●	●	●	●	0002 0006
Gs300h	Meter (can)	○	●	●	●	●	
Gs300h	Vehicle proximity notification system	○	●	●	●	●	
Gs300h	Pre-crash 1 (can)	○	●	●	●	●	
Gs300h	Radar cruise (built-dss1)	○	●	●	●	●	
Gs300h	Two pre-crash	○	●	●	●	●	
Gs350	4WD(CAN)	○	●	●	●	●	
Gs350	A/C(CAN)	○	●	●	●	●	
Gs350	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Gs350	Charging control	○	●	●	●	●	
Gs350	Electric power steering	○	●	●	●	●	
Gs350	Gateway	○	●	●	●	●	0002 0019 0007 0020
Gs350	Meter (can)	○	●	●	●	●	
Gs350	Pre-crash 1 (can)	○	●	●	●	●	
Gs350	Radar cruise (built-dss1)	○	●	●	●	●	
Gs350	Two pre-crash	○	●	●	●	●	
Gs350	A/C(SIL)	○	●	●	●	●	
Gs350	AFS(SIL)	○	●	●	●	●	0043

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Gs350	Air suspension-ahc-tems	○	●	●	●	●	
Gs350	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Gs350	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Gs350	Meter	○	○	○	●	●	0172 0006 0174 0072
Gs350	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Gs350	Srs airbag(sil2)	○	●	●	●	●	0006
Gs350	Accessory gateway	○	●	●	●	●	0002
Gs350	Back guide monitor ipa	○	●	●	●	●	
Gs430	A/C(SIL)	○	●	●	●	●	
Gs430	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Gs430	AFS(SIL)	○	●	●	●	●	0043
Gs430	Air suspension-ahc-tems	○	●	●	●	●	
Gs430	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Gs430	Electric power steering	○	●	●	●	●	
Gs430	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Gs430	Lane keeping assist	○	●	●	●	●	0153
Gs430	Meter	○	○	○	●	●	0172 0006 0174 0072
Gs430	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Gs430	Srs airbag(sil2)	○	●	●	●	●	0006
Gs450h	A/C(CAN)	○	●	●	●	●	
Gs450h	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Gs450h	Electric power steering	○	●	●	●	●	
Gs450h	Grille shutter	○	●	●	●	●	
Gs450h	HV	○	●	●	●	●	0002 0006
Gs450h	Meter (can)	○	●	●	●	●	
Gs450h	Pre-crash 1 (can)	○	●	●	●	●	
Gs450h	Radar cruise (built-dss1)	○	●	●	●	●	
Gs450h	Two pre-crash	○	●	●	●	●	
Gs450h	A/C(SIL)	○	●	●	●	●	
Gs450h	AFS(SIL)	○	●	●	●	●	0043
Gs450h	Air suspension-ahc-tems	○	●	●	●	●	
Gs450h	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Gs450h	HV(CAN)	○	●	●	●	●	
Gs450h	Meter	○	○	○	●	●	0172 0006 0174 0072
Gs450h	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Gs450h	Srs airbag(sil2)	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Gs450h	Accessory gateway	○	●	●	●	●	0002
Gs450h	Back guide monitor ipa	○	●	●	●	●	
Gs460	A/C(SIL)	○	●	●	●	●	
Gs460	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Gs460	AFS(SIL)	○	●	●	●	●	0043
Gs460	Accessory gateway	○	●	●	●	●	0002
Gs460	Air suspension-ahc-tems	○	●	●	●	●	
Gs460	Back guide monitor ipa	○	●	●	●	●	
Gs460	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Gs460	Electric power steering	○	●	●	●	●	
Gs460	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Gs460	Gateway	○	●	●	●	●	0002 0019 0007 0020
Gs460	Lane keeping assist	○	●	●	●	●	0153
Gs460	Meter	○	○	○	●	●	0172 0006 0174 0072
Gs460	Pre-crash 1 (can)	○	●	●	●	●	
Gs460	Srs airbag(sil2)	○	●	●	●	●	0006
Hs250h	A/C(CAN)	○	●	●	●	●	
Hs250h	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Hs250h	Back guide monitor ipa	○	●	●	●	●	
Hs250h	Cruise control	○	●	●	●	●	0003 0036
Hs250h	Electric power steering	○	●	●	●	●	
Hs250h	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Hs250h	HV(CAN)	○	●	●	●	●	
Hs250h	Meter (can)	○	●	●	●	●	
Hs250h	Mirror	○	●	●	●	●	
Hs250h	Passenger seat	○	●	●	●	●	
Hs250h	Active headrest l	○	●	●	●	●	
Hs250h	Active headrest r	○	●	●	●	●	
Hs250h	Pre-crash 1 (can)	○	●	●	●	●	
Hs250h	Two pre-crash	○	●	●	●	●	
IS350C	A/C(SIL)	○	●	●	●	●	
IS350C	ABS-VSC-TRC(CAN)	○	●	●	●	●	
IS350C	Accessory gateway	○	●	●	●	●	0002
IS350C	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
IS350C	Electric power steering	○	●	●	●	●	
IS350C	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
IS350C	Meter	○	○	○	●	●	0172 0006 0174 0072
IS350C	Mirror	○	○	○	●	●	
IS350C	Pre-crash 1 (can)	○	●	●	●	●	
Is f	A/C(SIL)	○	●	●	●	●	
Is f	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Is f	AFS(SIL)	○	●	●	●	●	0043
Is f	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Is f	Electric power steering	○	●	●	●	●	
Is f	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Is f	Meter	○	○	○	●	●	0172 0006 0174 0072
Is f	Mirror	○	○	○	●	●	
Is f	Srs airbag(sil2)	○	●	●	●	●	0006
Is f	Pre-crash 1 (can)	○	●	●	●	●	
Is f	Back guide monitor ipa	○	●	●	●	●	
Is f	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Is f	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Is250	4WD(CAN)	○	●	●	●	●	
Is250	A/C(CAN)	○	●	●	●	●	
Is250	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Is250	Electric power steering	○	●	●	●	●	
Is250	Meter (can)	○	●	●	●	●	
Is250	Mirror	○	●	●	●	●	
Is250	Radar cruise (built-dss1)	○	●	●	●	●	
Is250	Two pre-crash	○	●	●	●	●	
Is250	A/C(SIL)	○	●	●	●	●	
Is250	AFS(SIL)	○	●	●	●	●	0043
Is250	Back guide monitor ipa	○	●	●	●	●	
Is250	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Is250	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Is250	Meter	○	○	○	●	●	0172 0006 0174 0072
Is250	Mirror	○	○	○	●	●	
Is250	Srs airbag(sil2)	○	●	●	●	●	0006
Is250	Pre-crash 1 (can)	○	●	●	●	●	
Is250	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Is250c	A/C(SIL)	○	●	●	●	●	
Is250c	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Is250c	AFS(SIL)	○	●	●	●	●	0043
Is250c	Back guide monitor ipa	○	●	●	●	●	
Is250c	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Is250c	Electric power steering	○	●	●	●	●	
Is250c	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Is250c	Meter	○	○	○	●	●	0172 0006 0174 0072
Is250c	Mirror	○	○	○	●	●	
Is250c	Pre-crash 1 (can)	○	●	●	●	●	
Is300h	A/C(CAN)	○	●	●	●	●	
Is300h	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Is300h	Accessory gateway	○	●	●	●	●	0002
Is300h	Cruise control	○	●	●	●	●	0003 0036
Is300h	Electric power steering	○	●	●	●	●	
Is300h	HV	○	●	●	●	●	0002 0006
Is300h	Meter (can)	○	●	●	●	●	
Is300h	Mirror	○	●	●	●	●	
Is300h	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Is300h	Vehicle proximity notification system	○	●	●	●	●	
Is300h	Radar cruise (built-dss1)	○	●	●	●	●	
Is300h	Two pre-crash	○	●	●	●	●	
Is350	A/C(CAN)	○	●	●	●	●	
Is350	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Is350	Electric power steering	○	●	●	●	●	
Is350	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Is350	Meter (can)	○	●	●	●	●	
Is350	Mirror	○	●	●	●	●	
Is350	Multi bus gateway	○	●	●	●	●	
Is350	Multi bus monitor no.1	○	●	●	●	●	0002
Is350	Multi bus monitor no.2	○	●	●	●	●	0002
Is350	Radar cruise (built-dss1)	○	●	●	●	●	
Is350	Two pre-crash	○	●	●	●	●	
Is350	4WD(CAN)	○	●	●	●	●	
Is350	A/C(SIL)	○	●	●	●	●	
Is350	AFS(SIL)	○	●	●	●	●	0043
Is350	Back guide monitor ipa	○	●	●	●	●	
Is350	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Is350	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Is350	Meter	○	○	○	●	●	0172 0006 0174 0072
Is350	Mirror	○	○	○	●	●	
Is350	Srs airbag(sil2)	○	●	●	●	●	0006
Is350	Pre-crash 1 (can)	○	●	●	●	●	
Is350	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Lfa	A/C(CAN)	○	●	●	●	●	
Lfa	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Lfa	Electric power steering	○	●	●	●	●	
Lfa	Engine (rh bank)	○	●	●	●	●	0006 0016
Lfa	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Lfa	Immobilizer	○	●	●	●	●	
Lfa	Meter (can)	○	●	●	●	●	
Lfa	Security (can)	○	●	●	●	●	
Ls460	A/C(CAN)	○	●	●	●	●	
Ls460	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Ls460	Back guide monitor ipa	○	●	●	●	●	
Ls460	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Ls460	Electric power steering	○	●	●	●	●	
Ls460	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Ls460	Meter (can)	○	●	●	●	●	
Ls460	Remote security	○	●	●	●	●	
Ls460	Pre-crash 1 (can)	○	●	●	●	●	
Ls460	Radar cruise (built-dss1)	○	●	●	●	●	
Ls600h	A/C(CAN)	○	●	●	●	●	
Ls600h	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Ls600h	Back guide monitor ipa	○	●	●	●	●	
Ls600h	Electric power steering	○	●	●	●	●	
Ls600h	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Ls600h	HV(CAN)	○	●	●	●	●	
Ls600h	Meter (can)	○	●	●	●	●	
Ls600h	Remote security	○	●	●	●	●	
Ls600h	Pre-crash 1 (can)	○	●	●	●	●	
Ls600h	Radar cruise (built-dss1)	○	●	●	●	●	
Rc-f	A/C(CAN)	○	●	●	●	●	
Rc-f	ASC	○	●	●	●	●	
Rc-f	Accessory gateway	○	●	●	●	●	0002
Rc-f	Cruise control	○	●	●	●	●	0003 0036
Rc-f	Electric power steering	○	●	●	●	●	
Rc-f	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Rc-f	Meter (can)	○	●	●	●	●	
Rc-f	Mirror	○	●	●	●	●	
Rc-f	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Rc-f	Radar cruise (built-dss1)	○	●	●	●	●	
Rc-f	Two pre-crash	○	●	●	●	●	
Rx270	A/C(CAN)	○	●	●	●	●	
Rx270	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Rx270	Back guide monitor ipa	○	●	●	●	●	
Rx270	Electric power steering	○	●	●	●	●	
Rx270	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Rx270	Meter (can)	○	●	●	●	●	
Rx270	Mirror	○	●	●	●	●	
Rx270	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Rx350	4WD(CAN)	○	●	●	●	●	
Rx350	A/C(CAN)	○	●	●	●	●	
Rx350	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Rx350	Back guide monitor ipa	○	●	●	●	●	
Rx350	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Rx350	Electric power steering	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rx350	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Rx350	Meter (can)	○	●	●	●	●	
Rx350	Mirror	○	●	●	●	●	
Rx350	Pre-crash 1 (can)	○	●	●	●	●	
Rx350	Two pre-crash	○	●	●	●	●	
Rx450h	A/C(CAN)	○	●	●	●	●	
Rx450h	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Rx450h	Back guide monitor ipa	○	●	●	●	●	
Rx450h	Electric power steering	○	●	●	●	●	
Rx450h	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Rx450h	HV(CAN)	○	●	●	●	●	
Rx450h	Meter (can)	○	●	●	●	●	
Rx450h	Mirror	○	●	●	●	●	
Rx450h	Pre-crash 1 (can)	○	●	●	●	●	
Rx450h	Radar cruise (built-dss1)	○	●	●	●	●	
Rx450h	Two pre-crash	○	●	●	●	●	
Sc430	A/C(SIL)	○	●	●	●	●	
Sc430	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Sc430	AFS(SIL)	○	●	●	●	●	0043
Sc430	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Sc430	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Sc430	Immobilizer	○	●	●	●	●	
Sc430	Meter	○	○	○	●	●	0172 0006 0174 0072
Sc430	Security (sil)	○	●	●	●	●	
Sc430	Srs airbag(sil)	○	●	●	●	●	0006
Sc430	Srs airbag(sil2)	○	●	●	●	●	0006
Sc430	Accessory gateway	○	●	●	●	●	0002
Ct200h	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Ct200h	Air conditioner	○	●	●	●	●	0065
Ct200h	Clearance sonar	○	●	●	●	●	0046
Ct200h	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Ct200h	D-door motor	○	●	●	●	●	0016
Ct200h	Driver seat	○	●	●	●	●	
Ct200h	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Ct200h	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Ct200h	HI autoleveling	○	●	●	●	●	0042 0083 0056
Ct200h	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Ct200h	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Ct200h	Master switch	○	●	●	●	●	0016
Ct200h	Mirror l	○	●	●	●	●	
Ct200h	Mirror r	○	●	●	●	●	
Ct200h	Navigation system	○	●	●	●	●	
Ct200h	Occupant detection	○	●	●	●	●	0032
Ct200h	P-door motor	○	●	●	●	●	0016
Ct200h	Pm1 gateway	○	●	●	●	●	0002
Ct200h	Pm2 gateway	○	●	●	●	●	0002
Ct200h	Power source control	○	●	●	●	●	0041
Ct200h	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Ct200h	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Ct200h	Radar cruise	○	●	●	●	●	0003 0035 0036
Ct200h	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Ct200h	Rl-door motor	○	●	●	●	●	0016
Ct200h	Rr-door motor	○	●	●	●	●	0016
Ct200h	Sliding roof	○	●	●	●	●	
Ct200h	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Ct200h	Srs airbag	○	●	●	●	●	0006
Ct200h	Telematics	○	●	●	●	●	0048 0124
Ct200h	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Ct200h	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Ct200h	Transmission control	○	●	●	●	●	
Ct200h	Advanced parking guidance system	○	●	●	●	●	
Ct200h	Vehicle proximity notification system	○	●	●	●	●	
Es300	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Es300	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Es300	Srs airbag	○	●	●	●	●	0006
Es300	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Es300	Body	○	●	●	●	●	
Es300	Cruise control	○	●	●	●	●	0003 0036
Es300	Driver door	○	●	●	●	●	
Es300	EMS	○	●	●	●	●	0054 0006 0158 0152
Es300	Passenger door	○	●	●	●	●	
Es300	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Es300h	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Es300h	Air conditioner	○	●	●	●	●	0065
Es300h	Back door	○	●	●	●	●	
Es300h	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Es300h	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Es300h	Clearance sonar	○	●	●	●	●	0046
Es300h	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Es300h	D-door motor	○	●	●	●	●	0016
Es300h	Driver seat	○	●	●	●	●	
Es300h	EMPS	○	●	●	●	●	0006 0025
Es300h	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Es300h	HI autoleveling	○	●	●	●	●	0042 0083 0056
Es300h	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Es300h	Lane departure alert	○	●	●	●	●	
Es300h	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Es300h	Master switch	○	●	●	●	●	0016
Es300h	Mirror l	○	●	●	●	●	
Es300h	Mirror r	○	●	●	●	●	
Es300h	Navigation system	○	●	●	●	●	
Es300h	Occupant detection	○	●	●	●	●	0032
Es300h	P-door motor	○	●	●	●	●	0016
Es300h	Passenger seat	○	●	●	●	●	
Es300h	Pml gateway	○	●	●	●	●	0002
Es300h	Power source control	○	●	●	●	●	0041
Es300h	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Es300h	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Es300h	Radar cruise	○	●	●	●	●	0003 0035 0036
Es300h	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Es300h	Rl-door motor	○	●	●	●	●	0016
Es300h	Rr-door motor	○	●	●	●	●	0016
Es300h	Sliding roof	○	●	●	●	●	
Es300h	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Es300h	Srs airbag	○	●	●	●	●	0006
Es300h	Telematics	○	●	●	●	●	0048 0124
Es300h	Tilt&telescopic	○	●	●	●	●	0026
Es300h	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Es330	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Es330	Body	○	●	●	●	●	
Es330	Cruise control	○	●	●	●	●	0003 0036
Es330	Driver door	○	●	●	●	●	
Es330	EMS	○	●	●	●	●	0054 0006 0158 0152
Es330	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Es330	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Es330	Occupant detection	○	●	●	●	●	0032
Es330	Passenger door	○	●	●	●	●	
Es330	Srs airbag	○	●	●	●	●	0006
Es330	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Es350	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Es350	AFS	○	●	●	●	●	
Es350	Air conditioner	○	●	●	●	●	0065
Es350	Clearance sonar	○	●	●	●	●	0046
Es350	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Es350	D-door motor	○	●	●	●	●	0016
Es350	Driver seat	○	●	●	●	●	
Es350	E-ACM	○	●	●	●	●	
Es350	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Es350	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Es350	Gateway	○	●	●	●	●	0002 0019 0007 0020

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Es350	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Es350	Master switch	○	●	●	●	●	0016
Es350	Mirror	○	●	●	●	●	
Es350	Occupant detection	○	●	●	●	●	0032
Es350	P-door motor	○	●	●	●	●	0016
Es350	Passenger seat	○	●	●	●	●	
Es350	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Es350	Radar cruise	○	●	●	●	●	0003 0035 0036
Es350	Rl-door motor	○	●	●	●	●	0016
Es350	Rr-door motor	○	●	●	●	●	0016
Es350	Sliding roof	○	●	●	●	●	
Es350	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Es350	Srs airbag	○	●	●	●	●	0006
Es350	Tilt&telescopic	○	●	●	●	●	0026
Es350	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Es350	Navigation system	○	●	●	●	●	
Es350	Telematics	○	●	●	●	●	0048 0124
Es350	Cruise control	○	●	●	●	●	0003 0036
Es350	Back door	○	●	●	●	●	
Es350	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Es350	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Es350	EMPS	○	●	●	●	●	0006 0025
Es350	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Es350	Lane departure alert	○	●	●	●	●	
Es350	Mirror l	○	●	●	●	●	
Es350	Mirror r	○	●	●	●	●	
Es350	Power source control	○	●	●	●	●	0041
Es350	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Es350	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Es350	Starting control	○	●	●	●	●	
GX470	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
GX470	Air suspension	○	●	●	●	●	0054 0006 0158 0152
GX470	Body	○	●	●	●	●	
GX470	Body no.2	○	●	●	●	●	
GX470	Cruise control	○	●	●	●	●	0003 0036
GX470	Driver door	○	●	●	●	●	
GX470	Driver seat	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
GX470	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
GX470	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
GX470	Mirror	○	○	○	●	●	
GX470	Rain sensor	○	○	○	●	●	
GX470	Srs airbag	○	●	●	●	●	0006
GX470	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
GX470	Tilt&telescopic	○	●	●	●	●	0026
GX470	Wiper	○	○	○	●	●	
GX470	KDSS	○	●	●	●	●	0006 0103
GX470	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
GX470	Occupant detection	○	●	●	●	●	0032
Gs300	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Gs300	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Gs300	Air conditioner	○	●	●	●	●	0065
Gs300	Body	○	●	●	●	●	
Gs300	Body no.2	○	○	○	●	●	
Gs300	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Gs300	Cruise control	○	●	●	●	●	0003 0036
Gs300	Driver door	○	●	●	●	●	
Gs300	Driver seat	○	○	○	●	●	
Gs300	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Gs300	Passenger door	○	●	●	●	●	
Gs300	Rear left door	○	●	●	●	●	
Gs300	Rear right door	○	●	●	●	●	
Gs300	Sliding roof	○	○	○	●	●	
Gs300	Srs airbag	○	●	●	●	●	0006
Gs300	Tilt&telescopic	○	●	●	●	●	0026
Gs300	AFS	○	●	●	●	●	
Gs300	Body no.3	○	●	●	●	●	
Gs300	Body no.4	○	●	●	●	●	
Gs300	Body no.5	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Gs300	Clearance sonar	○	●	●	●	●	0046
Gs300	Combination switch	○	○	○	●	●	
Gs300	D-seat sw	○	○	○	●	●	
Gs300	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Gs300	EMPS	○	●	●	●	●	0006 0025
Gs300	EMS	○	●	●	●	●	0054 0006 0158 0152
Gs300	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Gs300	Four wheel drive	○	●	●	●	●	0016 0081
Gs300	Gateway	○	●	●	●	●	0002 0019 0007 0020
Gs300	Master switch	○	○	○	●	●	0016
Gs300	Passenger seat	○	○	○	●	●	
Gs300	Power source control	○	●	●	●	●	0041
Gs300	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Gs300	Radar cruise	○	●	●	●	●	0003 0035 0036
Gs300	Rain sensor	○	○	○	●	●	
Gs300	Smart access	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138
Gs300	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Gs350	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Gs350	AFS	○	●	●	●	●	
Gs350	Air conditioner	○	●	●	●	●	0065
Gs350	Body	○	●	●	●	●	
Gs350	Body no.3	○	●	●	●	●	
Gs350	Body no.4	○	●	●	●	●	
Gs350	Body no.5	○	○	○	●	●	
Gs350	Clearance sonar	○	●	●	●	●	0046
Gs350	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Gs350	Combination switch	○	○	○	●	●	
Gs350	D-seat sw	○	○	○	●	●	
Gs350	Driver door	○	●	●	●	●	
Gs350	Driver seat	○	○	○	●	●	
Gs350	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Gs350	EMPS	○	●	●	●	●	0006 0025
Gs350	EMS	○	●	●	●	●	0054 0006 0158 0152
Gs350	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Gs350	Four wheel drive	○	●	●	●	●	0016 0081
Gs350	Gateway bean	○	●	●	●	●	0002
Gs350	Gateway can	○	●	●	●	●	0002
Gs350	Master switch	○	○	○	●	●	0016

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Gs350	Occupant detection	○	●	●	●	●	0032
Gs350	Passenger door	○	●	●	●	●	
Gs350	Passenger seat	○	○	○	●	●	
Gs350	Power source control	○	●	●	●	●	0041
Gs350	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Gs350	Radar cruise	○	●	●	●	●	0003 0035 0036
Gs350	Rain sensor	○	○	○	●	●	
Gs350	Rear left door	○	●	●	●	●	
Gs350	Rear right door	○	●	●	●	●	
Gs350	Sliding roof	○	○	○	●	●	
Gs350	Smart access	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138
Gs350	Srs airbag	○	●	●	●	●	0006
Gs350	Tilt&telescopic	○	●	●	●	●	0026
Gs350	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Gs350	Stabilizer	○	●	●	●	●	
Gs350	Telematics	○	●	●	●	●	0048 0124
Gs350	VGRS	○	●	●	●	●	0005 0006
Gs350	Advanced parking guidance system	○	●	●	●	●	
Gs350	Navigation system	○	●	●	●	●	
Gs350	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Gs350	Back door	○	●	●	●	●	
Gs350	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Gs350	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Gs350	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Gs350	D-door motor	○	●	●	●	●	0016
Gs350	DRS	○	●	●	●	●	0017 0006 0018
Gs350	Driver seat	○	●	●	●	●	
Gs350	Electric parking brake	○	●	●	●	●	0006 0016
Gs350	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Gs350	Front left door	○	●	●	●	●	
Gs350	Front right door	○	●	●	●	●	
Gs350	Lane keeping assist	○	●	●	●	●	0153
Gs350	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Gs350	Master switch	○	●	●	●	●	0016
Gs350	Multi bus gateway	○	●	●	●	●	
Gs350	Multi bus monitor no.1	○	●	●	●	●	0002
Gs350	Multi bus monitor no.2	○	●	●	●	●	0002
Gs350	Night view	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Gs350	P-door motor	○	●	●	●	●	0016
Gs350	Passenger seat	○	●	●	●	●	
Gs350	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Gs350	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Gs350	Rl-door motor	○	●	●	●	●	0016
Gs350	Rr-door motor	○	●	●	●	●	0016
Gs350	Sliding roof	○	●	●	●	●	
Gs350	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Gs350	Starting control	○	●	●	●	●	
Gs350	Cruise control	○	●	●	●	●	0003 0036
Gs400	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Gs400	Air conditioner	○	●	●	●	●	0065
Gs400	Body	○	●	●	●	●	
Gs400	Body no.2	○	○	○	●	●	
Gs400	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Gs400	Cruise control	○	●	●	●	●	0003 0036
Gs400	Driver door	○	●	●	●	●	
Gs400	Driver seat	○	○	○	●	●	
Gs400	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Gs400	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Gs400	Passenger door	○	●	●	●	●	
Gs400	Rear left door	○	●	●	●	●	
Gs400	Rear right door	○	●	●	●	●	
Gs400	Sliding roof	○	○	○	●	●	
Gs400	Srs airbag	○	●	●	●	●	0006
Gs400	Tilt&telescopic	○	●	●	●	●	0026
Gs430	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Gs430	Air conditioner	○	●	●	●	●	0065
Gs430	Body	○	●	●	●	●	
Gs430	Body no.2	○	○	○	●	●	
Gs430	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Gs430	Cruise control	○	●	●	●	●	0003 0036
Gs430	Driver door	○	●	●	●	●	
Gs430	Driver seat	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Gs430	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Gs430	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Gs430	Passenger door	○	●	●	●	●	
Gs430	Rear left door	○	●	●	●	●	
Gs430	Rear right door	○	●	●	●	●	
Gs430	Sliding roof	○	○	○	●	●	
Gs430	Srs airbag	○	●	●	●	●	0006
Gs430	Steering pad switch	○	○	○	●	●	
Gs430	Tilt&telescopic	○	●	●	●	●	0026
Gs430	AFS	○	●	●	●	●	
Gs430	Body no.3	○	●	●	●	●	
Gs430	Body no.4	○	●	●	●	●	
Gs430	Body no.5	○	○	○	●	●	
Gs430	Clearance sonar	○	●	●	●	●	0046
Gs430	Combination switch	○	○	○	●	●	
Gs430	D-seat sw	○	○	○	●	●	
Gs430	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Gs430	EMPS	○	●	●	●	●	0006 0025
Gs430	EMS	○	●	●	●	●	0054 0006 0158 0152
Gs430	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Gs430	Four wheel drive	○	●	●	●	●	0016 0081
Gs430	Gateway	○	●	●	●	●	0002 0019 0007 0020
Gs430	Master switch	○	○	○	●	●	0016
Gs430	Passenger seat	○	○	○	●	●	
Gs430	Power source control	○	●	●	●	●	0041
Gs430	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Gs430	Radar cruise	○	●	●	●	●	0003 0035 0036
Gs430	Rain sensor	○	○	○	●	●	
Gs430	Smart access	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138
Gs430	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Gs430	VGRS	○	●	●	●	●	0005 0006
Gs430	Gateway bean	○	●	●	●	●	0002
Gs430	Gateway can	○	●	●	●	●	0002
Gs430	Occupant detection	○	●	●	●	●	0032

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Gs450h	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Gs450h	AFS	○	●	●	●	●	
Gs450h	Air conditioner	○	●	●	●	●	0065
Gs450h	Body	○	●	●	●	●	
Gs450h	Body no.3	○	●	●	●	●	
Gs450h	Body no.4	○	●	●	●	●	
Gs450h	Body no.5	○	○	○	●	●	
Gs450h	Clearance sonar	○	●	●	●	●	0046
Gs450h	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Gs450h	Combination switch	○	○	○	●	●	
Gs450h	D-seat sw	○	○	○	●	●	
Gs450h	Driver door	○	●	●	●	●	
Gs450h	Driver seat	○	○	○	●	●	
Gs450h	EMPS	○	●	●	●	●	0006 0025
Gs450h	EMS	○	●	●	●	●	0054 0006 0158 0152
Gs450h	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Gs450h	Gateway	○	●	●	●	●	0002 0019 0007 0020
Gs450h	Hv gateway	○	●	●	●	●	0002
Gs450h	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Gs450h	Master switch	○	○	○	●	●	0016
Gs450h	Occupant detection	○	●	●	●	●	0032
Gs450h	Passenger door	○	●	●	●	●	
Gs450h	Passenger seat	○	○	○	●	●	
Gs450h	Power source control	○	●	●	●	●	0041
Gs450h	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Gs450h	Radar cruise	○	●	●	●	●	0003 0035 0036
Gs450h	Rain sensor	○	○	○	●	●	
Gs450h	Rear left door	○	●	●	●	●	
Gs450h	Rear right door	○	●	●	●	●	
Gs450h	Sliding roof	○	○	○	●	●	
Gs450h	Smart access	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138
Gs450h	Srs airbag	○	●	●	●	●	0006
Gs450h	Stabilizer	○	●	●	●	●	
Gs450h	Tilt&telescopic	○	●	●	●	●	0026
Gs450h	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Gs450h	VGRS	○	●	●	●	●	0005 0006
Gs450h	Advanced parking guidance system	○	●	●	●	●	
Gs450h	Navigation system	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Gs450h	Telematics	○	●	●	●	●	0048 0124
Gs450h	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Gs450h	Back door	○	●	●	●	●	
Gs450h	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Gs450h	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Gs450h	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Gs450h	D-door motor	○	●	●	●	●	0016
Gs450h	DRS	○	●	●	●	●	0017 0006 0018
Gs450h	Driver seat	○	●	●	●	●	
Gs450h	Electric parking brake	○	●	●	●	●	0006 0016
Gs450h	Front left door	○	●	●	●	●	
Gs450h	Front right door	○	●	●	●	●	
Gs450h	Lane keeping assist	○	●	●	●	●	0153
Gs450h	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Gs450h	Master switch	○	●	●	●	●	0016
Gs450h	Multi bus gateway	○	●	●	●	●	
Gs450h	Multi bus monitor no.1	○	●	●	●	●	0002
Gs450h	Multi bus monitor no.2	○	●	●	●	●	0002
Gs450h	Night view	○	●	●	●	●	
Gs450h	P-door motor	○	●	●	●	●	0016
Gs450h	Passenger seat	○	●	●	●	●	
Gs450h	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Gs450h	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Gs450h	Rl-door motor	○	●	●	●	●	0016
Gs450h	Rr-door motor	○	●	●	●	●	0016
Gs450h	Sliding roof	○	●	●	●	●	
Gs450h	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Gs450h	Vehicle proximity notification system	○	●	●	●	●	
Gs460	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Gs460	AFS	○	●	●	●	●	
Gs460	Air conditioner	○	●	●	●	●	0065
Gs460	Body	○	●	●	●	●	
Gs460	Body no.3	○	●	●	●	●	
Gs460	Body no.4	○	●	●	●	●	
Gs460	Body no.5	○	○	○	●	●	
Gs460	Clearance sonar	○	●	●	●	●	0046
Gs460	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Gs460	Combination switch	○	○	○	●	●	
Gs460	D-seat sw	○	○	○	●	●	
Gs460	Driver door	○	●	●	●	●	
Gs460	Driver seat	○	○	○	●	●	
Gs460	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Gs460	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Gs460	EMS	○	●	●	●	●	0054 0006 0158 0152
Gs460	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Gs460	Four wheel drive	○	●	●	●	●	0016 0081
Gs460	Gateway bean	○	●	●	●	●	0002
Gs460	Gateway can	○	●	●	●	●	0002
Gs460	Master switch	○	○	○	●	●	0016
Gs460	Occupant detection	○	●	●	●	●	0032
Gs460	Passenger door	○	●	●	●	●	
Gs460	Passenger seat	○	○	○	●	●	
Gs460	Power source control	○	●	●	●	●	0041
Gs460	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Gs460	Radar cruise	○	●	●	●	●	0003 0035 0036
Gs460	Rain sensor	○	○	○	●	●	
Gs460	Rear left door	○	●	●	●	●	
Gs460	Rear right door	○	●	●	●	●	
Gs460	Sliding roof	○	○	○	●	●	
Gs460	Smart access	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138
Gs460	Srs airbag	○	●	●	●	●	0006
Gs460	Stabilizer	○	●	●	●	●	
Gs460	Telematics	○	●	●	●	●	0048 0124
Gs460	Tilt&telescopic	○	●	●	●	●	0026
Gs460	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Gs460	VGRS	○	●	●	●	●	0005 0006
Gs460	Advanced parking guidance system	○	●	●	●	●	
Gs460	Navigation system	○	●	●	●	●	
Gx460	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Gx460	AFS	○	●	●	●	●	
Gx460	Advanced parking guidance system	○	●	●	●	●	
Gx460	Air conditioner	○	●	●	●	●	0065
Gx460	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Gx460	Clearance sonar	○	●	●	●	●	0046
Gx460	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Gx460	D-door motor	○	●	●	●	●	0016
Gx460	D-seat sw	○	●	●	●	●	
Gx460	Driver seat	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Gx460	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Gx460	KDSS	○	●	●	●	●	0006 0103
Gx460	Lane departure alert	○	●	●	●	●	
Gx460	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Gx460	Master switch	○	●	●	●	●	0016
Gx460	Mirror l	○	●	●	●	●	
Gx460	Mirror r	○	●	●	●	●	
Gx460	Navigation system	○	●	●	●	●	
Gx460	Occupant detection	○	●	●	●	●	0032
Gx460	P-door motor	○	●	●	●	●	0016
Gx460	Pm1 gateway	○	●	●	●	●	0002
Gx460	Pm2 gateway	○	●	●	●	●	0002
Gx460	Power source control	○	●	●	●	●	0041
Gx460	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Gx460	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Gx460	Radar cruise	○	●	●	●	●	0003 0035 0036
Gx460	Rl-door motor	○	●	●	●	●	0016
Gx460	Rr-door motor	○	●	●	●	●	0016
Gx460	Sliding roof	○	●	●	●	●	
Gx460	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Gx460	Srs airbag	○	●	●	●	●	0006
Gx460	Starting control	○	●	●	●	●	
Gx460	Telematics	○	●	●	●	●	0048 0124
Gx460	Tilt&telescopic	○	●	●	●	●	0026
Gx460	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Gx460	Cruise control	○	●	●	●	●	0003 0036
Gx460	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Gx460	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Gx460	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Hs250h	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Hs250h	AFS	○	●	●	●	●	
Hs250h	Advanced parking guidance system	○	●	●	●	●	
Hs250h	Air conditioner	○	●	●	●	●	0065
Hs250h	Clearance sonar	○	●	●	●	●	0046
Hs250h	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Hs250h	D-door motor	○	●	●	●	●	0016
Hs250h	Driver seat	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Hs250h	EMPS	○	●	●	●	●	0006 0025
Hs250h	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Hs250h	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Hs250h	Lane keeping assist	○	●	●	●	●	0153
Hs250h	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Hs250h	Master switch	○	●	●	●	●	0016
Hs250h	Mirror l	○	●	●	●	●	
Hs250h	Mirror r	○	●	●	●	●	
Hs250h	Navigation system	○	●	●	●	●	
Hs250h	Occupant detection	○	●	●	●	●	0032
Hs250h	P-door motor	○	●	●	●	●	0016
Hs250h	Pm1 gateway	○	●	●	●	●	0002
Hs250h	Pm2 gateway	○	●	●	●	●	0002
Hs250h	Power source control	○	●	●	●	●	0041
Hs250h	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Hs250h	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Hs250h	Radar cruise	○	●	●	●	●	0003 0035 0036
Hs250h	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Hs250h	Rl-door motor	○	●	●	●	●	0016
Hs250h	Rr-door motor	○	●	●	●	●	0016
Hs250h	Sliding roof	○	●	●	●	●	
Hs250h	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Hs250h	Srs airbag	○	●	●	●	●	0006
Hs250h	Telematics	○	●	●	●	●	0048 0124
Hs250h	Tilt&telescopic	○	●	●	●	●	0026
Hs250h	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Hs250h	Transmission control	○	●	●	●	●	
IS350C	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
IS350C	AFS	○	●	●	●	●	
IS350C	Advanced parking guidance system	○	●	●	●	●	
IS350C	Air conditioner	○	●	●	●	●	0065
IS350C	Body	○	●	●	●	●	
IS350C	Body no.3	○	●	●	●	●	
IS350C	Body no.5	○	○	○	●	●	
IS350C	Clearance sonar	○	●	●	●	●	0046
IS350C	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
IS350C	Combination switch	○	○	○	●	●	
IS350C	Driver seat	○	○	○	●	●	
IS350C	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
IS350C	EMPS	○	●	●	●	●	0006 0025
IS350C	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
IS350C	Gateway	○	●	●	●	●	0002 0019 0007 0020
IS350C	Master switch	○	○	○	●	●	0016
IS350C	Mirror l	○	○	○	●	●	
IS350C	Mirror r	○	○	○	●	●	
IS350C	Navigation system	○	●	●	●	●	
IS350C	Occupant detection	○	●	●	●	●	0032
IS350C	P master switch	○	○	○	●	●	
IS350C	Passenger seat	○	○	○	●	●	
IS350C	Power source control	○	●	●	●	●	0041
IS350C	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
IS350C	Radar cruise	○	●	●	●	●	0003 0035 0036
IS350C	Rain sensor	○	○	○	●	●	
IS350C	Retractable hardtop	○	●	●	●	●	
IS350C	Smart access	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138
IS350C	Srs airbag	○	●	●	●	●	0006
IS350C	Telematics	○	●	●	●	●	0048 0124
IS350C	Tilt&telescopic	○	●	●	●	●	0026
IS350C	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Is f	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Is f	AFS	○	●	●	●	●	
Is f	Air conditioner	○	●	●	●	●	0065
Is f	Body	○	●	●	●	●	
Is f	Body no.3	○	●	●	●	●	
Is f	Body no.5	○	○	○	●	●	
Is f	Clearance sonar	○	●	●	●	●	0046
Is f	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Is f	Combination switch	○	○	○	●	●	
Is f	Driver seat	○	○	○	●	●	
Is f	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Is f	EMPS	○	●	●	●	●	0006 0025
Is f	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Is f	Gateway	○	●	●	●	●	0002 0019 0007 0020
Is f	Master switch	○	○	○	●	●	0016

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Is f	Mirror l	○	○	○	●	●	
Is f	Mirror r	○	○	○	●	●	
Is f	Occupant detection	○	●	●	●	●	0032
Is f	Passenger seat	○	○	○	●	●	
Is f	Power source control	○	●	●	●	●	0041
Is f	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Is f	Radar cruise	○	●	●	●	●	0003 0035 0036
Is f	Rain sensor	○	○	○	●	●	
Is f	Sliding roof	○	○	○	●	●	
Is f	Smart access	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138
Is f	Srs airbag	○	●	●	●	●	0006
Is f	Tilt&telescopic	○	●	●	●	●	0026
Is f	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Is f	Advanced parking guidance system	○	●	●	●	●	
Is f	Navigation system	○	●	●	●	●	
Is f	Telematics	○	●	●	●	●	0048 0124
Is f	Accessory gateway	○	●	●	●	●	0002
Is250	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Is250	AFS	○	●	●	●	●	
Is250	Air conditioner	○	●	●	●	●	0065
Is250	Body	○	●	●	●	●	
Is250	Body no.3	○	●	●	●	●	
Is250	Body no.5	○	○	○	●	●	
Is250	Clearance sonar	○	●	●	●	●	0046
Is250	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Is250	Combination switch	○	○	○	●	●	
Is250	Cruise control	○	●	●	●	●	0003 0036
Is250	Driver seat	○	○	○	●	●	
Is250	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Is250	EMPS	○	●	●	●	●	0006 0025
Is250	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Is250	Gateway	○	●	●	●	●	0002 0019 0007 0020
Is250	Master switch	○	○	○	●	●	0016
Is250	Mirror l	○	○	○	●	●	
Is250	Mirror r	○	○	○	●	●	
Is250	Passenger seat	○	○	○	●	●	
Is250	Power source control	○	●	●	●	●	0041
Is250	Rain sensor	○	○	○	●	●	
Is250	Sliding roof	○	○	○	●	●	
Is250	Smart access	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Is250	Srs airbag	○	●	●	●	●	0006
Is250	Tilt&telescopic	○	●	●	●	●	0026
Is250	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Is250	Four wheel drive	○	●	●	●	●	0016 0081
Is250	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Is250	Radar cruise	○	●	●	●	●	0003 0035 0036
Is250	Occupant detection	○	●	●	●	●	0032
Is250	Telematics	○	●	●	●	●	0048 0124
Is250	Advanced parking guidance system	○	●	●	●	●	
Is250	Navigation system	○	●	●	●	●	
Is250	Accessory gateway	○	●	●	●	●	0002
Is250	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Is250	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Is250	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Is250	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Is250	D-door motor	○	●	●	●	●	0016
Is250	Driver seat	○	●	●	●	●	
Is250	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Is250	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Is250	Lane departure alert	○	●	●	●	●	
Is250	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Is250	Master switch	○	●	●	●	●	0016
Is250	Mirror l	○	●	●	●	●	
Is250	Mirror r	○	●	●	●	●	
Is250	P-door motor	○	●	●	●	●	0016
Is250	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Is250	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Is250	Rl-door motor	○	●	●	●	●	0016
Is250	Rr-door motor	○	●	●	●	●	0016
Is250	Sliding roof	○	●	●	●	●	
Is250	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Is250	Starting control	○	●	●	●	●	
Is250c	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Is250c	AFS	○	●	●	●	●	
Is250c	Advanced parking guidance system	○	●	●	●	●	
Is250c	Air conditioner	○	●	●	●	●	0065
Is250c	Body	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Is250c	Body no.3	○	●	●	●	●	
Is250c	Body no.5	○	○	○	●	●	
Is250c	Clearance sonar	○	●	●	●	●	0046
Is250c	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Is250c	Combination switch	○	○	○	●	●	
Is250c	Driver seat	○	○	○	●	●	
Is250c	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Is250c	EMPS	○	●	●	●	●	0006 0025
Is250c	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Is250c	Gateway	○	●	●	●	●	0002 0019 0007 0020
Is250c	Master switch	○	○	○	●	●	0016
Is250c	Mirror l	○	○	○	●	●	
Is250c	Mirror r	○	○	○	●	●	
Is250c	Navigation system	○	●	●	●	●	
Is250c	Occupant detection	○	●	●	●	●	0032
Is250c	P master switch	○	○	○	●	●	
Is250c	Passenger seat	○	○	○	●	●	
Is250c	Power source control	○	●	●	●	●	0041
Is250c	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Is250c	Radar cruise	○	●	●	●	●	0003 0035 0036
Is250c	Rain sensor	○	○	○	●	●	
Is250c	Retractable hardtop	○	●	●	●	●	
Is250c	Smart access	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138
Is250c	Srs airbag	○	●	●	●	●	0006
Is250c	Telematics	○	●	●	●	●	0048 0124
Is250c	Tilt&telescopic	○	●	●	●	●	0026
Is250c	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Is300	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Is300	Air conditioner	○	●	●	●	●	0065
Is300	Body	○	●	●	●	●	
Is300	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Is300	Cruise control	○	●	●	●	●	0003 0036
Is300	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Is300	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Is300	Srs airbag	○	●	●	●	●	0006
Is300	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Is350	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Is350	AFS	○	●	●	●	●	
Is350	Air conditioner	○	●	●	●	●	0065
Is350	Body	○	●	●	●	●	
Is350	Body no.3	○	●	●	●	●	
Is350	Body no.5	○	○	○	●	●	
Is350	Clearance sonar	○	●	●	●	●	0046
Is350	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Is350	Combination switch	○	○	○	●	●	
Is350	Driver seat	○	○	○	●	●	
Is350	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Is350	EMPS	○	●	●	●	●	0006 0025
Is350	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Is350	Gateway	○	●	●	●	●	0002 0019 0007 0020
Is350	Master switch	○	○	○	●	●	0016
Is350	Mirror l	○	○	○	●	●	
Is350	Mirror r	○	○	○	●	●	
Is350	Passenger seat	○	○	○	●	●	
Is350	Power source control	○	●	●	●	●	0041
Is350	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Is350	Radar cruise	○	●	●	●	●	0003 0035 0036
Is350	Rain sensor	○	○	○	●	●	
Is350	Sliding roof	○	○	○	●	●	
Is350	Smart access	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138
Is350	Srs airbag	○	●	●	●	●	0006
Is350	Tilt&telescopic	○	●	●	●	●	0026
Is350	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Is350	Occupant detection	○	●	●	●	●	0032
Is350	Telematics	○	●	●	●	●	0048 0124
Is350	Advanced parking guidance system	○	●	●	●	●	
Is350	Navigation system	○	●	●	●	●	
Is350	Cruise control	○	●	●	●	●	0003 0036
Is350	Four wheel drive	○	●	●	●	●	0016 0081
Is350	Accessory gateway	○	●	●	●	●	0002
Is350	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Is350	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Is350	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Is350	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Is350	D-door motor	○	●	●	●	●	0016
Is350	DRS	○	●	●	●	●	0017 0006 0018
Is350	Driver seat	○	●	●	●	●	
Is350	HI autoleveling	○	●	●	●	●	0042 0083 0056
Is350	Lane departure alert	○	●	●	●	●	
Is350	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Is350	Master switch	○	●	●	●	●	0016
Is350	Mirror l	○	●	●	●	●	
Is350	Mirror r	○	●	●	●	●	
Is350	P-door motor	○	●	●	●	●	0016
Is350	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Is350	Rl-door motor	○	●	●	●	●	0016
Is350	Rr-door motor	○	●	●	●	●	0016
Is350	Sliding roof	○	●	●	●	●	
Is350	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Is350	Starting control	○	●	●	●	●	
Is350	VGRS	○	●	●	●	●	0005 0006
Is350	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Lfa	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Lfa	ASG	○	●	●	●	●	0026
Lfa	Active rear wing	○	●	●	●	●	0039
Lfa	Air conditioner	○	●	●	●	●	0065
Lfa	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Lfa	D-door motor	○	●	●	●	●	0016
Lfa	Driver seat	○	●	●	●	●	
Lfa	EMPS	○	●	●	●	●	0006 0025
Lfa	Electric parking brake	○	●	●	●	●	0006 0016
Lfa	Electric power control	○	●	●	●	●	
Lfa	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Lfa	Engine 2	○	●	●	●	●	
Lfa	Gateway	○	●	●	●	●	0002 0019 0007 0020
Lfa	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Lfa	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Lfa	Navigation system	○	●	●	●	●	
Lfa	Occupant detection	○	●	●	●	●	0032
Lfa	P-door motor	○	●	●	●	●	0016
Lfa	Passenger seat	○	●	●	●	●	
Lfa	Srs airbag	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Lfa	Telematics	○	●	●	●	●	0048 0124
Lfa	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Lfa	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Ls400	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Ls400	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Ls400	Air conditioner	○	●	●	●	●	0065
Ls400	Body	○	●	●	●	●	
Ls400	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Ls400	Cruise control	○	●	●	●	●	0003 0036
Ls400	Driver door	○	●	●	●	●	
Ls400	Driver seat	○	○	○	●	●	
Ls400	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Ls400	Passenger door	○	●	●	●	●	
Ls400	Rear left door	○	●	●	●	●	
Ls400	Rear right door	○	●	●	●	●	
Ls400	Sliding roof	○	○	○	●	●	
Ls400	Srs airbag	○	●	●	●	●	0006
Ls400	Tilt&telescopic	○	●	●	●	●	0026
Ls430	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Ls430	Air conditioner	○	●	●	●	●	0065
Ls430	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Ls430	Body no.2	○	●	●	●	●	
Ls430	Body no.3	○	●	●	●	●	
Ls430	Body no.4	○	●	●	●	●	
Ls430	Body no.5	○	○	○	●	●	
Ls430	Clearance sonar	○	●	●	●	●	0046
Ls430	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Ls430	Combination switch	○	○	○	●	●	
Ls430	Driver door	○	●	●	●	●	
Ls430	Driver seat	○	○	○	●	●	
Ls430	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Ls430	Gateway	○	●	●	●	●	0002 0019 0007 0020
Ls430	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Ls430	Laser cruise	○	●	●	●	●	0003 0035 0036
Ls430	Passenger door	○	●	●	●	●	
Ls430	Rain sensor	○	○	○	●	●	
Ls430	Rear left door	○	●	●	●	●	
Ls430	Rear left seat	○	○	○	●	●	
Ls430	Rear right door	○	●	●	●	●	
Ls430	Rear right seat	○	○	○	●	●	
Ls430	Rear seat switch	○	○	○	●	●	
Ls430	Sliding roof	○	○	○	●	●	
Ls430	Srs airbag	○	●	●	●	●	0006
Ls430	Steering pad switch	○	○	○	●	●	
Ls430	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Ls430	Tilt&telescopic	○	●	●	●	●	0026
Ls430	Cruise control	○	●	●	●	●	0003 0036
Ls430	AFS	○	●	●	●	●	
Ls430	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Ls430	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Ls430	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Ls430	Radar cruise	○	●	●	●	●	0003 0035 0036
Ls430	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Ls430	Steering lock	○	●	●	●	●	0012 0008 0104 0105 0045 0014 0013 0133 0011 0147
Ls460	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Ls460	AFS	○	●	●	●	●	
Ls460	Advanced parking guidance system	○	●	●	●	●	
Ls460	Air conditioner	○	●	●	●	●	0065
Ls460	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Ls460	Back door	○	●	●	●	●	
Ls460	Body no.4	○	●	●	●	●	
Ls460	Body no.5	○	●	●	●	●	
Ls460	Center console switch	○	○	○	●	●	
Ls460	Clearance sonar	○	●	●	●	●	0046
Ls460	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Ls460	Combination switch	○	○	○	●	●	
Ls460	D-door motor	○	●	●	●	●	0016
Ls460	D-seat sw	○	●	●	●	●	
Ls460	Driver door	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Ls460	Driver seat	○	●	●	●	●	
Ls460	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Ls460	EMPS	○	●	●	●	●	0006 0025
Ls460	Ecb gateway	○	●	●	●	●	0002
Ls460	Ecm gateway	○	●	●	●	●	0002
Ls460	Electric parking brake	○	●	●	●	●	0006 0016
Ls460	Electric power control	○	●	●	●	●	
Ls460	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Ls460	Front left seat a/c	○	●	●	●	●	
Ls460	Front right seat a/c	○	●	●	●	●	
Ls460	Lane keeping assist	○	●	●	●	●	0153
Ls460	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Ls460	Master switch	○	●	●	●	●	0016
Ls460	Mayday gateway	○	●	●	●	●	
Ls460	Occupant detection	○	●	●	●	●	0032
Ls460	P-door motor	○	●	●	●	●	0016
Ls460	Passenger door	○	●	●	●	●	
Ls460	Passenger seat	○	●	●	●	●	
Ls460	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Ls460	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Ls460	Radar cruise	○	●	●	●	●	0003 0035 0036
Ls460	Rain sensor	○	●	●	●	●	
Ls460	Rear console switch	○	●	●	●	●	
Ls460	Rear left door	○	●	●	●	●	
Ls460	Rear left seat	○	●	●	●	●	
Ls460	Rear left seat a/c	○	●	●	●	●	
Ls460	Rear right door	○	●	●	●	●	
Ls460	Rear right seat	○	●	●	●	●	
Ls460	Rear right seat a/c	○	●	●	●	●	
Ls460	Rl-door motor	○	●	●	●	●	0016
Ls460	Rr-door motor	○	●	●	●	●	0016
Ls460	Sliding roof	○	●	●	●	●	
Ls460	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Ls460	Srs airbag	○	●	●	●	●	0006
Ls460	Steering pad switch	○	○	○	●	●	
Ls460	Tilt&telescopic	○	●	●	●	●	0026
Ls460	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Ls460	VGRS	○	●	●	●	●	0005 0006
Ls460	Telematics	○	●	●	●	●	0048 0124
Ls460	Navigation system	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Ls460	Accessory gateway	○	●	●	●	●	0002
Ls460	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Ls460	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Ls460	Night view	○	●	●	●	●	
Ls600h	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Ls600h	AFS	○	●	●	●	●	
Ls600h	Advanced parking guidance system	○	●	●	●	●	
Ls600h	Air conditioner	○	●	●	●	●	0065
Ls600h	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Ls600h	Back door	○	●	●	●	●	
Ls600h	Body no.4	○	●	●	●	●	
Ls600h	Body no.5	○	●	●	●	●	
Ls600h	Center console switch	○	○	○	●	●	
Ls600h	Clearance sonar	○	●	●	●	●	0046
Ls600h	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Ls600h	Combination switch	○	○	○	●	●	
Ls600h	D-door motor	○	●	●	●	●	0016
Ls600h	D-seat sw	○	●	●	●	●	
Ls600h	Driver door	○	●	●	●	●	
Ls600h	Driver seat	○	●	●	●	●	
Ls600h	EMPS	○	●	●	●	●	0006 0025
Ls600h	Ecb gateway	○	●	●	●	●	0002
Ls600h	Ecm gateway	○	●	●	●	●	0002
Ls600h	Electric parking brake	○	●	●	●	●	0006 0016
Ls600h	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Ls600h	Front left seat a/c	○	●	●	●	●	
Ls600h	Front right seat a/c	○	●	●	●	●	
Ls600h	Front stabilizer	○	●	●	●	●	
Ls600h	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Ls600h	Lane keeping assist	○	●	●	●	●	0153
Ls600h	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Ls600h	Master switch	○	●	●	●	●	0016
Ls600h	Mayday gateway	○	●	●	●	●	
Ls600h	Occupant detection	○	●	●	●	●	0032
Ls600h	P-door motor	○	●	●	●	●	0016
Ls600h	Passenger door	○	●	●	●	●	
Ls600h	Passenger seat	○	●	●	●	●	
Ls600h	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Ls600h	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Ls600h	Radar cruise	○	●	●	●	●	0003 0035 0036
Ls600h	Rain sensor	○	●	●	●	●	
Ls600h	Rear console switch	○	●	●	●	●	
Ls600h	Rear left door	○	●	●	●	●	
Ls600h	Rear left seat	○	●	●	●	●	
Ls600h	Rear left seat a/c	○	●	●	●	●	
Ls600h	Rear right door	○	●	●	●	●	
Ls600h	Rear right seat	○	●	●	●	●	
Ls600h	Rear right seat a/c	○	●	●	●	●	
Ls600h	Rear stabilizer	○	●	●	●	●	
Ls600h	Rl-door motor	○	●	●	●	●	0016
Ls600h	Rr-door motor	○	●	●	●	●	0016
Ls600h	Sliding roof	○	●	●	●	●	
Ls600h	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Ls600h	Srs airbag	○	●	●	●	●	0006
Ls600h	Steering pad switch	○	○	○	●	●	
Ls600h	Tilt&telescopic	○	●	●	●	●	0026
Ls600h	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Ls600h	VGRS	○	●	●	●	●	0005 0006
Ls600h	Navigation system	○	●	●	●	●	
Ls600h	Telematics	○	●	●	●	●	0048 0124
Ls600h	Accessory gateway	○	●	●	●	●	0002
Ls600h	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Ls600h	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Ls600h	Night view	○	●	●	●	●	
Lx450	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Lx470	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Lx470	AHC	○	●	●	●	●	0054 0006 0158 0152
Lx470	Body	○	●	●	●	●	
Lx470	Cruise control	○	●	●	●	●	0003 0036
Lx470	Driver seat	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Lx470	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Lx470	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Lx470	Mirror	○	○	○	●	●	
Lx470	Srs airbag	○	●	●	●	●	0006
Lx470	Tilt&telescopic	○	●	●	●	●	0026
Lx470	Body no.2	○	●	●	●	●	
Lx470	Driver door	○	●	●	●	●	
Lx470	Rain sensor	○	○	○	●	●	
Lx470	Sliding roof	○	○	○	●	●	
Lx470	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Lx470	VGRS	○	●	●	●	●	0005 0006
Lx470	Wiper	○	○	○	●	●	
Lx470	Occupant detection	○	●	●	●	●	0032
Lx470	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Lx570	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Lx570	AFS	○	●	●	●	●	
Lx570	AHC	○	●	●	●	●	0054 0006 0158 0152
Lx570	Accessory gateway	○	●	●	●	●	0002
Lx570	Air conditioner	○	●	●	●	●	0065
Lx570	Back door	○	●	●	●	●	
Lx570	Body no.4	○	●	●	●	●	
Lx570	Body no.5	○	●	●	●	●	
Lx570	Clearance sonar	○	●	●	●	●	0046
Lx570	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Lx570	D-door motor	○	●	●	●	●	0016
Lx570	Driver seat	○	●	●	●	●	
Lx570	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Lx570	Front left seat a/c	○	●	●	●	●	
Lx570	Front right seat a/c	○	●	●	●	●	
Lx570	Gateway	○	●	●	●	●	0002 0019 0007 0020
Lx570	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Lx570	Master switch	○	●	●	●	●	0016
Lx570	Mayday gateway	○	●	●	●	●	
Lx570	Mirror	○	●	●	●	●	
Lx570	Occupant detection	○	●	●	●	●	0032
Lx570	P-door motor	○	●	●	●	●	0016
Lx570	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Lx570	Radar cruise	○	●	●	●	●	0003 0035 0036
Lx570	Rain sensor	○	●	●	●	●	
Lx570	Rl-door motor	○	●	●	●	●	0016
Lx570	Rr-door motor	○	●	●	●	●	0016
Lx570	Sliding roof	○	●	●	●	●	
Lx570	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Lx570	Srs airbag	○	●	●	●	●	0006
Lx570	Telematics	○	●	●	●	●	0048 0124
Lx570	Tilt&telescopic	○	●	●	●	●	0026
Lx570	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Lx570	VGRS	○	●	●	●	●	0005 0006
Lx570	Advanced parking guidance system	○	●	●	●	●	
Lx570	Navigation system	○	●	●	●	●	
Rc-f	Active rear wing	○	●	●	●	●	0039
Rc-f	Advanced parking guidance system	○	●	●	●	●	
Rc-f	Air conditioner	○	●	●	●	●	0065
Rc-f	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Rc-f	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Rc-f	Clearance sonar	○	●	●	●	●	0046
Rc-f	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Rc-f	D-door motor	○	●	●	●	●	0016
Rc-f	Driver seat	○	●	●	●	●	
Rc-f	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Rc-f	EMPS	○	●	●	●	●	0006 0025
Rc-f	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Rc-f	Gateway	○	●	●	●	●	0002 0019 0007 0020
Rc-f	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Rc-f	Lane departure alert	○	●	●	●	●	
Rc-f	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Rc-f	Master switch	○	●	●	●	●	0016
Rc-f	Mirror l	○	●	●	●	●	
Rc-f	Mirror r	○	●	●	●	●	
Rc-f	Navigation system	○	●	●	●	●	
Rc-f	Occupant detection	○	●	●	●	●	0032

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rc-f	P-door motor	○	●	●	●	●	0016
Rc-f	Passenger seat	○	●	●	●	●	
Rc-f	Power source control	○	●	●	●	●	0041
Rc-f	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Rc-f	Radar cruise	○	●	●	●	●	0003 0035 0036
Rc-f	Sliding roof	○	●	●	●	●	
Rc-f	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Rc-f	Srs airbag	○	●	●	●	●	0006
Rc-f	Starting control	○	●	●	●	●	
Rc-f	Telematics	○	●	●	●	●	0048 0124
Rc-f	Tilt&telescopic	○	●	●	●	●	0026
Rc-f	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Rx300	Air conditioner	○	●	●	●	●	0065
Rx300	Body	○	●	●	●	●	
Rx300	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Rx300	Driver door	○	●	●	●	●	
Rx300	Driver seat	○	○	○	●	●	
Rx300	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Rx300	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Rx300	Passenger door	○	●	●	●	●	
Rx300	Rear left door	○	●	●	●	●	
Rx300	Rear right door	○	●	●	●	●	
Rx300	Sliding roof	○	○	○	●	●	
Rx300	Srs airbag	○	●	●	●	●	0006
Rx300	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Rx330	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Rx330	AFS	○	●	●	●	●	
Rx330	Air conditioner	○	●	●	●	●	0065
Rx330	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Rx330	Back door	○	●	●	●	●	
Rx330	Body	○	●	●	●	●	
Rx330	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Rx330	Driver seat	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rx330	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Rx330	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Rx330	Laser cruise	○	●	●	●	●	0003 0035 0036
Rx330	Master switch	○	○	○	●	●	0016
Rx330	Mirror l	○	○	○	●	●	
Rx330	Mirror r	○	○	○	●	●	
Rx330	Occupant detection	○	●	●	●	●	0032
Rx330	Rain sensor	○	○	○	●	●	
Rx330	Sliding roof	○	○	○	●	●	
Rx330	Srs airbag	○	●	●	●	●	0006
Rx330	Tilt&telescopic	○	●	●	●	●	0026
Rx330	Wiper	○	○	○	●	●	
Rx330	Cruise control	○	●	●	●	●	0003 0036
Rx350	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Rx350	AFS	○	●	●	●	●	
Rx350	Air conditioner	○	●	●	●	●	0065
Rx350	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Rx350	Back door	○	●	●	●	●	
Rx350	Body	○	●	●	●	●	
Rx350	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Rx350	Driver seat	○	○	○	●	●	
Rx350	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Rx350	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Rx350	Laser cruise	○	●	●	●	●	0003 0035 0036
Rx350	Master switch	○	○	○	●	●	0016
Rx350	Mirror l	○	○	○	●	●	
Rx350	Mirror r	○	○	○	●	●	
Rx350	Occupant detection	○	●	●	●	●	0032
Rx350	Rain sensor	○	○	○	●	●	
Rx350	Sliding roof	○	○	○	●	●	
Rx350	Srs airbag	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rx350	Tilt&telescopic	○	●	●	●	●	0026
Rx350	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Rx350	Wiper	○	○	○	●	●	
Rx350	Cruise control	○	●	●	●	●	0003 0036
Rx350	Advanced parking guidance system	○	●	●	●	●	
Rx350	Clearance sonar	○	●	●	●	●	0046
Rx350	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Rx350	D-door motor	○	●	●	●	●	0016
Rx350	Driver seat	○	●	●	●	●	
Rx350	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Rx350	EMPS	○	●	●	●	●	0006 0025
Rx350	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Rx350	Four wheel drive	○	●	●	●	●	0016 0081
Rx350	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Rx350	Master switch	○	●	●	●	●	0016
Rx350	Mirror l	○	●	●	●	●	
Rx350	Mirror r	○	●	●	●	●	
Rx350	Navigation system	○	●	●	●	●	
Rx350	P-door motor	○	●	●	●	●	0016
Rx350	Pm1 gateway	○	●	●	●	●	0002
Rx350	Pm2 gateway	○	●	●	●	●	0002
Rx350	Power source control	○	●	●	●	●	0041
Rx350	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Rx350	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Rx350	Radar cruise	○	●	●	●	●	0003 0035 0036
Rx350	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Rx350	Rl-door motor	○	●	●	●	●	0016
Rx350	Rr-door motor	○	●	●	●	●	0016
Rx350	Sliding roof	○	●	●	●	●	
Rx350	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Rx350	Starting control	○	●	●	●	●	
Rx350	Telematics	○	●	●	●	●	0048 0124
Rx350	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Rx350	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Rx400h	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Rx400h	AFS	○	●	●	●	●	
Rx400h	Air conditioner	○	●	●	●	●	0065
Rx400h	Back door	○	●	●	●	●	
Rx400h	Body	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rx400h	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Rx400h	Driver seat	○	○	○	●	●	
Rx400h	EMPS	○	●	●	●	●	0006 0025
Rx400h	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Rx400h	Gateway	○	●	●	●	●	0002 0019 0007 0020
Rx400h	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Rx400h	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Rx400h	Laser cruise	○	●	●	●	●	0003 0035 0036
Rx400h	Master switch	○	○	○	●	●	0016
Rx400h	Mirror l	○	○	○	●	●	
Rx400h	Mirror r	○	○	○	●	●	
Rx400h	Occupant detection	○	●	●	●	●	0032
Rx400h	Rain sensor	○	○	○	●	●	
Rx400h	Sliding roof	○	○	○	●	●	
Rx400h	Srs airbag	○	●	●	●	●	0006
Rx400h	Tilt&telescopic	○	●	●	●	●	0026
Rx400h	Wiper	○	○	○	●	●	
Rx400h	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Rx450h	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Rx450h	AFS	○	●	●	●	●	
Rx450h	Advanced parking guidance system	○	●	●	●	●	
Rx450h	Air conditioner	○	●	●	●	●	0065
Rx450h	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Rx450h	Back door	○	●	●	●	●	
Rx450h	Clearance sonar	○	●	●	●	●	0046
Rx450h	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Rx450h	D-door motor	○	●	●	●	●	0016
Rx450h	Driver seat	○	●	●	●	●	
Rx450h	EMPS	○	●	●	●	●	0006 0025
Rx450h	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Rx450h	Front stabilizer	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rx450h	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Rx450h	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Rx450h	Master switch	○	●	●	●	●	0016
Rx450h	Mirror l	○	●	●	●	●	
Rx450h	Mirror r	○	●	●	●	●	
Rx450h	Navigation system	○	●	●	●	●	
Rx450h	P-door motor	○	●	●	●	●	0016
Rx450h	Pm1 gateway	○	●	●	●	●	0002
Rx450h	Pm2 gateway	○	●	●	●	●	0002
Rx450h	Power source control	○	●	●	●	●	0041
Rx450h	Rear stabilizer	○	●	●	●	●	
Rx450h	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Rx450h	Rl-door motor	○	●	●	●	●	0016
Rx450h	Rr-door motor	○	●	●	●	●	0016
Rx450h	Sliding roof	○	●	●	●	●	
Rx450h	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Rx450h	Srs airbag	○	●	●	●	●	0006
Rx450h	Tilt&telescopic	○	●	●	●	●	0026
Sc300	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Sc300	Cruise control	○	●	●	●	●	0003 0036
Sc300	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Sc400	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Sc400	Cruise control	○	●	●	●	●	0003 0036
Sc400	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Sc430	Body no.4	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Sc430	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Is200	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Is200	Air conditioner	○	●	●	●	●	0065
Is200	Body	○	●	●	●	●	
Is200	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Is200	Cruise control	○	●	●	●	●	0003 0036
Is200	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Is200	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Is200	Srs airbag	○	●	●	●	●	0006
Is200	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Rx300	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Rx300	AFS	○	●	●	●	●	
Rx300	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Rx300	Back door	○	●	●	●	●	
Rx300	Cruise control	○	●	●	●	●	0003 0036
Rx300	Master switch	○	○	○	●	●	0016
Rx300	Mirror l	○	○	○	●	●	
Rx300	Mirror r	○	○	○	●	●	
Rx300	Rain sensor	○	○	○	●	●	
Rx300	Tilt&telescopic	○	●	●	●	●	0026
Rx300	Wiper	○	○	○	●	●	

Special function NO.	Special function name
0001	Parts Exchange
0002	Initialization
0003	Beam Axis Adjustment
0004	Air Bleeding
0005	Steering Angle Adjust
0006	Check Mode
0007	Wireless Code Registration
0008	Transponder Code Registration
0009	Key Code Registration
0010	Key Code Erasure
0011	Auto Registration Closure
0012	Transponder Code Erasure
0013	ECU Communication ID Registration
0014	Key Number Registration
0015	Secondary Air Injection Check
0016	Reset Memory
0017	Activate Rear Steering Motor
0018	DRS Off-center Correction
0019	Wireless Code Erasure
0020	Wireless Door Lock Diagnosis Mode
0021	Rear Beam Axis Adjustment
0022	Inspection Mode
0023	Test Mode
0024	ECB Utility
0025	Torque Sensor Adjustment
0026	All Readiness
0027	A/T Code Reset
0028	Starter Exchange
0029	Reset A/C Information
0030	Deceleration Sensor Zero Point Calibration
0031	Deceleration Sensor Zero Point Clear
0032	ECU Exchange
0033	Oil Pump Air Bleeding
0034	B1 Air Bleeding
0035	Laser/Radar Cruise Initialization
0036	Beam Axis Misalignment Reading
0037	BSM Master Abnormal History
0038	BSM Master Beam Axis Inspection
0039	Rear Wing Zero Point Calibration
0040	Grill Shutter Control Mode Switching
0041	Auto Power OFF Cancel
0042	ECU Information Sync
0043	Steering Sensor Initialization
0044	Communication Check(Key Diag Mode)
0045	Key Number Change
0046	Steering Initialization
0047	Trouble Factor Code Clear
0048	DCM Mode Setting
0049	2nd Sys. Air Bleeding
0050	Pilot Quantity Learning
0051	Pilot Quantity Learning(Detail)
0052	Supply Pump Initialization

Special function NO.	Special function name
0053	Electric Throttle Learning
0054	Height Offset
0055	ID Registration
0056	Height Sensor Initialization
0057	VIN
0058	Pilot Quantity Learning Values Reset
0059	DPF Deterioration Record Clear
0060	A/F Sensor Compensation Reset
0061	Crank Time Compensation Reset
0062	Catalyst Record Clear
0063	Vehicle Mileage Write
0064	Shift Control Synchronization
0065	Refrigerant Gas Volume Check
0066	i-ART Learning Value Reset
0067	Learning Value Reset
0068	HV Batt Cell Low Volt READY ON Prevention Cancel
0069	Temporary Vehicle Start Up
0070	Battery Diagnosis
0071	Predagnostic Battery Charge
0072	Initializing meter usage
0073	ECB-R Utility
0074	ES Calibration
0075	Clutch Adjust Count
0076	HICM Resistance Learning Value Reset
0077	Pilot Quantity Learning Values Clear
0078	Catalyst Record Read
0079	Catalyst Record Transferring
0080	ECB2.0/2.5 Utility
0081	4WD Control Prevention Mode
0082	ATF Thermal Degradation Estimate Reset
0083	AHS Shade Angle Adjustment
0084	Tire Position Write
0085	Remote Engine Starter Initial Registration
0086	Remote Engine Starter ID Registration
0087	BSM Slave Beam Axis Inspection
0088	Vehicle Information Synchronization
0089	BSM Master Beam Axis Adjustment
0090	BSM Master Beam Axis Display
0091	BSM Slave Beam Axis Adjustment
0092	BSM Slave Beam Axis Display
0093	EV Batt Cell Low Volt READY ON Prevention Cancel
0094	Remote Door Lock Setting
0095	Glow Control Unit Inspection
0096	O2 Sensor Learning Value Reset
0097	EGR Learning Value Reset
0098	Supply Pump Learning Value Reset
0099	Idle Speed Adjustment
0100	DPF History Information Reset
0101	DPF Rejuvenation Timing Reset
0102	Air Flow Meter Learning Value Reset
0103	Sensor Adjustment
0104	Transponder Code Erasure 2

Special function NO.	Special function name
0105	Transponder Code Registration 2
0106	Driver Information Registration
0107	3rd Sys. Air Bleeding
0108	Seat Belt Reminder Setting
0109	Actuator Air Bleeding
0110	Fuel Density Learning Value Reset
0111	Injector Maintenance Learning Value Reset
0112	Switch Oil Maintenance Display
0113	iMT Installation Information Reset
0114	Switch Battery Type
0115	Total Number of Engine Starts Reset
0116	Upstream Turbine Pressure Learning Value Reset
0117	Differential Pressure Learning Value Reset
0118	NOx Storage Catalyst Learning Value Reset
0119	Swirl Valve Learning Value Reset
0120	Fuel PCV Compensation Value Reset
0121	Parts Exchange Learning
0122	Front Beam Axis Adjustment
0123	AHB-R Utility
0124	Backup Battery Replacement Reset
0125	Headlight Type Setting
0126	Cruising Range Reset
0127	Initializing meter vehicle information
0128	Initializing body ECU
0129	DOC Removal Check Mode
0130	Grill Shutter Initialization
0131	Resolver Learning/Initialization
0132	Steering angle sensor learning value reset
0133	Key Registration
0134	FC Coolant Air Bleeding
0135	Battery Discharge
0136	Discharge Data Monitoring
0137	System Calibration
0138	Smart Code Erasure
0139	Forced Ignition ON
0140	DSC Sensor Initialization
0141	TPMS Reset
0142	Key Registration
0143	Auto Registration Closure
0144	Transponder Code Erasure
0145	ECU Communication ID Registration
0146	Key Number Registration
0147	Wait Time Cancellation
0148	Wireless Code Registration
0149	Left Lateral Radar Beam Axis Adjustment
0150	Right Lateral Radar Beam Axis Adjustment
0151	Reset the Mobile Information
0152	Height Adjust
0153	Beam Axis Fine Adjustment
0154	Oil Pump Air Bleeding
0155	Laser/Radar Cruise Initialization
0156	Trouble Factor Code Clear

Special function NO.	Special function name
0157	Electric Throttle Learning
0158	Vehicle height sensor automatic adjustment
0159	ID Registration
0160	DPF Deterioration Record Clear
0161	Catalyst Record Clear
0162	Engine Control Value Initialization
0163	Engine Configuration Change
0164	Wireless Diagnosis Mode
0165	Battery ECU Initialization
0166	Initial learning
0167	Starter operating times reset/writing
0168	CVT ECU Initial Learning
0169	Antenna Communication Check
0170	Transponder Communication Check
0171	Wireless Communication Check
0172	Meter Specification Reset
0173	SOC Learning
0174	Return to Normal Mode
0175	SOC Overwrite
0176	V80 Control Flag Permission
0177	ITC Initialization
0178	AMT Configuration Change
0179	Driver Information Registration
0180	Smart Key Communication Check
0181	New Rotary Key Registration
0182	ABS Air Bleeding
0183	DVS Air Bleeding
0184	New Key Registration
0185	Laser Beam Axis Adjustment
0186	Meter Vehicle Information Reset
0187	Wireless Door Lock Diag Mode