

**NOTE:**

- : This function is supported      ▲: This function is the new feature in this version
- : This function is not supported    ※: This function may be supported which depends on the actual condition of the vehicle

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
1007 CAN	ABS or ESP ECU(ABS MK70.1)	●	●	●	●
1007 CAN	ABS or ESP ECU(ESP MK60-0)	●	●	●	●
1007 CAN	Air conditioning	●	●	●	●
1007 CAN	Airbag ECU	●	●	●	●
1007 CAN	BSI - Built-in systems interface	●	●	●	●
1007 CAN	CD player	●	●	●	○
1007 CAN	Engine ECU(8HX SID 806 DV4)	●	●	●	●
1007 CAN	Engine ECU(8HZ SID 806 DV4)	●	●	●	●
1007 CAN	Engine ECU(9HT BOSCH EDC16C3)	●	●	●	●
1007 CAN	Engine ECU(9HZ BOSCH EDC16C3)	●	●	●	●
1007 CAN	Engine ECU(KFU MM6LPC)	●	●	●	●
1007 CAN	Engine ECU(KFV J34P)	●	●	●	●
1007 CAN	Engines/ automatic gearbox(NFU BOSCH ME7.4.5)	●	●	●	●
1007 CAN	Gearbox ECU	●	●	●	●
1007 CAN	High frequency receiver	●	●	●	●
1007 CAN	Instrument panel	●	●	●	●
1007 CAN	Motorised sliding side doors	●	●	●	●
1007 CAN	Multifunction display	●	●	●	●
1007 CAN	Multiplexed additive adding pump ECU	●	●	●	●
1007 CAN	Parking aid	●	●	●	●
1007 CAN	Portable unit	●	●	●	●
1007 CAN	Power steering	●	●	●	●
1007 CAN	Radio	●	●	●	●
1007 CAN	Rain/sunlight sensor	●	●	●	○
1007 CAN	Switch module at the steering wheel	●	●	●	●
1007 CAN	Telematics	●	●	●	●
1007 CAN	Under inflation detection	●	●	●	●
1007 CAN	Vehicle protection / Management of accesses(Alarm)	●	●	●	●
1007 VAN	ABS MK70	●	●	●	●
1007 VAN	Air conditioning	●	●	●	●
1007 VAN	Airbag ECU	●	●	●	●
1007 VAN	BSI - Built-in systems interface	●	○	○	●
1007 VAN	CD player	●	●	●	●
1007 VAN	Display / Telematics(Multifunction displayEMF)	●	●	●	●
1007 VAN	Display / Telematics(Telematics RT3)	●	●	●	●
1007 VAN	ESP MK60	●	●	●	●
1007 VAN	Engine ECU(8HX SIEMENS SID 804)	●	●	●	●
1007 VAN	Engine ECU(8HZ SIEMENS SID 804)	●	●	●	●
1007 VAN	Engine ECU(KFU MM6LP)	●	●	●	●
1007 VAN	Engine ECU(KFV J34P)	●	●	●	●
1007 VAN	Engine ECU(KFV S2000PM2)	●	●	●	●
1007 VAN	Engine ECU(NFU ME744)	●	●	●	●
1007 VAN	Engines/ automatic gearbox(N6A BOSCH ME7.4.5)	●	●	●	●
1007 VAN	Engines/ automatic gearbox(N6B BOSCH ME7.4.5)	●	●	●	●
1007 VAN	Engines/ automatic gearbox(NFU BOSCH ME7.4.5)	●	●	●	●
1007 VAN	Gearbox ECU	●	●	●	●
1007 VAN	Instrument panel	●	●	●	●
1007 VAN	Parking aid	●	●	●	●
1007 VAN	Power steeringDAE	●	●	●	●
1007 VAN	Radio	●	●	●	●
1007 VAN	Rain/sunlight sensor	●	●	●	○
1007 VAN	Switch module at the steering wheel	●	○	○	●
1007 VAN	The side sliding door	●	●	●	●
1007 VAN	Vehicle protection / Management of accesses(Alarm)	●	●	●	○
107	ABRASR - ABS90 T	○	●	●	●
107	ABRASR - ABS 8 0 C1	○	●	●	●
107	ABRASR - ESP 8 0 C1	○	●	●	●
107	ADC - Coded anti-start.	○	●	●	●
107	AIRBAG - Airbag.	●	●	●	●
107	AUTORADIO - Radio.	●	●	●	●
107	BOITEVIT - Gearbox	○	●	●	●
107	DIRECTN - Power steering.	●	●	●	●
107	INJ - HDI SID805	●	●	●	●
107	INJ - ME795	○	●	●	●
108	ABRASR - ABS/ESP.	●	●	●	●
108	ADC - Coded Anti-start/Hands-free Starting Access Electronic Module	○	●	●	●
108	AFFICHEUR - Multi-function screen.	○	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
108	AIRBAG - Airbags and pre-tensioners control unit.	●	●	●	●
108	AUTDEM - Hands-free Unit (Entry and Start): Starting Authorisation	○	●	●	●
108	BML_ES - Hands-free Unit (Entry and Start): ACCs and Start up	●	●	●	●
108	BOITEVIT - Gearbox	●	●	●	●
108	CLIM - A/C ECU.	●	●	●	●
108	CMDDEM - Hands-free Unit (Entry and Start): Start-up Monitoring	○	●	●	●
108	COMBINE - Instrument panel.	●	●	●	●
108	DARA - Start and Stop control ECU.	●	●	●	●
108	DIRECTN - Power steering.	●	●	●	●
108	INJ - V46	●	●	●	●
108	INJ T - Engine Management (Motor 1KR)	●	●	●	●
2008	AAS - Parking aid.	●	●	●	●
2008	ABRASR - ABSMK100	●	●	●	●
2008	ABRASR - ESPMK100	●	●	●	●
2008	AIRBAG - Airbag.	●	●	●	●
2008	ALARME - Anti-theft alarm.	●	●	●	●
2008	AMPLHIFI - audio amplifier.	●	●	●	○
2008	AUTORADIO - Radio.	●	●	●	●
2008	BECB - Battery charge status unit.	●	●	●	●
2008	BMF(BSI2010) - Built-in Systems Interface.	●	●	●	●
2008	BOITEVIT - BVA AL4	●	●	●	●
2008	BOITEVIT - BVMP	●	●	●	●
2008	BOITEVIT - CFC300P	●	●	●	●
2008	BOITEVIT - MAPS UDS	●	●	●	●
2008	BSR - Trailer relay unit.	●	●	●	●
2008	CDE - External CD player.	●	●	●	●
2008	CLIM - TDC CH MUX	●	●	●	●
2008	CLIM - TDC RFTA MUX	●	●	●	●
2008	CLIM - TDC RF MUX	●	●	●	●
2008	COMBINE - Instrument panel	●	●	●	●
2008	CPL - Rain and Brightness Sensor	●	●	●	●
2008	CSR - VCI	●	●	●	●
2008	DIRECTN - DAE	●	●	●	●
2008	DIRECTN - DAE A515	●	●	●	●
2008	DMTC - DMTC	●	○	●	○
2008	DMTC - DMTR	●	●	●	○
2008	FMUX - Multiplexed control panel.	●	●	●	○
2008	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
2008	INJ - EDC17C10 BR2	●	●	●	●
2008	INJ - EDC17C60	●	●	●	●
2008	INJ - HDI SID807 BR2	●	●	●	●
2008	INJ - ME745 EC5	●	●	●	●
2008	INJ - ME749 EC5	●	●	●	●
2008	INJ - MED17 4 2	●	●	●	●
2008	INJ - MEV17 4 2	●	●	●	●
2008	INJ - MEVD17 4 2	●	●	●	●
2008	INJ - V344	●	●	●	●
2008	INJ - V345	●	●	●	●
2008	INJ - V46	●	●	●	●
2008	INJ - VD46	●	●	●	●
2008	MATT - MATT C 2010	●	●	●	○
2008	MATT - MATT M 2010	●	●	●	○
2008	MATT - MATT P 2010	●	●	●	○
2008	MDS - BLVV	●	●	●	●
2008	MDS - BTA	●	●	●	●
2008	PADDITIVATION - Multiplexed additive pump.	●	●	●	●
2008	SIRENE - Siren	●	●	●	●
2008	TELEMAT - MRN	●	●	●	●
2008	TELEMAT - SMEG	●	●	●	●
206	Air conditioning	○	●	●	○
206	Anti-lock brakes MK70	●	●	●	●
206	Anti-lock brakes TEVES	●	○	○	●
206	Built-in systems interface	●	○	○	●
206	Engines/ automatic gearbox(7LZ MM5NP)	●	●	●	●
206	Engines/ automatic gearbox(AL4 automatic gearbox)	●	●	●	●
206	Engines/ automatic gearbox(HFX MM4.8P)	●	●	●	●
206	Engines/ automatic gearbox(K6D SAGEM S2000)	●	●	●	●
206	Engines/ automatic gearbox(KFW SAGEM S2000)	●	●	●	●
206	Engines/ automatic gearbox(KFX BOSCH MP7.3)	●	●	●	●
206	Engines/ automatic gearbox(N6A BOSCH ME7.4.4)	●	●	●	●
206	Engines/ automatic gearbox(NFU BOSCH ME7.4.4)	●	●	●	●
206	Engines/ automatic gearbox(NFZ BOSCH MP7.2)	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
206	Engines/ automatic gearbox(RFN MM4. 8P)	●	●	●	●
206	Engines/ automatic gearbox(RFR MM4. 8P)	●	●	●	●
206	Engines/ automatic gearbox(RHY BOSCH EDC15C2)	●	●	●	●
206	Engines/ automatic gearbox(WJY LUCAS DCN2)	●	●	●	●
206	Engines/ automatic gearbox(WJZ LUCAS DCN2)	●	●	●	●
206	Service module	●	●	●	●
206	Sun roof	●	●	●	●
206 MUX	Air conditioning	○	●	●	○
206 MUX	Anti-lock brakes MK70	●	●	●	●
206 MUX	Anti-lock brakes TEVES	●	○	○	●
206 MUX	Built-in systems interface	●	○	○	●
206 MUX	Electric retractable roof	●	●	●	●
206 MUX	Engines/ automatic gearbox(7LZ MM5NP)	●	●	●	●
206 MUX	Engines/ automatic gearbox(AL4 automatic gearbox)	●	●	●	●
206 MUX	Engines/ automatic gearbox(HFX MM4. 8P)	●	●	●	●
206 MUX	Engines/ automatic gearbox(K6D SAGEM S2000)	●	●	●	●
206 MUX	Engines/ automatic gearbox(KFW SAGEM S2000)	●	●	●	●
206 MUX	Engines/ automatic gearbox(KFX BOSCH MP7.3)	●	●	●	●
206 MUX	Engines/ automatic gearbox(N6A BOSCH ME7.4.4)	●	●	●	●
206 MUX	Engines/ automatic gearbox(NFU BOSCH ME7.4.4)	●	●	●	●
206 MUX	Engines/ automatic gearbox(NFZ BOSCH MP7.2)	●	●	●	●
206 MUX	Engines/ automatic gearbox(RFN MM4. 8P)	●	●	●	●
206 MUX	Engines/ automatic gearbox(RFR MM4. 8P)	●	●	●	●
206 MUX	Engines/ automatic gearbox(RHY BOSCH EDC15C2)	●	●	●	●
206 MUX	Engines/ automatic gearbox(WJY LUCAS DCN2)	●	●	●	●
206 MUX	Engines/ automatic gearbox(WJZ LUCAS DCN2)	●	●	●	●
206 MUX	Service module	●	●	●	●
206+	ABRASR - ABSMK70 1	●	●	●	●
206+	ABRASR - ESPMK60 0	●	●	●	●
206+	AFFICHEUR - AMF	●	●	●	●
206+	AFFICHEUR - RT3	●	●	●	●
206+	AIRBAG - Driver and passenger airbags.	●	●	●	○
206+	ALARMES - Anti-theft alarm.	●	●	●	○
206+	AUTORADIO - AUTORADIO	●	●	●	●
206+	AUTORADIO - RDE	●	●	●	●
206+	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
206+	BOITEVIT - Gearbox	●	●	●	●
206+	CHANGEURCD - CD player.	●	●	●	●
206+	CLIM - heating/ventilation	●	●	●	●
206+	COMBINE - Instrument panel.	●	●	●	●
206+	CPL - Rain and Brightness Sensor	●	●	●	○
206+	DIRECTN - Power steering electric pump unit.	●	●	●	●
206+	HDC - Switch Module at the Steering Wheel	●	●	●	●
206+	INJ - DCN2	●	●	●	●
206+	INJ - EDC15C2	●	●	●	●
206+	INJ - EDC16C3DV4	●	●	●	●
206+	INJ - EDC17C10 BR2	●	●	●	●
206+	INJ - J34P	●	●	●	●
206+	INJ - ME745	●	●	●	●
206+	INJ - ME749	●	●	●	●
206+	INJ - V343	●	●	●	●
206+	MDS - Services module.	●	●	●	●
207 CAN	AAS - Parking aid.	●	●	●	●
207 CAN	ABRASR - ABSMK70 1	●	●	●	●
207 CAN	ABRASR - ESPMK60 0	●	●	●	●
207 CAN	AFFICHEUR - EMF A	●	●	●	●
207 CAN	AFFICHEUR - EMF C	●	●	●	●
207 CAN	AIRBAG - Driver and passenger airbags.	●	●	●	●
207 CAN	ALARMES - Anti-theft alarm.	●	●	●	●
207 CAN	AUTORADIO - AUTORADIO	●	●	●	●
207 CAN	AUTORADIO - RD45	●	●	●	●
207 CAN	BECB - BECB	●	●	●	●
207 CAN	BECB - BECB GEN2	●	●	●	●
207 CAN	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
207 CAN	BOITEVIT - BVA AL4	●	●	●	●
207 CAN	BOITEVIT - BVMP	●	●	●	●
207 CAN	BSM(BSI) - Engine Relay Unit	●	●	●	●
207 CAN	BSR(BSI) - Trailer relay unit.	●	●	●	●
207 CAN	CHANGEURCD - CD player.	●	●	●	○
207 CAN	CLIM - heating/ventilation	●	●	●	●
207 CAN	COMBINE - Instrument panel.	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
207 CAN	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
207 CAN	CPL - Rain and Brightness Sensor	●	●	●	○
207 CAN	DIRECTN - Electric power steering.	●	●	●	●
207 CAN	DSG - Under inflation detection.	●	●	●	●
207 CAN	ECOLE - Driving school module.	●	●	●	○
207 CAN	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
207 CAN	INJ - EDC16C3	●	●	●	●
207 CAN	INJ - EDC16C3DV4	●	●	●	●
207 CAN	INJ - EDC17C10	●	●	●	●
207 CAN	INJ - EDC17C10 BR2	●	●	●	●
207 CAN	INJ - HDI SID807	●	●	●	●
207 CAN	INJ - HDI SID807 BR2	●	●	●	●
207 CAN	INJ - J34P	●	●	●	●
207 CAN	INJ - ME745	●	●	●	●
207 CAN	INJ - MED17 4 EURO4	●	●	●	●
207 CAN	INJ - MEV17 4 2	●	●	●	●
207 CAN	INJ - MEV17 4 EURO4	●	●	●	●
207 CAN	INJ - MEV17 4 EURO5	●	●	●	●
207 CAN	INJ - MM6LPC	●	●	●	●
207 CAN	INJ - V341	●	●	●	●
207 CAN	KML - BOITIER NOMADE	●	●	●	●
207 CAN	KML - KML	●	●	●	●
207 CAN	MDS - Service module.	●	●	●	●
207 CAN	PADDITIVATION - Diesel Additive	●	●	●	●
207 CAN	RHF - High frequency receiver.	●	●	●	●
207 CAN	TELEMAT - BOITIER TELEMATIQUE	●	●	●	●
207 CAN	TELEMAT - RADIONAV RNEG	●	●	●	●
207 CAN	TNB - Seat belts not fastened LED unit.	●	○	●	○
207 CAN	TOITESC - Folding roof.	●	●	●	●
207 VAN	ABRASR - ABSMK70 1	●	●	●	●
207 VAN	ABRASR - ESPMK60 0	●	●	●	●
207 VAN	AFFICHEUR - AMF	●	●	●	●
207 VAN	AFFICHEUR - RT3	●	●	●	●
207 VAN	AIRBAG - Driver and passenger airbags.	●	●	●	○
207 VAN	ALARMES - Anti-theft alarm.	●	●	●	○
207 VAN	AUTORADIO - AUTORADIO	●	●	●	●
207 VAN	AUTORADIO - RDE	●	●	●	●
207 VAN	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
207 VAN	BOITEVIT - Gearbox	●	●	●	●
207 VAN	CHANGEURCD - CD player.	●	●	●	●
207 VAN	CLIM - heating/ventilation	●	●	●	●
207 VAN	COMBINE - Instrument panel.	●	●	●	●
207 VAN	CPL - Rain and Brightness Sensor	●	●	●	○
207 VAN	DIRECTN - Power steering electric pump unit.	●	●	●	●
207 VAN	HDC - Switch Module at the Steering Wheel	●	●	●	●
207 VAN	INJ - DCN2	●	●	●	●
207 VAN	INJ - EDC15C2	●	●	●	●
207 VAN	INJ - EDC16C3DV4	●	●	●	●
207 VAN	INJ - EDC17C10 BR2	●	●	●	●
207 VAN	INJ - J34P	●	●	●	●
207 VAN	INJ - ME745	●	●	●	●
207 VAN	INJ - ME749	●	●	●	●
207 VAN	INJ - V343	●	●	●	●
207 VAN	MDS - Services module.	●	●	●	●
207+	AAS - Parking aid.	●	●	●	●
207+	ABRASR - ABSMK70 1	●	●	●	●
207+	ABRASR - ESPMK60 0	●	●	●	●
207+	AFFICHEUR - EMF A	●	●	●	●
207+	AFFICHEUR - EMF C	●	●	●	●
207+	AIRBAG - Driver and passenger airbags.	●	●	●	●
207+	ALARMES - Anti-theft alarm.	●	●	●	●
207+	AUTORADIO - AUTORADIO	●	●	●	●
207+	AUTORADIO - RD45	●	●	●	●
207+	BECB - BECB	●	●	●	●
207+	BECB - BECB GEN2	●	●	●	●
207+	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
207+	BOITEVIT - BVA AL4	●	●	●	●
207+	BOITEVIT - BVMP	●	●	●	●
207+	BSM(BSI) - Engine Relay Unit	●	●	●	●
207+	BSR(BSI) - Trailer relay unit.	●	●	●	●
207+	CHANGEURCD - CD player.	●	●	●	○
207+	CLIM - heating/ventilation	●	●	●	●
207+	COMBINE - Instrument panel.	●	●	●	●
207+	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
207+	CPL - Rain and Brightness Sensor	●	●	●	○
207+	DIRECTN - Electric power steering.	●	●	●	●
207+	DSG - Under inflation detection.	●	●	●	●
207+	ECOLE - Driving school module.	●	●	●	○
207+	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
207+	INJ - EDC16C3	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
207+	INJ - EDC16C3DV4	●	●	●	●
207+	INJ - EDC17C10	●	●	●	●
207+	INJ - EDC17C10 BR2	●	●	●	●
207+	INJ - HDI SID807	●	●	●	●
207+	INJ - HDI SID807 BR2	●	●	●	●
207+	INJ - J34P	●	●	●	●
207+	INJ - ME745	●	●	●	●
207+	INJ - MED17 4 EURO4	●	●	●	●
207+	INJ - MEV17 4 2	●	●	●	●
207+	INJ - MEV17 4 EURO4	●	●	●	●
207+	INJ - MEV17 4 EURO5	●	●	●	●
207+	INJ - MM6LPC	●	●	●	●
207+	INJ - V341	●	●	●	●
207+	KML - BOITIER NOMADE	●	●	●	●
207+	KML - KML	●	●	●	●
207+	MDS - Service module.	●	●	●	●
207+	PADDITIVATION - Diesel Additive	●	●	●	●
207+	RHF - High frequency receiver.	●	●	●	●
207+	TELEMAT - BOITIER TELEMATIQUE	●	●	●	●
207+	TELEMAT - RADIONAV RNEG	●	●	●	●
207+	TNB - Seat belts not fastened LED unit.	●	○	●	○
207+	TOITESC - Folding roof.	●	●	●	●
207i	ABRASR - ABSMK70 1	●	●	●	●
207i	ABRASR - ESPMK60 0	●	●	●	●
207i	AFFICHEUR - AMF	●	●	●	●
207i	AFFICHEUR - RT3	●	●	●	●
207i	AIRBAG - Driver and passenger airbags.	●	●	●	○
207i	ALARMES - Anti-theft alarm.	●	●	●	○
207i	AUTORADIO - AUTORADIO	●	●	●	●
207i	AUTORADIO - RDE	●	●	●	●
207i	BMF (BSI) - Built-in Systems Interface.	●	●	●	●
207i	BOITEVIT - Gearbox	●	●	●	●
207i	CHANGEURCD - CD player.	●	●	●	●
207i	CLIM - heating/ventilation	●	●	●	●
207i	COMBINE - Instrument panel.	●	●	●	●
207i	CPL - Rain and Brightness Sensor	●	●	●	○
207i	DIRECTN - Power steering electric pump unit.	●	●	●	●
207i	HDC - Switch Module at the Steering Wheel	●	●	●	●
207i	INJ - DCN2	●	●	●	●
207i	INJ - EDC15C2	●	●	●	●
207i	INJ - EDC16C3DV4	●	●	●	●
207i	INJ - EDC17C10 BR2	●	●	●	●
207i	INJ - J34P	●	●	●	●
207i	INJ - ME745	●	●	●	●
207i	INJ - ME749	●	●	●	●
207i	INJ - V343	●	●	●	●
207i	MDS - Services module.	●	●	●	●
208	AAS - Parking aid.	●	●	●	●
208	ABRASR - ABSMK100	●	●	●	●
208	ABRASR - ESPMK100	●	●	●	●
208	AIRBAG - Airbag.	●	●	●	●
208	ALARME - Anti-theft alarm.	●	●	●	●
208	AMPLIFI - audio amplifier.	●	●	●	○
208	AUTORADIO - Radio.	●	●	●	●
208	BECB - Battery charge status unit.	●	●	●	●
208	BMF (BSI2010) - Built-in Systems Interface.	●	●	●	●
208	BOITEVIT - BVA AL4	●	●	●	●
208	BOITEVIT - BVMP	●	●	●	●
208	BOITEVIT - CFC300P	●	●	●	●
208	BOITEVIT - MAPS UDS	●	●	●	●
208	BSE - Lighting relay unit.	●	●	●	●
208	BSR - Trailer relay unit.	●	●	●	●
208	CDE - External CD player.	●	●	●	●
208	CLIM - TDC CH MUX	●	●	●	●
208	CLIM - TDC RFTA MUX	●	●	●	●
208	CLIM - TDC RF MUX	●	●	●	●
208	COMBINE - Instrument panel	●	●	●	●
208	CPL - Rain and Brightness Sensor	●	●	●	●
208	CSR - VCI	●	●	●	●
208	DIRECTN - DAE	●	●	●	●
208	DIRECTN - DAE A515	●	●	●	●
208	DMTC - DMTC	●	○	●	○
208	DMTC - DMTR	●	●	●	○
208	ECOLE - Driving school module.	●	●	●	○
208	FMUX - Multiplexed control panel.	●	●	●	○
208	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
208	INJ - EDC17C10 BR2	●	●	●	●
208	INJ - EDC17C60	●	●	●	●
208	INJ - HDI SID807 BR2	●	●	●	●
208	INJ - ME745 EC5	●	●	●	●
208	INJ - ME749 EC5	●	●	●	●
208	INJ - MED17 4 2	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
208	INJ - MEV17 4 2	●	●	●	●
208	INJ - MEVD17 4 2	●	●	●	●
208	INJ - V344	●	●	●	●
208	INJ - V345	●	●	●	●
208	INJ - V46	●	●	●	●
208	INJ - VD46	●	●	●	●
208	MATT - MATT C 2010	●	●	●	○
208	MATT - MATT M 2010	●	●	●	○
208	MATT - MATT P 2010	●	●	●	○
208	MDS - BLVV	●	●	●	●
208	MDS - BTA	●	●	●	●
208	PADDITIVATION - Multiplexed additive pump.	●	●	●	●
208	SIRENE - Siren	●	●	●	●
208	TELEMAT - MRN	●	●	●	●
208	TELEMAT - SMEG	●	●	●	●
208 (Ai91)	AAS - Parking Assistance	●	●	●	●
208 (Ai91)	ABRASR - ABSMK100	●	●	●	●
208 (Ai91)	ABRASR - ESPMK100	●	●	●	●
208 (Ai91)	AIRBAG - Airbag.	●	●	●	●
208 (Ai91)	ALARME - Anti-theft alarm.	●	●	●	●
208 (Ai91)	AUTORADIO - Radio.	●	●	●	●
208 (Ai91)	BMF(BSI2010) - Built-in Systems Interface.	●	●	●	●
208 (Ai91)	BOITEVIT - BVA AL4	●	●	●	●
208 (Ai91)	BOITEVIT - BVMP	●	●	●	●
208 (Ai91)	BOITEVIT - CFC300P	●	●	●	●
208 (Ai91)	BOITEVIT - MAPS UDS	●	●	●	●
208 (Ai91)	CDE - External CD player.	●	●	●	●
208 (Ai91)	CLIM - TDC CH MUX	●	●	●	●
208 (Ai91)	CLIM - TDC RFTA MUX	●	●	●	●
208 (Ai91)	CLIM - TDC RF MUX	●	●	●	●
208 (Ai91)	COMBINE - Instrument panel	●	●	●	●
208 (Ai91)	CPL - Rain and Brightness Sensor	●	●	●	●
208 (Ai91)	CSR - VCI	●	●	●	●
208 (Ai91)	DIRECTN - DAE	●	●	●	●
208 (Ai91)	DIRECTN - DAE A515	●	●	●	●
208 (Ai91)	FMUX - Multiplexed control panel.	●	●	●	○
208 (Ai91)	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
208 (Ai91)	INJ - EDC17C10 BR2	●	●	●	●
208 (Ai91)	INJ - EDC17C60	●	●	●	●
208 (Ai91)	INJ - HDI SID807 BR2	●	●	●	●
208 (Ai91)	INJ - ME745 EC5	●	●	●	●
208 (Ai91)	INJ - ME749 EC5	●	●	●	●
208 (Ai91)	INJ - MED17 4 2	●	●	●	●
208 (Ai91)	INJ - MEV17 4 2	●	●	●	●
208 (Ai91)	INJ - MEVD17 4 2	●	●	●	●
208 (Ai91)	INJ - V344	●	●	●	●
208 (Ai91)	INJ - V345	●	●	●	●
208 (Ai91)	INJ - V46	●	●	●	●
208 (Ai91)	INJ - VD46	●	●	●	●
208 (Ai91)	MDS - BLVV	●	●	●	●
208 (Ai91)	MDS - BTA	●	●	●	●
208 (Ai91)	SIRENE - Siren	●	●	●	●
208 (Ai91)	TELEMAT - MRN	●	●	●	●
208 (Ai91)	TELEMAT - SMEG	●	●	●	●
3008	AAS - Parking aid.	●	●	●	●
3008	ABRASR - ABS or ESP ECU.	●	●	●	●
3008	AFFICHEUR - EMF A	●	●	●	●
3008	AFFICHEUR - EMF C	●	●	●	●
3008	AIRBAG - Airbag.	●	●	●	●
3008	ALARME - Anti-theft alarm.	●	●	●	●
3008	AMPLHIFI - audio amplifier.	●	●	●	○
3008	ARTIV - Vehicle distance assistance.	●	●	●	●
3008	ASRPLUS - Anti-slip mode selector.	●	○	●	●
3008	AUTORADIO - AUTORADIO	●	●	●	●
3008	AUTORADIO - RD43	●	●	●	●
3008	AUTORADIO - RD45	●	●	●	●
3008	BECB - BECB	●	●	●	●
3008	BECB - BECB GEN2	●	●	●	●
3008	BIR - Network isolation control unit.	●	○	●	●
3008	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
3008	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
3008	BOITEVIT - CFC300P	●	●	●	●
3008	BOITEVIT - CFC300P HY	●	●	●	●
3008	BSM(BSI) - Engine Relay Unit	●	●	●	●
3008	BSR(BSI) - Trailer relay unit.	●	●	●	●
3008	CHANGEURCD - CD player.	●	●	●	○
3008	CLIM - A/C ECU.	●	●	●	●
3008	COMBINE - Instrument panel	●	●	●	●
3008	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
3008	CPL - Rain sensor.	●	●	●	○
3008	DIRECTN - Power steering electric pump unit.	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
3008	DMTC - Central voltage retention device	●	○	●	○
3008	DSG - DSG	●	●	●	●
3008	DSG - DSG UDS	●	●	●	●
3008	ESSUIV - Windscreen wiper.	●	●	●	○
3008	FSE - Electric secondary brake.	●	●	●	●
3008	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
3008	INJ - DCM35	●	●	●	●
3008	INJ - DCM35 BR2	●	●	●	●
3008	INJ - DCM35 HY	●	●	●	●
3008	INJ - DCM62	●	●	●	●
3008	INJ - EDC16C3	●	●	●	●
3008	INJ - EDC17C60	●	●	●	●
3008	INJ - HDI SID807	●	●	●	●
3008	INJ - HDI SID807 BR2	●	●	●	●
3008	INJ - MED17 4 2	●	●	●	●
3008	INJ - MED17 4 EURO4	●	●	●	●
3008	INJ - MED17 4 EURO5	●	●	●	●
3008	INJ - MEV17 4 2	●	●	●	●
3008	INJ - MEV17 4 EURO4	●	●	●	●
3008	INJ - MEV17 4 EURO5	●	●	●	●
3008	INJ - MM6KP	●	●	●	●
3008	KML - Hands-free kit (telephone).	●	●	●	●
3008	MATT - Matrix screen integral to the instrument panel.	●	●	●	●
3008	MDS - BLVV	●	●	●	●
3008	MDS - BTA	●	●	●	●
3008	MDS - MD SERV	●	●	●	●
3008	PADDITIVATION - PADDGO	●	●	●	●
3008	PADDITIVATION - PADDGO E5	●	●	●	●
3008	PADDITIVATION - PADDGO TI E6	●	●	●	●
3008	PORTEC - Door control pad.	●	●	●	●
3008	RHF - High frequency receiver.	●	●	●	●
3008	TELEMAT - RADIONAV NG4	●	●	●	●
3008	TELEMAT - RADIONAV RNEG	●	●	●	●
3008	TELEMAT - RADIONAV RNEGC	●	●	●	●
3008	TELEMAT - RNEG2010	●	●	●	●
3008	TNB - Seat belts not fastened LED unit.	●	○	●	○
3008	VTH - VTH	●	●	●	●
3008	VTH - VTH UDS	●	●	●	●
3008 China	AAS - Parking aid.	●	●	●	●
3008 China	ABRASR - ABS or ESP ECU.	●	●	●	●
3008 China	AFFICHEUR - EMF A	●	●	●	●
3008 China	AFFICHEUR - EMF C	●	●	●	●
3008 China	AIRBAG - Airbag.	●	●	●	●
3008 China	ALARMES - Anti-theft alarm.	●	●	●	●
3008 China	ASRPLUS - Anti-slip mode selector.	●	○	●	●
3008 China	AUTORADIO - AUTORADIO	●	●	●	●
3008 China	AUTORADIO - RD43	●	●	●	●
3008 China	AUTORADIO - RD45	●	●	●	●
3008 China	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
3008 China	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
3008 China	BOITEVIT - CFC300P	●	●	●	●
3008 China	BOITEVIT - CFC300P HY	●	●	●	●
3008 China	BSM(BSI) - Engine Relay Unit	●	●	●	●
3008 China	CLIM - A/C ECU.	●	●	●	●
3008 China	COMBINE - Instrument panel	●	●	●	●
3008 China	CPL - Rain and Brightness Sensor	●	●	●	○
3008 China	DIRECTN - Power steering electric pump unit.	●	●	●	●
3008 China	DSG - DSG	●	●	●	●
3008 China	DSG - DSG UDS	●	●	●	●
3008 China	ESSUIV - Windscreen wiper.	●	●	●	○
3008 China	FSE - Electric secondary brake.	●	●	●	●
3008 China	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
3008 China	INJ - DCM35	●	●	●	●
3008 China	INJ - DCM35 BR2	●	●	●	●
3008 China	INJ - DCM35 HY	●	●	●	●
3008 China	INJ - DCM62	●	●	●	●
3008 China	INJ - EDC16C3	●	●	●	●
3008 China	INJ - EDC17C60	●	●	●	●
3008 China	INJ - HDI SID807	●	●	●	●
3008 China	INJ - HDI SID807 BR2	●	●	●	●
3008 China	INJ - MED17 4 2	●	●	●	●
3008 China	INJ - MED17 4 EURO4	●	●	●	●
3008 China	INJ - MED17 4 EURO5	●	●	●	●
3008 China	INJ - MEV17 4 2	●	●	●	●
3008 China	INJ - MEV17 4 EURO4	●	●	●	●
3008 China	INJ - MEV17 4 EURO5	●	●	●	●
3008 China	INJ - MM6KP	●	●	●	●
3008 China	MATT - Matrix screen integral to the instrument panel.	●	●	●	●
3008 China	PORTEC - Door control pad.	●	●	●	●
3008 China	TELEMAT - RADIONAV NG4	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
3008 China	TELEMAT - RADIONAV RNEG	●	●	●	●
3008 China	TELEMAT - RADIONAV RNEGC	●	●	●	●
3008 China	TELEMAT - RNEG2010	●	●	●	●
3008 China	VTH - VTH	●	●	●	●
3008 China	VTH - VTH UDS	●	●	●	●
3008 HYbrid4	AAS - Parking aid.	●	●	●	●
3008 HYbrid4	ABRASR - ABS or ESP ECU.	●	●	●	●
3008 HYbrid4	AFFICHEUR - EMF A	●	●	●	●
3008 HYbrid4	AFFICHEUR - EMF C	●	●	●	●
3008 HYbrid4	AIRBAG - Airbag.	●	●	●	●
3008 HYbrid4	ALARMES - Anti-theft alarm.	●	●	●	●
3008 HYbrid4	AMPLHIFI - audio amplifier.	●	●	●	○
3008 HYbrid4	AUTORADIO - AUTORADIO	●	●	●	●
3008 HYbrid4	AUTORADIO - RD43	●	●	●	●
3008 HYbrid4	AUTORADIO - RD45	●	●	●	●
3008 HYbrid4	BECB - BECB	●	●	●	●
3008 HYbrid4	BECB - BECB GEN2	●	●	●	●
3008 HYbrid4	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
3008 HYbrid4	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
3008 HYbrid4	BOITEVIT - CFC300P	●	●	●	●
3008 HYbrid4	BOITEVIT - CFC300P HY	●	●	●	●
3008 HYbrid4	BSM(BSI) - Engine Relay Unit	●	●	●	●
3008 HYbrid4	BSR(BSI) - Trailer relay unit.	●	●	●	●
3008 HYbrid4	CHANGEURCD - CD player.	●	●	●	○
3008 HYbrid4	CLIM - A/C ECU.	●	●	●	●
3008 HYbrid4	COMBINE - Instrument panel	●	●	●	●
3008 HYbrid4	CPL - Rain sensor.	●	●	●	○
3008 HYbrid4	DIRECTN - Power steering electric pump unit.	●	●	●	●
3008 HYbrid4	DSG - DSG	●	●	●	●
3008 HYbrid4	DSG - DSG UDS	●	●	●	●
3008 HYbrid4	ESSUIV - Windscreen wiper.	●	●	●	○
3008 HYbrid4	FSE - Electric secondary brake.	●	●	●	●
3008 HYbrid4	HCU1 - Hybrid control ECU 1.	●	●	●	●
3008 HYbrid4	HCU2 - Hybrid control ECU 2.	●	●	●	●
3008 HYbrid4	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
3008 HYbrid4	INJ - DCM35	●	●	●	●
3008 HYbrid4	INJ - DCM35 BR2	●	●	●	●
3008 HYbrid4	INJ - DCM35 HY	●	●	●	●
3008 HYbrid4	INJ - DCM62	●	●	●	●
3008 HYbrid4	INJ - EDC16C3	●	●	●	●
3008 HYbrid4	INJ - EDC17C60	●	●	●	●
3008 HYbrid4	INJ - HDI SID807	●	●	●	●
3008 HYbrid4	INJ - HDI SID807 BR2	●	●	●	●
3008 HYbrid4	INJ - MED17 4 2	●	●	●	●
3008 HYbrid4	INJ - MED17 4 EURO4	●	●	●	●
3008 HYbrid4	INJ - MED17 4 EURO5	●	●	●	●
3008 HYbrid4	INJ - MEV17 4 2	●	●	●	●
3008 HYbrid4	INJ - MEV17 4 EURO4	●	●	●	●
3008 HYbrid4	INJ - MEV17 4 EURO5	●	●	●	●
3008 HYbrid4	INJ - MM6KP	●	●	●	●
3008 HYbrid4	KML - Hands-free kit (telephone).	●	●	●	●
3008 HYbrid4	MATT - Matrix screen integral to the instrument panel.	●	●	●	●
3008 HYbrid4	MCM - Hybrid mode selector.	●	○	●	●
3008 HYbrid4	MDS - BLVV	●	●	●	●
3008 HYbrid4	MDS - BTA	●	●	●	●
3008 HYbrid4	MDS - MD SERV	●	●	●	●
3008 HYbrid4	MSB - Traction battery ECU.	●	●	●	●
3008 HYbrid4	PADDITIVATION - PADDGO	●	●	●	●
3008 HYbrid4	PADDITIVATION - PADDGO E5	●	●	●	●
3008 HYbrid4	PADDITIVATION - PADDGO TI E6	●	●	●	●
3008 HYbrid4	PORTEC - Door control pad.	●	●	●	●
3008 HYbrid4	TELEMAT - RADIONAV NG4	●	●	●	●
3008 HYbrid4	TELEMAT - RADIONAV RNEG	●	●	●	●
3008 HYbrid4	TELEMAT - RADIONAV RNEGC	●	●	●	●
3008 HYbrid4	TELEMAT - RNEG2010	●	●	●	●
3008 HYbrid4	VTH - VTH	●	●	●	●
3008 HYbrid4	VTH - VTH UDS	●	●	●	●
301	AAS - Parking Assistance	●	●	●	●
301	ABRASR - ABSMK100	●	●	●	●
301	ABRASR - ESPMK100	●	●	●	●
301	AFFICHEUR - EMF A UDS	●	●	●	●
301	AFFICHEUR - EMF C UDS	●	●	●	●
301	AIRBAG - Airbag.	●	●	●	●
301	AUTORADIO - RD45	●	●	●	●
301	AUTORADIO - RDE	●	●	●	●
301	BMF(BSI2010) - Built-in Systems Interface.	●	●	●	●
301	BOITEVIT - BVA AL4	●	●	●	●
301	BOITEVIT - MAPS UDS	●	●	●	●
301	BSR - Trailer relay unit.	●	●	●	●
301	COMBINE - Instrument panel.	●	●	●	●
301	DIRECTN - DAE A515	●	●	●	●



Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
301	HDC - Switch Module at the Steering Wheel	●	●	●	●
301	INJ - EDC17C10 BR2	●	●	●	●
301	INJ - ME745 EC5	●	●	●	●
301	INJ - V46	●	●	●	●
301	INJ - V46 21	●	●	●	●
301	PADDITIVATION - Multiplexed additive pump.	●	●	●	●
301	SIRENE - Siren	●	●	●	●
306	Engines/ automatic gearbox(NFL BOSCH MP5.2)	●	●	●	●
306	Engines/ automatic gearbox(NFZ BOSCH MP5.2)	●	●	●	●
306 R	Engines/ automatic gearbox(DHV BOSCH VP20)	●	●	●	●
306 R	Engines/ automatic gearbox(DHY BOSCH VP20)	●	●	●	●
306 R	Engines/ automatic gearbox(K6D SAGEM S2000)	●	●	●	●
306 R	Engines/ automatic gearbox(KFW SAGEM S2000)	●	●	●	●
306 R	Engines/ automatic gearbox(KFX BOSCH MP7.3)	●	●	●	●
306 R	Engines/ automatic gearbox(KFX MM1AP)	●	○	○	●
306 R	Engines/ automatic gearbox(KFX SAGEM SL 96)	●	○	○	●
306 R	Engines/ automatic gearbox(LFY BOSCH MP7.3)	●	●	●	●
306 R	Engines/ automatic gearbox(LFY SAGEM SL 96)	●	○	○	●
306 R	Engines/ automatic gearbox(NFT BOSCH M7.4.4)	●	●	●	●
306 R	Engines/ automatic gearbox(NFV BOSCH M7.4.4)	●	●	●	●
306 R	Engines/ automatic gearbox(NFZ BOSCH MP5.2)	●	●	●	●
306 R	Engines/ automatic gearbox(NFZ BOSCH MP7.2)	●	●	●	●
306 R	Engines/ automatic gearbox(R6E BOSCH MP5.2)	●	●	●	●
306 R	Engines/ automatic gearbox(RFS MM1AP)	●	○	○	●
306 R	Engines/ automatic gearbox(RFV BOSCH MP5.2)	●	●	●	●
306 R	Engines/ automatic gearbox(RHY BOSCH EDC15C2)	●	●	●	●
306 R	Engines/ automatic gearbox(WJY LUCAS DCN2)	●	●	●	●
306 R	Engines/ automatic gearbox(WJZ LUCAS DCN2)	●	●	●	●
307 CAN	AAS - Parking aid.	●	●	●	○
307 CAN	ABRASR - ABS81	●	●	●	●
307 CAN	ABRASR - ABS8 BOSCH	●	●	●	●
307 CAN	ABRASR - ESP81	●	●	●	●
307 CAN	ABRASR - ESP8 BOSCH	●	●	●	●
307 CAN	ADDITIVATION - ADDG03	●	●	●	●
307 CAN	AFFICHEUR - EMF A	●	●	●	●
307 CAN	AFFICHEUR - EMF C	●	●	●	●
307 CAN	AIRBAG - Driver and passenger airbags.	●	●	●	●
307 CAN	ALARME - Anti-theft alarm.	●	●	●	●
307 CAN	AUTORADIO - Radio or radiotelephone (radio part).	●	●	●	●
307 CAN	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
307 CAN	BOITEVIT - BVA AL4	●	●	●	●
307 CAN	BOITEVIT - BVA AM6	●	●	●	●
307 CAN	BSM(BSI) - Engine Relay Unit	●	●	●	●
307 CAN	BSR(BSI) - Trailer relay unit.	●	●	●	●
307 CAN	CHANGEURCD - CD player.	●	●	●	○
307 CAN	CLIM - heating/ventilation	●	●	●	●
307 CAN	COMBINE - Instrument panel.	●	●	●	●
307 CAN	CORPROD - Right headlamp beam corrector	●	●	●	●
307 CAN	CORPROG - Left headlamp beam level corrector .	●	●	●	●
307 CAN	CPL - Rain and Brightness Sensor	●	●	●	○
307 CAN	DIRECTN - Power steering electric pump unit.	●	●	●	●
307 CAN	DSG - Under inflation detection.	●	●	●	●
307 CAN	ECOLE - Driving school module.	●	●	●	○
307 CAN	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
307 CAN	INJ - DCM34	●	●	●	●
307 CAN	INJ - EDC15C2	●	●	●	●
307 CAN	INJ - EDC16C3	●	●	●	●
307 CAN	INJ - HDI SID803	●	●	●	●
307 CAN	INJ - HDI SID803A	●	●	●	●
307 CAN	INJ - ME745	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
307 CAN	INJ - ME745 EC5	●	●	●	●
307 CAN	INJ - ME749	●	●	●	●
307 CAN	INJ - MM6KP	●	●	●	●
307 CAN	INJ - MM6LP	●	●	●	●
307 CAN	INJ - MM6LPB	●	●	●	●
307 CAN	INJ - MM6LPC	●	●	●	●
307 CAN	KML - BOITIER NOMADE	●	●	●	●
307 CAN	KML - KML	●	●	●	●
307 CAN	MDS - Services module.	●	●	●	●
307 CAN	PADDITIVATION - Diesel additive adding pump.	●	●	●	●
307 CAN	PORTEC - Driver door electronics.	●	●	●	●
307 CAN	PORTEP - Passenger door electronics.	●	●	●	●
307 CAN	RHF - High frequency receiver.	●	●	●	●
307 CAN	TELEMAT - Telematics .	●	●	●	●
307 CAN	TOITESC - Folding roof.	●	●	●	●
307 CAN	TOUV - Sunroof.	●	●	●	●
307 VAN	ABS BOSCH 5.3	●	○	○	●
307 VAN	Active safety(ABS BOSCH 8)	●	●	●	●
307 VAN	Active safety(ESP BOSCH 5.7)	●	●	●	●
307 VAN	Active safety(ESP BOSCH 8)	●	●	●	●
307 VAN	Air conditioning	●	●	●	●
307 VAN	Airbags	●	●	●	○
307 VAN	BSI - Built-in systems interface	●	○	○	●
307 VAN	CD player	●	●	●	●
307 VAN	Diesel fuel additive control unit	●	●	●	●
307 VAN	Display / Telematics(AMF)	●	●	●	●
307 VAN	Display / Telematics(RT3)	●	●	●	●
307 VAN	Driver's door module	●	○	○	●
307 VAN	Driving school	●	○	○	●
307 VAN	Electric pump unit(power steering)	●	●	●	●
307 VAN	Engine ECU(9HT BOSCH EDC16C3)	●	●	●	●
307 VAN	Engine ECU(9HX BOSCH EDC16C3)	●	●	●	●
307 VAN	Engine ECU(9HY BOSCH EDC16C3 EUR04)	●	●	●	●
307 VAN	Engine ECU(9HY BOSCH EDC16C3)	●	●	●	●
307 VAN	Engine ECU(9HZ BOSCH EDC16C3)	●	●	●	●
307 VAN	Engine ECU(KFU MM6LP)	●	●	●	●
307 VAN	Engine ECU(RFN MM6LP)	●	●	●	●
307 VAN	Engine ECU(RHL SIEMENS SID 803)	●	●	●	●
307 VAN	Engine ECU(RHR SIEMENS SID 803)	●	●	●	●
307 VAN	Engines/ automatic gearbox(8HZ BOSCH EDC16C3)	●	●	●	●
307 VAN	Engines/ automatic gearbox(K6D SAGEM S2000)	●	●	●	●
307 VAN	Engines/ automatic gearbox(KFW SAGEM S2000)	●	●	●	●
307 VAN	Engines/ automatic gearbox(N6A BOSCH ME7. 4. 4)	●	●	●	●
307 VAN	Engines/ automatic gearbox(N6A BOSCH ME7. 4. 5)	●	●	●	●
307 VAN	Engines/ automatic gearbox(NFU BOSCH ME7. 4. 4)	●	●	●	●
307 VAN	Engines/ automatic gearbox(NFU BOSCH ME7. 4. 5)	●	●	●	●
307 VAN	Engines/ automatic gearbox(RFK MM6LP)	●	●	●	●
307 VAN	Engines/ automatic gearbox(RFN MM48P (mechanical throttle housing ))	●	●	●	●
307 VAN	Engines/ automatic gearbox(RFN MM4MP2 (motorised butterfly))	●	●	●	●
307 VAN	Engines/ automatic gearbox(RHS BOSCH EDC15C2)	●	●	●	●
307 VAN	Engines/ automatic gearbox(RHY BOSCH EDC15C2)	●	●	●	●
307 VAN	Engines/ automatic gearbox(RHY SIEMENS SID 801)	●	●	●	●
307 VAN	Engines/ automatic gearbox(RHZ BOSCH EDC15C2)	●	●	●	●
307 VAN	Folding roof	●	●	●	●
307 VAN	Gearbox(AL4 gearbox)	●	●	●	●
307 VAN	Instrument panel	●	●	●	●
307 VAN	Parking aid	●	●	●	●
307 VAN	Passenger door module	●	○	○	●
307 VAN	Radio	●	●	●	●
307 VAN	Roll-over ECU	●	●	●	●
307 VAN	Sun roof	●	●	●	●
307 VAN	Switching module below steering wheel (COM 2000)	●	○	○	●
307 VAN	Vehicle protection / Management of accesses(Alarm)	●	●	●	○
308	AAS - Parking aid.	●	●	●	●
308	ABRASR - ABS81	●	●	●	●
308	ABRASR - ESP81	●	●	●	●
308	AFFICHEUR - EMF A	●	●	●	●
308	AFFICHEUR - EMF C	●	●	●	●
308	AIRBAG - Driver and passenger airbags.	●	●	●	●
308	ALARME - ALARME LIN	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
308	ALARMES - Anti-theft alarm.	●	●	●	●
308	AMPLHIFI - audio amplifier.	●	●	●	○
308	AUTORADIO - AUTORADIO	●	●	●	●
308	AUTORADIO - RD43	●	●	●	●
308	AUTORADIO - RD45	●	●	●	●
308	BDMC - Driver seat memorizing unit.	●	●	●	●
308	BDMP - Passenger seat memorization unit.	●	●	●	●
308	BECB - BECB	●	●	●	●
308	BECB - BECB GEN2	●	●	●	●
308	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
308	BOITEVIT - BVA AL4	●	●	●	●
308	BOITEVIT - BVA AM6	●	●	●	●
308	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
308	BOITEVIT - CFC300P	●	●	●	●
308	BSM(BSI) - Engine Relay Unit	●	●	●	●
308	BSR(BSI) - Trailer relay unit.	●	●	●	●
308	CHANGEURCD - CD player.	●	●	●	○
308	CLIM - heating/ventilation	●	●	●	●
308	COMBINE - Instrument panel.	●	●	●	●
308	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
308	CPL - Rain and Brightness Sensor	●	●	●	○
308	DIRECTN - Power steering electric pump unit.	●	●	●	●
308	DMTC - Central voltage retention device	●	○	●	○
308	DPM - Moving panel deflector.	●	●	●	●
308	DSG - DSG	●	●	●	●
308	DSG - DSG UDS	●	●	●	●
308	ECOLE - Driving school module.	●	●	●	○
308	ESSUIV - Windscreen wiper.	●	●	●	○
308	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
308	INJ - DCM34	●	●	●	●
308	INJ - DCM35	●	●	●	●
308	INJ - DCM35 BR2	●	●	●	●
308	INJ - EDC16C3	●	●	●	●
308	INJ - EDC17C10	●	●	●	●
308	INJ - EDC17C10 BR2	●	●	●	●
308	INJ - HDI SID807	●	●	●	●
308	INJ - HDI SID807 BR2	●	●	●	●
308	INJ - ME745	●	●	●	●
308	INJ - ME745 EC5	●	●	●	●
308	INJ - ME749	●	●	●	●
308	INJ - ME749 EC5	●	●	●	●
308	INJ - MED17 4 2	●	●	●	●
308	INJ - MED17 4 EURO4	●	●	●	●
308	INJ - MED17 4 EURO5	●	●	●	●
308	INJ - MEV17 4 2	●	●	●	●
308	INJ - MEV17 4 EURO4	●	●	●	●
308	INJ - MEV17 4 EURO5	●	●	●	●
308	INJ - MEVD17 4 2	●	●	●	●
308	INJ - MM6KP	●	●	●	●
308	INJ - MM6LPB	●	●	●	●
308	INJ - V46 21	●	●	●	●
308	KML - BOITIER NOMADE	●	●	●	●
308	KML - KML	●	●	●	●
308	MATT - Matrix screen integral to the instrument panel.	●	●	●	●
308	MDS - BLVV	●	●	●	●
308	MDS - BTA	●	●	●	●
308	MDS - MD SERV	●	●	●	●
308	PADDITIVATION - PADDGO	●	●	●	●
308	PADDITIVATION - PADDGO E5	●	●	●	●
308	PORTEC - Door control pad.	●	●	●	●
308	RHF - High frequency receiver.	●	●	●	●
308	STL - Lane Departure Warning System	●	●	●	●
308	TELEMAT - BOITIER TELEMATIQUE	●	●	●	●
308	TELEMAT - RADIONAV NG4	●	●	●	●
308	TELEMAT - RADIONAV RNEG	●	●	●	●
308	TELEMAT - RADIONAV RNEGC	●	●	●	●
308	TELEMAT - RADIONAV RNEG ECO	●	●	●	●
308	TELEMAT - RNEG2010	●	●	●	●
308	TNB - Seat belts not fastened LED unit.	●	○	●	○
308	TOITESC - Folding roof.	●	●	●	●
308	TOUV - Sunroof.	●	●	●	●
308 (T9)	AAS - Parking aid.	●	●	●	●
308 (T9)	ABRASR - ABS/ESP.	●	●	●	●
308 (T9)	AFFICHEUR - EMF A UDS	●	●	●	○
308 (T9)	AFFICHEUR - EMF C UDS	●	●	●	●
308 (T9)	AFFICHEUR LIN - Touch screen.	●	●	●	●
308 (T9)	AIRBAG - Airbag.	●	●	●	●
308 (T9)	ALARME - Anti-theft alarm.	●	●	●	●
308 (T9)	AMPLHIFI - audio amplifier.	●	●	●	○
308 (T9)	ARTIV - Vehicle distance assistance.	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
308 (T9)	AUTORADIO - Radio.	●	●	●	●
308 (T9)	AVE - Electric Steering Lock	●	●	●	●
308 (T9)	BDMC - Seat driver position memory module.	●	●	●	●
308 (T9)	BECB - Battery charge status unit.	●	●	●	●
308 (T9)	BMF(BSI2010) - Built-in Systems Interface.	●	●	●	●
308 (T9)	BML - Hands free starting access electronic module.	●	●	●	●
308 (T9)	BOITEVIT - Gearbox	●	●	●	●
308 (T9)	BPGA - Supply protection and management unit.	●	●	●	●
308 (T9)	BSM - Engine Relay Unit	●	●	●	●
308 (T9)	BSR - Trailer relay unit.	●	●	●	●
308 (T9)	CDE - External CD player.	●	●	●	●
308 (T9)	CHAUFFADD - Additional heating.	●	●	●	●
308 (T9)	CLIM - Air Conditioning	●	●	●	●
308 (T9)	COMBINE - COMBINE UDS	●	●	●	●
308 (T9)	COMBINE - COMBINE UDS 2	●	●	●	●
308 (T9)	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
308 (T9)	CPL - Rain and Brightness Sensor	●	●	●	●
308 (T9)	CRTELEMAT_UDS - Radiotelephone transceiver control.	●	●	●	●
308 (T9)	CSR - Steering wheel with integral controls (VCI).	●	●	●	●
308 (T9)	DIRECTN - Electric power steering.	●	●	●	●
308 (T9)	DMTC - DMTC	●	○	●	○
308 (T9)	DMTC - DMTR	●	●	●	○
308 (T9)	FMUX - Multiplexed control panel.	●	●	●	●
308 (T9)	HDC - COM2008P	●	●	●	●
308 (T9)	HDC - HDC	●	●	●	●
308 (T9)	INJ - DCM62	●	●	●	●
308 (T9)	INJ - EDC17C10 BR2	●	●	●	●
308 (T9)	INJ - EDC17C60	●	●	●	●
308 (T9)	INJ - HDI SID807 BR2	●	●	●	●
308 (T9)	INJ - MED17 4 2	●	●	●	●
308 (T9)	INJ - MED17 4 4	●	●	●	●
308 (T9)	INJ - V46	●	●	●	●
308 (T9)	INJ - V46 21	●	●	●	●
308 (T9)	INJ - V46 32	●	●	●	●
308 (T9)	INJ - VD46	●	●	●	●
308 (T9)	LCE - Electronic key reader.	●	●	●	●
308 (T9)	MATT - MATT C 2010	●	●	●	○
308 (T9)	MATT - MATT M 2010	●	●	●	○
308 (T9)	MDS - BTA	●	●	●	●
308 (T9)	MDS - BTA CN	●	●	●	●
308 (T9)	PADDITIVATION - Diesel Additive Function	●	●	●	●
308 (T9)	PORTEC - Door control pad.	●	●	●	●
308 (T9)	SIRENE - Siren	●	●	●	●
308 (T9)	TELEMAT - MRN	●	●	●	●
308 (T9)	TELEMAT - SMEG PLUS	●	●	●	●
308 (T9)	TNB - Seat belts not fastened LED unit.	●	○	●	○
308 4 portes	AAS - Parking aid.	●	●	●	●
308 4 portes	ABRASR - ABS81	●	●	●	●
308 4 portes	ABRASR - ESP81	●	●	●	●
308 4 portes	AFFICHEUR - EMF A	●	●	●	●
308 4 portes	AFFICHEUR - EMF C	●	●	●	●
308 4 portes	AIRBAG - Driver and passenger airbags.	●	●	●	●
308 4 portes	ALARME - ALARME LIN	●	●	●	●
308 4 portes	ALARMES - Anti-theft alarm.	●	●	●	●
308 4 portes	AMPLHIFI - audio amplifier.	●	●	●	○
308 4 portes	BDMC - Driver seat memorizing unit.	●	●	●	●
308 4 portes	BDMP - Passenger seat memorization unit.	●	●	●	●
308 4 portes	BECB - BECB	●	●	●	●
308 4 portes	BECB - BECB GEN2	●	●	●	●
308 4 portes	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
308 4 portes	BOITEVIT - BVA AL4	●	●	●	●
308 4 portes	BOITEVIT - BVA AM6	●	●	●	●
308 4 portes	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
308 4 portes	BOITEVIT - CFC300P	●	●	●	●
308 4 portes	BSM(BSI) - Engine Relay Unit	●	●	●	●
308 4 portes	CHANGEURCD - CD player.	●	●	●	○
308 4 portes	CLIM - heating/ventilation	●	●	●	●
308 4 portes	COMBINE - Instrument panel.	●	●	●	●
308 4 portes	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
308 4 portes	CPL - Rain and Brightness Sensor	●	●	●	○
308 4 portes	DIRECTN - Power steering electric pump unit.	●	●	●	●
308 4 portes	DPM - Moving panel deflector.	●	●	●	●
308 4 portes	DSG - DSG	●	●	●	●
308 4 portes	DSG - DSG UDS	●	●	●	●
308 4 portes	ECOLE - Driving school module.	●	●	●	○

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
308 4 portes	ESSUIV - Windscreen wiper.	●	●	●	○
308 4 portes	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
308 4 portes	INJ - DCM34	●	●	●	●
308 4 portes	INJ - DCM35	●	●	●	●
308 4 portes	INJ - DCM35 BR2	●	●	●	●
308 4 portes	INJ - EDC16C3	●	●	●	●
308 4 portes	INJ - EDC17C10	●	●	●	●
308 4 portes	INJ - EDC17C10 BR2	●	●	●	●
308 4 portes	INJ - HDI SID807	●	●	●	●
308 4 portes	INJ - HDI SID807 BR2	●	●	●	●
308 4 portes	INJ - ME745	●	●	●	●
308 4 portes	INJ - ME745 EC5	●	●	●	●
308 4 portes	INJ - ME749	●	●	●	●
308 4 portes	INJ - ME749 EC5	●	●	●	●
308 4 portes	INJ - MED17 4 2	●	●	●	●
308 4 portes	INJ - MED17 4 EURO4	●	●	●	●
308 4 portes	INJ - MED17 4 EURO5	●	●	●	●
308 4 portes	INJ - MEV17 4 2	●	●	●	●
308 4 portes	INJ - MEV17 4 EURO4	●	●	●	●
308 4 portes	INJ - MEV17 4 EURO5	●	●	●	●
308 4 portes	INJ - MEVD17 4 2	●	●	●	●
308 4 portes	INJ - MM6KP	●	●	●	●
308 4 portes	INJ - MM6LPB	●	●	●	●
308 4 portes	INJ - V46 21	●	●	●	●
308 4 portes	KML - BOITIER NOMADE	●	●	●	●
308 4 portes	KML - KML	●	●	●	●
308 4 portes	MATT - Matrix screen integral to the instrument panel.	●	●	●	●
308 4 portes	MDS - BLVV	●	●	●	●
308 4 portes	MDS - BTA	●	●	●	●
308 4 portes	MDS - MD SERV	●	●	●	●
308 4 portes	PADDITIVATION - PADDGO	●	●	●	●
308 4 portes	PADDITIVATION - PADDGO E5	●	●	●	●
308 4 portes	PORTEC - Door control pad.	●	●	●	●
308 4 portes	STL - Lane Departure Warning System	●	●	●	●
308 4 portes	TELEMAT - BOITIER TELEMATIQUE	●	●	●	●
308 4 portes	TELEMAT - RADIONAV NG4	●	●	●	●
308 4 portes	TELEMAT - RADIONAV RNEG	●	●	●	●
308 4 portes	TELEMAT - RADIONAV RNEGC	●	●	●	●
308 4 portes	TELEMAT - RADIONAV RNEG ECO	●	●	●	●
308 4 portes	TELEMAT - RNEG2010	●	●	●	●
308 4 portes	TNB - Seat belts not fastened LED unit.	●	○	●	○
308 4 portes	TOITESC - Folding roof.	●	●	●	●
308 4 portes	TOUV - Sunroof.	●	●	●	●
4007	AAS - Parking aid.	●	●	●	●
4007	ABRASR - ABS	●	●	●	●
4007	ABRASR - ESP	●	●	●	●
4007	ADC - Locking and immobilizer control module.	●	●	●	●
4007	AIDENAV - Navigation	●	●	●	○
4007	AIRBAG - Driver and passenger airbags.	●	●	●	●
4007	AUTORADIO - Radio or radiotelephone (radio part).	●	●	●	●
4007	BMF - Built-in Systems Interface.	●	●	●	●
4007	BOITEVIT - BOITE GETRAG	●	●	●	●
4007	BOITEVIT - BV CVT	●	●	●	●
4007	CAV - Steering wheel angle sensor.	●	●	●	○
4007	CLIM - heating/ventilation	●	●	●	●
4007	COMBINE - Instrument panel.	●	●	●	●
4007	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
4007	CPL - Rain and Brightness Sensor	●	●	●	●
4007	INJ - EDC16CP39	●	●	●	●
4007	INJ - EDC16CP39 E5	●	●	●	●
4007	INJ - MIVEC	●	●	●	●
4007	KML - Hands-free kit (telephone).	●	●	●	●
4007	LEVIERVITESSES - Shift lever.	●	●	●	●
4007	PDPARD - Right rear door switch panel.	●	●	●	●
4007	PDPARG - Left rear door switch panel.	●	●	●	●
4007	PORTEC - Driver door module .	●	●	●	●
4007	PORTEP - Passenger door module .	●	●	●	●
4007	TOUV - Sunroof.	●	●	●	●
4007	TRANSMISSION - Rear final drive piloted clutch.	●	●	●	●
4008	AAS - Parking aid.	●	●	●	●
4008	ABRASR - ABS 4x4	●	●	●	●
4008	ABRASR - ESP 4x4	●	●	●	●
4008	ADC - KOS	●	●	●	●
4008	ADC - WCM	●	●	●	●
4008	AIDENAV - Navigation	●	●	●	○
4008	AIRBAG - Driver and passenger airbags.	●	●	●	●
4008	ALARMES - Anti-theft alarm.	●	●	●	●
4008	AUTORADIO - Radio or radiotelephone (radio part).	●	●	●	●
4008	BMF - Built-in Systems Interface.	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
4008	BOITEVIT - Gearbox	●	●	●	●
4008	CAV - Steering wheel angle sensor.	●	●	●	○
4008	CLIM - heating/ventilation	●	●	●	●
4008	COMBINE - Instrument panel.	●	●	●	●
4008	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
4008	CPL - Rain and Brightness Sensor	●	●	●	●
4008	DARA - ECU-Start and Stop	●	●	●	●
4008	DIRECTN - Power steering.	●	●	●	●
4008	INJ - CMM 4A92	●	●	●	●
4008	INJ - HDI 4N13	●	●	●	●
4008	INJ - HDI SID807 J3J4	●	●	●	●
4008	INJ - MIVEC	●	●	●	●
4008	OSS - Starting authorization ECU.	●	●	●	●
4008	PORTEC - Driver door module .	●	●	●	●
4008	TRANSMISSION - Rear final drive piloted clutch.	●	●	●	●
406	4HP20 automatic gearbox	●	○	○	●
406	ABS BOSCH 5.3	●	○	○	●
406	ABS5 BOSCH	●	○	○	●
406	AL4 autoadaptive automatic gearbox	●	●	●	●
406	Engines/ automatic gearbox(DHX BOSCH VP20)	●	●	●	●
406	Engines/ automatic gearbox(LFX MM1AP)	●	○	○	●
406	Engines/ automatic gearbox(LFY BOSCH MP5.1.1)	●	●	●	●
406	Engines/ automatic gearbox(LFY BOSCH MP5.2)	●	●	●	●
406	Engines/ automatic gearbox(LFY BOSCH MP7.3)	●	●	●	●
406	Engines/ automatic gearbox(LFY SAGEM SL 96)	●	○	○	●
406	Engines/ automatic gearbox(R6E BOSCH MP5.2)	●	●	●	●
406	Engines/ automatic gearbox(RFV BOSCH MP5.1.1)	●	●	●	●
406	Engines/ automatic gearbox(RFV BOSCH MP5.2)	●	●	●	●
406	Engines/ automatic gearbox(RGX BOSCH MP3.2)	●	●	●	●
406	Engines/ automatic gearbox(RHZ BOSCH EDC15C2)	●	●	●	●
406	Engines/ automatic gearbox(XFZ BOSCH MP7.0)	●	○	○	●
406 Coupe	Active safety(BOSCH ABS5)	●	○	○	●
406 Coupe	Active safety(BOSCH ABS5.3)	●	○	○	●
406 Coupe	Automatic gearbox(BVA AL4 AT8)	●	●	●	●
406 Coupe	Engines/ automatic gearbox(RFV BOSCH MP5.2)	●	●	●	●
406 Coupe	Engines/ automatic gearbox(XFZ BOSCH MP7.0)	●	○	○	●
406 Coupe	Heating/ventilation,heating/ventilation /regulated air conditioning(diagnosis)	○	●	●	○
406 R	4HP20 automatic gearbox	●	●	●	●
406 R	ABS BOSCH 5.3	●	○	○	●
406 R	AL4 autoadaptive automatic gearbox	●	●	●	●
406 R	ESP BOSCH 5.3	●	○	○	●
406 R	Engines/ automatic gearbox(3FZ MM4MP2)	●	●	●	●
406 R	Engines/ automatic gearbox(4HX BOSCH EDC15C2)	●	●	●	●
406 R	Engines/ automatic gearbox(6FZ SAGEM S2000)	●	●	●	●
406 R	Engines/ automatic gearbox(LFY BOSCH MP5.2)	●	●	●	●
406 R	Engines/ automatic gearbox(LFY BOSCH MP7.3)	●	●	●	●
406 R	Engines/ automatic gearbox(LFY SAGEM SL 96)	●	○	○	●
406 R	Engines/ automatic gearbox(R6E BOSCH MP5.2)	●	●	●	●
406 R	Engines/ automatic gearbox(R6F MM4.8P)	●	●	●	●
406 R	Engines/ automatic gearbox(RFN MM4.8P)	●	●	●	●
406 R	Engines/ automatic gearbox(RFR MM4.8P)	●	●	●	●
406 R	Engines/ automatic gearbox(RFV BOSCH MP5.2)	●	●	●	●
406 R	Engines/ automatic gearbox(RHY BOSCH EDC15C2)	●	●	●	●
406 R	Engines/ automatic gearbox(RHZ BOSCH EDC15C2)	●	●	●	●
406 R	Engines/ automatic gearbox(RLZ SIEMENS SIRIUS 81)	●	●	●	●
406 R	Engines/ automatic gearbox(XFX BOSCH ME7.4.6)	●	●	●	●
406 R	Engines/ automatic gearbox(XFZ BOSCH MP7.0)	●	○	○	●
406 R Coupe	4HP20 automatic gearbox	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
406 R Coupe	ABS BOSCH 5.3	●	○	○	●
406 R Coupe	AL4 autoadaptive automatic gearbox	●	●	●	●
406 R Coupe	ESP BOSCH 5.3	●	○	○	●
406 R Coupe	Engines/ automatic gearbox(3FZ MM4MP2)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(4HX BOSCH EDC15C2)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(6FZ SAGEM S2000)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(LFY BOSCH MP5.2)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(LFY BOSCH MP7.3)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(LFY SAGEM SL 96)	●	○	○	●
406 R Coupe	Engines/ automatic gearbox(R6E BOSCH MP5.2)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(R6F MM4.8P)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(RFN MM4.8P)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(RFR MM4.8P)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(RFV BOSCH MP5.2)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(RHY BOSCH EDC15C2)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(RHZ BOSCH EDC15C2)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(RLZ SIEMENS SIRIUS 81)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(XFX BOSCH ME7.4.6)	●	●	●	●
406 R Coupe	Engines/ automatic gearbox(XFZ BOSCH MP7.0)	●	○	○	●
407	AAS - AAS	●	●	●	●
407	AAS - AAS 407	●	●	●	●
407	ABRASR - ESP81	●	●	●	●
407	ABRASR - ESP EBC 440 CAN	●	●	●	●
407	ABRASR - ESP EBC 440 K	●	●	●	●
407	ADDITIVATION - Diesel Additive	●	●	●	●
407	AFFICHEUR - Multifunction display.	●	●	●	●
407	AIRBAG - Driver and passenger airbags.	●	●	●	●
407	ALARME - Anti-theft alarm.	●	●	●	●
407	AUTORADIO - Radio or radiotelephone (radio part).	●	●	●	●
407	BDMC - Driver seat memorizing unit.	●	●	●	●
407	BDMP - Passenger seat memorization unit.	●	●	●	●
407	BECB - BECB	●	●	●	●
407	BECB - BECB GEN2	●	●	●	●
407	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
407	BOITEVIT - BVA AL4	●	●	●	●
407	BOITEVIT - BVA AM6	●	●	●	●
407	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
407	BOITEVIT - BVA ZF	●	●	●	●
407	BSC(BSI) - Boot wiring housing .	●	●	●	●
407	BSM(BSI) - Engine Relay Unit	●	●	●	●
407	BSR(BSI) - Trailer relay unit.	●	●	●	●
407	CHANGEURCD - CD player.	●	●	●	○
407	CHAUFFADD - Additional heating.	●	●	●	●
407	CLIM - heating/ventilation	●	●	●	●
407	COMBINE - Instrument panel.	●	●	●	●
407	CORPRO - LAD	●	●	●	●
407	CORPRO - LADAFS	●	●	●	●
407	CORPROD - Right headlamp beam corrector .	●	●	●	●
407	CORPROG - Left headlamp beam level corrector .	●	●	●	●
407	CPL - Rain and Brightness Sensor	●	●	●	○
407	DIRECTN - Power steering electric pump unit.	●	●	●	●
407	DSG - Under inflation detection.	●	●	●	●
407	ESSUIV - Windscreen wiper.	●	●	●	○
407	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
407	INJ - DCM34	●	●	●	●
407	INJ - DCM35	●	●	●	●
407	INJ - DCM35 BR2	●	●	●	●
407	INJ - EDC16C3	●	●	●	●
407	INJ - EDC16CP39	●	●	●	●
407	INJ - EDC17CP11	●	●	●	●
407	INJ - HDI SID803	●	●	●	●
407	INJ - HDI SID803A	●	●	●	●
407	INJ - ME747	●	●	●	●
407	INJ - MM6KP	●	●	●	●
407	INJ - MM6LP	●	●	●	●
407	INJ - MM6LPB	●	●	●	●
407	INJ - S2000PM2	●	●	●	●
407	INJ - SID201	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
407	KML - BOITIER NOMADE	●	●	●	●
407	KML - KML	●	●	●	●
407	PORTEC - Driver door electronics.	●	●	●	●
407	PORTEP - Passenger door electronics.	●	●	●	●
407	RHF - High frequency receiver.	●	●	●	●
407	SUSPVAR - Electronically managed suspension.	●	●	●	●
407	TELEMAT - BOITIER TELEMATIQUE	●	●	●	●
407	TELEMAT - RADIONAV RNEG	●	●	●	●
407	TOUV - Sunroof.	●	●	●	●
408 (T73)	AAS - Parking aid.	●	●	●	●
408 (T73)	ABRASR - ABS81	●	●	●	●
408 (T73)	ABRASR - ESP81	●	●	●	●
408 (T73)	AFFICHEUR - EMF A	●	●	●	●
408 (T73)	AFFICHEUR - EMF C	●	●	●	●
408 (T73)	AIRBAG - Driver and passenger airbags.	●	●	●	●
408 (T73)	ALARME - ALARME LIN	●	●	●	●
408 (T73)	ALARME - Anti-theft alarm.	●	●	●	●
408 (T73)	AMPLHIFI - audio amplifier.	●	●	●	○
408 (T73)	AUTORADIO - AUTORADIO	●	●	●	●
408 (T73)	AUTORADIO - RD43	●	●	●	●
408 (T73)	AUTORADIO - RD45	●	●	●	●
408 (T73)	BDMC - Driver seat memorizing unit.	●	●	●	●
408 (T73)	BDMP - Passenger seat memorization unit.	●	●	●	●
408 (T73)	BECB - BECB	●	●	●	●
408 (T73)	BECB - BECB GEN2	●	●	●	●
408 (T73)	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
408 (T73)	BOITEVIT - BVA AL4	●	●	●	●
408 (T73)	BOITEVIT - BVA AM6	●	●	●	●
408 (T73)	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
408 (T73)	BOITEVIT - CFC300P	●	●	●	●
408 (T73)	BSM(BSI) - Engine Relay Unit	●	●	●	●
408 (T73)	BSR(BSI) - Trailer relay unit.	●	●	●	●
408 (T73)	CHANGEURCD - CD player.	●	●	●	○
408 (T73)	CLIM - heating/ventilation	●	●	●	●
408 (T73)	COMBINE - Instrument panel.	●	●	●	●
408 (T73)	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
408 (T73)	CPL - Rain and Brightness Sensor	●	●	●	○
408 (T73)	DIRECTN - Power steering electric pump unit.	●	●	●	●
408 (T73)	DPM - Moving panel deflector.	●	●	●	●
408 (T73)	DSG - DSG	●	●	●	●
408 (T73)	DSG - DSG UDS	●	●	●	●
408 (T73)	ESSUIV - Windscreen wiper.	●	●	●	○
408 (T73)	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
408 (T73)	INJ - DCM34	●	●	●	●
408 (T73)	INJ - DCM35	●	●	●	●
408 (T73)	INJ - DCM35 BR2	●	●	●	●
408 (T73)	INJ - EDC16C3	●	●	●	●
408 (T73)	INJ - EDC17C10	●	●	●	●
408 (T73)	INJ - EDC17C10 BR2	●	●	●	●
408 (T73)	INJ - HDI SID807	●	●	●	●
408 (T73)	INJ - HDI SID807 BR2	●	●	●	●
408 (T73)	INJ - ME745	●	●	●	●
408 (T73)	INJ - ME745 EC5	●	●	●	●
408 (T73)	INJ - ME749	●	●	●	●
408 (T73)	INJ - ME749 EC5	●	●	●	●
408 (T73)	INJ - MED17 4 2	●	●	●	●
408 (T73)	INJ - MED17 4 EURO4	●	●	●	●
408 (T73)	INJ - MED17 4 EURO5	●	●	●	●
408 (T73)	INJ - MEV17 4 2	●	●	●	●
408 (T73)	INJ - MEV17 4 EURO4	●	●	●	●
408 (T73)	INJ - MEV17 4 EURO5	●	●	●	●
408 (T73)	INJ - MEVD17 4 2	●	●	●	●
408 (T73)	INJ - MM6KP	●	●	●	●
408 (T73)	INJ - MM6LPB	●	●	●	●
408 (T73)	INJ - V46 21	●	●	●	●
408 (T73)	KML - BOITIER NOMADE	●	●	●	●
408 (T73)	KML - KML	●	●	●	●
408 (T73)	MDS - BLVV	●	●	●	●
408 (T73)	MDS - BTA	●	●	●	●
408 (T73)	MDS - MD SERV	●	●	●	●
408 (T73)	PADDITIVATION - PADDGO	●	●	●	●
408 (T73)	PADDITIVATION - PADDGO E5	●	●	●	●
408 (T73)	PORTEC - Door control pad.	●	●	●	●
408 (T73)	RHF - High frequency receiver.	●	●	●	●
408 (T73)	STL - Lane Departure Warning System	●	●	●	●
408 (T73)	TELEMAT - BOITIER TELEMATIQUE	●	●	●	●
408 (T73)	TELEMAT - RADIONAV NG4	●	●	●	●
408 (T73)	TELEMAT - RADIONAV RNEG	●	●	●	●
408 (T73)	TELEMAT - RADIONAV RNEG	●	●	●	●
408 (T73)	TELEMAT - RADIONAV RNEG ECO	●	●	●	●
408 (T73)	TELEMAT - RNEG2010	●	●	●	●



Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
408 (T73)	TNB - Seat belts not fastened LED unit.	●	○	●	○
408 (T73)	TOITESC - Folding roof.	●	●	●	●
408 (T73)	TOUV - Sunroof.	●	●	●	●
408 (T93)	AAS - Parking aid.	●	●	●	●
408 (T93)	ABRASR - ABS/ESP.	●	●	●	●
408 (T93)	AFFICHEUR - EMF A UDS	●	●	●	○
408 (T93)	AFFICHEUR - EMF C UDS	●	●	●	●
408 (T93)	AFFICHEUR LIN - Touch screen.	●	●	●	●
408 (T93)	AIRBAG - Airbag.	●	●	●	●
408 (T93)	ALARMES - Anti-theft alarm.	●	●	●	●
408 (T93)	AUTORADIO - Radio.	●	●	●	●
408 (T93)	AVE - Electric Steering Lock	●	●	●	●
408 (T93)	BDMC - Seat driver position memory module.	●	●	●	●
408 (T93)	BECB - Battery charge status unit.	●	●	●	●
408 (T93)	BMF(BSI2010) - Built-in Systems Interface.	●	●	●	●
408 (T93)	BML - Hands free starting access electronic module.	●	●	●	●
408 (T93)	BOITEVIT - Gearbox	●	●	●	●
408 (T93)	BPGA - Supply protection and management unit.	●	●	●	●
408 (T93)	BSM - Engine Relay Unit	●	●	●	●
408 (T93)	CLIM - Air Conditioning	●	●	●	●
408 (T93)	COMBINE - COMBINE UDS	●	●	●	●
408 (T93)	COMBINE - COMBINE UDS 2	●	●	●	●
408 (T93)	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
408 (T93)	CPL - Rain and Brightness Sensor	●	●	●	●
408 (T93)	CRTELEMAT_UDS - Radiotelephone transceiver control.	●	●	●	●
408 (T93)	DIRECTN - Electric power steering.	●	●	●	●
408 (T93)	DMTC - DMTC	●	○	●	○
408 (T93)	DMTC - DMTR	●	●	●	○
408 (T93)	FMUX - Multiplexed control panel.	●	●	●	●
408 (T93)	HDC - COM2008P	●	●	●	●
408 (T93)	HDC - HDC	●	●	●	●
408 (T93)	INJ - DCM62	●	●	●	●
408 (T93)	INJ - EDC17C10 BR2	●	●	●	●
408 (T93)	INJ - EDC17C60	●	●	●	●
408 (T93)	INJ - HDI SID807 BR2	●	●	●	●
408 (T93)	INJ - MED17 4 2	●	●	●	●
408 (T93)	INJ - MED17 4 4	●	●	●	●
408 (T93)	INJ - V46	●	●	●	●
408 (T93)	INJ - V46 21	●	●	●	●
408 (T93)	INJ - V46 32	●	●	●	●
408 (T93)	INJ - VD46	●	●	●	●
408 (T93)	LCE - Electronic key reader.	●	●	●	●
408 (T93)	MATT - MATT C 2010	●	●	●	○
408 (T93)	MATT - MATT M 2010	●	●	●	○
408 (T93)	MDS - BTA	●	●	●	●
408 (T93)	MDS - BTA CN	●	●	●	●
408 (T93)	TELEMAT - MRN	●	●	●	●
408 (T93)	TELEMAT - SMEG PLUS	●	●	●	●
5008	AAS - Parking aid.	●	●	●	●
5008	ABRASR - ABS or ESP ECU.	●	●	●	●
5008	AFFICHEUR - EMF A	●	●	●	●
5008	AFFICHEUR - EMF C	●	●	●	●
5008	AIRBAG - Airbag.	●	●	●	●
5008	ALARMES - Anti-theft alarm.	●	●	●	●
5008	AMPLHIFI - audio amplifier.	●	●	●	○
5008	ARTIV - Vehicle distance assistance.	●	●	●	●
5008	AUTORADIO - AUTORADIO	●	●	●	●
5008	AUTORADIO - RD43	●	●	●	●
5008	AUTORADIO - RD45	●	●	●	●
5008	BECB - BECB	●	●	●	●
5008	BECB - BECB GEN2	●	●	●	●
5008	BIR - Network isolation control unit.	●	○	●	●
5008	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
5008	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
5008	BOITEVIT - CFC300P	●	●	●	●
5008	BOITEVIT - CFC300P HY	●	●	●	●
5008	BSM(BSI) - Engine Relay Unit	●	●	●	●
5008	BSR(BSI) - Trailer relay unit.	●	●	●	●
5008	CHANGEURCD - CD player.	●	●	●	○
5008	CLIM - A/C ECU.	●	●	●	●
5008	COMBINE - Instrument panel	●	●	●	●
5008	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
5008	CPL - Rain sensor.	●	●	●	○
5008	DIRECTN - Power steering electric pump unit.	●	●	●	●
5008	DMTC - Central voltage retention device	●	○	●	○
5008	DSG - DSG	●	●	●	●
5008	DSG - DSG UDS	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
5008	ESSUIV - Windscreen wiper.	●	●	●	○
5008	FSE - Electric secondary brake.	●	●	●	●
5008	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
5008	INJ - DCM35	●	●	●	●
5008	INJ - DCM35 BR2	●	●	●	●
5008	INJ - DCM35 HY	●	●	●	●
5008	INJ - DCM62	●	●	●	●
5008	INJ - EDC16C3	●	●	●	●
5008	INJ - EDC17C60	●	●	●	●
5008	INJ - HDI SID807	●	●	●	●
5008	INJ - HDI SID807 BR2	●	●	●	●
5008	INJ - MED17 4 2	●	●	●	●
5008	INJ - MED17 4 EURO4	●	●	●	●
5008	INJ - MED17 4 EURO5	●	●	●	●
5008	INJ - MEV17 4 2	●	●	●	●
5008	INJ - MEV17 4 EURO4	●	●	●	●
5008	INJ - MEV17 4 EURO5	●	●	●	●
5008	INJ - MM6KP	●	●	●	●
5008	KML - Hands-free kit (telephone).	●	●	●	●
5008	MATT - Matrix screen integral to the instrument panel.	●	●	●	●
5008	MDS - BLVV	●	●	●	●
5008	MDS - BTA	●	●	●	●
5008	MDS - MD SERV	●	●	●	●
5008	PADDITIVATION - PADDGO	●	●	●	●
5008	PADDITIVATION - PADDGO E5	●	●	●	●
5008	PADDITIVATION - PADDGO TI E6	●	●	●	●
5008	PORTEC - Door control pad.	●	●	●	●
5008	RHF - High frequency receiver.	●	●	●	●
5008	TELEMAT - RADIONAV NG4	●	●	●	●
5008	TELEMAT - RADIONAV RNEG	●	●	●	●
5008	TELEMAT - RADIONAV RNEGC	●	●	●	●
5008	TELEMAT - RNEG2010	●	●	●	●
5008	TNB - Seat belts not fastened LED unit.	●	○	●	○
5008	VTH - VTH	●	●	●	●
5008	VTH - VTH UDS	●	●	●	●
508	AAS - Parking Assistance	●	●	●	●
508	ABRASR - ABS81	●	●	●	●
508	ABRASR - ESP81	●	●	●	●
508	AFFICHEUR - EMF A UDS	●	●	●	○
508	AFFICHEUR - EMF C UDS	●	●	●	●
508	AIRBAG - Airbag.	●	●	●	●
508	ALARME - Anti-theft alarm.	●	●	●	●
508	AMPLHIFI - Radio amplifier.	●	●	●	○
508	AUTORADIO - RD5 radio.	●	●	●	●
508	AVE - Electric Steering Lock	●	●	●	●
508	BCM - Motorized boot ECU.	●	●	●	●
508	BDMC - Driver seat memorizing unit.	●	●	●	●
508	BEBA - Active damper electronic unit.	●	●	●	●
508	BECB - Battery charge status unit.	●	●	●	●
508	BMF(BSI2010) - Built-in Systems Interface.	●	●	●	●
508	BML - Hands free starting access electronic module.	●	●	●	●
508	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
508	BOITEVIT - BVA AM6 AT6 UDS	●	●	●	●
508	BOITEVIT - CFC300P	●	●	●	●
508	BOITEVIT - CFC300P HY	●	●	●	●
508	BPGA - Supply protection and management unit.	●	●	●	●
508	BSM - Engine relay unit.	●	●	●	●
508	BSR - Trailer relay unit.	●	●	●	●
508	CHAUFFADD - Additional heating.	●	●	●	●
508	CLIM - CLIM REGULEE UDS	●	●	●	●
508	CLIM AR - Rear A/C.	●	○	●	●
508	COMBINE - Instrument panel	●	●	●	●
508	CORPRO - BEMP	●	●	●	●
508	CORPRO - LADCT	●	●	●	●
508	CPL - Rain and Brightness Sensor	●	●	●	●
508	CRT UDS - Telematic navigator.	●	○	●	●
508	CSR - Steering wheel with integral controls (VCI).	●	●	●	●
508	DIRECTN - Power steering electric pump unit.	●	●	●	●
508	DMTC - DMTC	●	○	●	○
508	DMTC - DMTR	●	●	●	○
508	DSG - DSG	●	●	●	●
508	DSG - DSG UDS	●	●	●	●
508	FMUX - Multiplexed control panel.	●	●	●	●
508	FSE - Electric secondary brake.	●	●	●	●
508	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
508	INJ - DCM34 P	●	●	●	●
508	INJ - DCM35 BR2	●	●	●	●
508	INJ - DCM35 HY	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
508	INJ - DCM62	●	●	●	●
508	INJ - EDC17CP42	●	●	●	●
508	INJ - HDI SID807 BR2	●	●	●	●
508	INJ - MED17 4 2	●	●	●	●
508	INJ - MED17 4 4	●	●	●	●
508	INJ - MEV17 4 2	●	●	●	●
508	INJ - MM6KP	●	●	●	●
508	LCE - Electronic key reader.	●	●	●	●
508	MATT - MATT C 2010	●	●	●	○
508	MATT - MATT M 2010	●	●	●	○
508	MATT - MATT P 2010	●	●	●	○
508	MDS - BTA	●	●	●	●
508	MDS - BTA CN	●	●	●	●
508	MOTED - Windscreen Wiper (Right Hand Side)	●	●	●	●
508	MOTEV - Windscreen Wiper (Left Hand Side)	●	●	●	●
508	PORTEC - Door control pad.	●	●	●	●
508	RETRO INT - Main beams assistant ECU.	●	●	●	●
508	TELEMAT - MRN	●	●	●	●
508	TELEMAT - RNEG2010	●	●	●	●
508	TELEMAT - SMEG PLUS	●	●	●	●
508	TNB - Seat belts not fastened LED unit.	●	○	●	○
508	VTH - High head vision.	●	●	●	●
508 HYbrid4	AAS - Parking Assistance	●	●	●	●
508 HYbrid4	ABRASR - ABS81	●	●	●	●
508 HYbrid4	ABRASR - ESP81	●	●	●	●
508 HYbrid4	AFFICHEUR - EMF A UDS	●	●	●	○
508 HYbrid4	AFFICHEUR - EMF C UDS	●	●	●	●
508 HYbrid4	AIRBAG - Airbag.	●	●	●	●
508 HYbrid4	ALARME - Anti-theft alarm.	●	●	●	●
508 HYbrid4	AMPLIFI - Radio amplifier.	●	●	●	○
508 HYbrid4	AUTORADIO - RD5 radio.	●	●	●	●
508 HYbrid4	AVE - Electric Steering Lock	●	●	●	●
508 HYbrid4	BDMC - Driver seat memorizing unit.	●	●	●	●
508 HYbrid4	BECEB - Battery charge status unit.	●	●	●	●
508 HYbrid4	BMF(BSI2010) - Built-in Systems Interface.	●	●	●	●
508 HYbrid4	BML - Hands free starting access electronic module.	●	●	●	●
508 HYbrid4	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
508 HYbrid4	BOITEVIT - BVA AM6 AT6 UDS	●	●	●	●
508 HYbrid4	BOITEVIT - CFC300P	●	●	●	●
508 HYbrid4	BOITEVIT - CFC300P HY	●	●	●	●
508 HYbrid4	BPGA - Supply protection and management unit.	●	●	●	●
508 HYbrid4	BSM - Engine relay unit.	●	●	●	●
508 HYbrid4	BSR - Trailer relay unit.	●	●	●	●
508 HYbrid4	CHAUFFADD - Additional heating.	●	●	●	●
508 HYbrid4	CLIM - CLIM REGULEE UDS	●	●	●	●
508 HYbrid4	CLIM AR - Rear A/C.	●	○	●	●
508 HYbrid4	COMBINE - Instrument panel	●	●	●	●
508 HYbrid4	CORPRO - BEMP	●	●	●	●
508 HYbrid4	CORPRO - LADCT	●	●	●	●
508 HYbrid4	CPL - Rain and Brightness Sensor	●	●	●	●
508 HYbrid4	CRT UDS - Telematic navigator.	●	○	●	●
508 HYbrid4	CSR - Steering wheel with integral controls (VCI).	●	●	●	●
508 HYbrid4	DIRECTN - Power steering electric pump unit.	●	●	●	●
508 HYbrid4	DSG - DSG	●	●	●	●
508 HYbrid4	DSG - DSG UDS	●	●	●	●
508 HYbrid4	FMUX - Multiplexed control panel.	●	●	●	●
508 HYbrid4	FSE - Electric secondary brake.	●	●	●	●
508 HYbrid4	HCU1 - Hybrid control ECU 1.	●	●	●	●
508 HYbrid4	HCU2 - Hybrid control ECU 2.	●	●	●	●
508 HYbrid4	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
508 HYbrid4	INJ - DCM34 P	●	●	●	●
508 HYbrid4	INJ - DCM35 BR2	●	●	●	●
508 HYbrid4	INJ - DCM35 HY	●	●	●	●
508 HYbrid4	INJ - DCM62	●	●	●	●
508 HYbrid4	INJ - EDC17CP42	●	●	●	●
508 HYbrid4	INJ - HDI SID807 BR2	●	●	●	●
508 HYbrid4	INJ - MED17 4 2	●	●	●	●
508 HYbrid4	INJ - MED17 4 4	●	●	●	●
508 HYbrid4	INJ - MEV17 4 2	●	●	●	●
508 HYbrid4	INJ - MM6KP	●	●	●	●
508 HYbrid4	LCE - Electronic key reader.	●	●	●	●
508 HYbrid4	MATT - MATT C 2010	●	●	●	○
508 HYbrid4	MATT - MATT M 2010	●	●	●	○
508 HYbrid4	MATT - MATT P 2010	●	●	●	○
508 HYbrid4	MCM - Hybrid mode selector.	●	○	●	●
508 HYbrid4	MDS - BTA	●	●	●	●
508 HYbrid4	MDS - BTA CN	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
508 HYbrid4	MOTED - Windscreen Wiper (Right Hand Side)	●	●	●	●
508 HYbrid4	MOTEV - Windscreen Wiper (Left Hand Side)	●	●	●	●
508 HYbrid4	MSB - Traction battery ECU.	●	●	●	●
508 HYbrid4	PORTEC - Door control pad.	●	●	●	●
508 HYbrid4	RETRO INT - Main beams assistant ECU.	●	●	●	●
508 HYbrid4	TELEMAT - MRN	●	●	●	●
508 HYbrid4	TELEMAT - RNEG2010	●	●	●	●
508 HYbrid4	TELEMAT - SMEG PLUS	●	●	●	●
508 HYbrid4	TNB - Seat Belts Not Fastened LED Unit (TNB)	●	○	●	○
508 HYbrid4	VTH - High head vision.	●	●	●	●
508 RXH HYbrid4	AAS - Parking Assistance	●	●	●	●
508 RXH HYbrid4	ABRASR - ABS81	●	●	●	●
508 RXH HYbrid4	ABRASR - ESP81	●	●	●	●
508 RXH HYbrid4	AFFICHEUR - EMF A UDS	●	●	●	○
508 RXH HYbrid4	AFFICHEUR - EMF C UDS	●	●	●	●
508 RXH HYbrid4	AIRBAG - Airbag.	●	●	●	●
508 RXH HYbrid4	ALARMES - Anti-theft alarm.	●	●	●	●
508 RXH HYbrid4	AMPLHIFI - Radio amplifier.	●	●	●	○
508 RXH HYbrid4	AUTORADIO - RD5 radio.	●	●	●	●
508 RXH HYbrid4	AVE - Electric Steering Lock	●	●	●	●
508 RXH HYbrid4	BCM - Motorized boot ECU.	●	●	●	●
508 RXH HYbrid4	BDMC - Driver seat memorizing unit.	●	●	●	●
508 RXH HYbrid4	BECB - Battery charge status unit.	●	●	●	●
508 RXH HYbrid4	BMF(BSI2010) - Built-in Systems Interface.	●	●	●	●
508 RXH HYbrid4	BML - Hands free starting access electronic module.	●	●	●	●
508 RXH HYbrid4	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
508 RXH HYbrid4	BOITEVIT - BVA AM6 AT6 UDS	●	●	●	●
508 RXH HYbrid4	BOITEVIT - CFC300P	●	●	●	●
508 RXH HYbrid4	BOITEVIT - CFC300P HY	●	●	●	●
508 RXH HYbrid4	BPGA - Supply protection and management unit.	●	●	●	●
508 RXH HYbrid4	BSM - Engine relay unit.	●	●	●	●
508 RXH HYbrid4	BSR - Trailer relay unit.	●	●	●	●
508 RXH HYbrid4	CHAUFFADD - Additional heating.	●	●	●	●
508 RXH HYbrid4	CLIM - CLIM REGULEE UDS	●	●	●	●
508 RXH HYbrid4	CLIM AR - Rear A/C.	●	○	●	●
508 RXH HYbrid4	COMBINE - Instrument panel	●	●	●	●
508 RXH HYbrid4	CORPRO - BEMP	●	●	●	●
508 RXH HYbrid4	CORPRO - LADCT	●	●	●	●
508 RXH HYbrid4	CPL - Rain and Brightness Sensor	●	●	●	●
508 RXH HYbrid4	CRT UDS - Telematic navigator.	●	○	●	●
508 RXH HYbrid4	CSR - Steering wheel with integral controls (VCI).	●	●	●	●
508 RXH HYbrid4	DIRECTN - Power steering electric pump unit.	●	●	●	●
508 RXH HYbrid4	DSG - DSG	●	●	●	●
508 RXH HYbrid4	DSG - DSG UDS	●	●	●	●
508 RXH HYbrid4	FMUX - Multiplexed control panel.	●	●	●	●
508 RXH HYbrid4	FSE - Electric secondary brake.	●	●	●	●
508 RXH HYbrid4	HCU1 - Hybrid control ECU 1.	●	●	●	●
508 RXH HYbrid4	HCU2 - Hybrid control ECU 2.	●	●	●	●
508 RXH HYbrid4	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
508 RXH HYbrid4	INJ - DCM34 P	●	●	●	●
508 RXH HYbrid4	INJ - DCM35 BR2	●	●	●	●
508 RXH HYbrid4	INJ - DCM35 HY	●	●	●	●
508 RXH HYbrid4	INJ - DCM62	●	●	●	●
508 RXH HYbrid4	INJ - EDC17CP42	●	●	●	●
508 RXH HYbrid4	INJ - HDI SID807 BR2	●	●	●	●
508 RXH HYbrid4	INJ - MED17 4 2	●	●	●	●
508 RXH HYbrid4	INJ - MED17 4 4	●	●	●	●
508 RXH HYbrid4	INJ - MEV17 4 2	●	●	●	●
508 RXH HYbrid4	INJ - MM6KP	●	●	●	●
508 RXH HYbrid4	LCE - Electronic key reader.	●	●	●	●
508 RXH HYbrid4	MATT - MATT C 2010	●	●	●	○
508 RXH HYbrid4	MATT - MATT M 2010	●	●	●	○
508 RXH HYbrid4	MATT - MATT P 2010	●	●	●	○
508 RXH HYbrid4	MCM - Hybrid mode selector.	●	○	●	●
508 RXH HYbrid4	MDS - BTA	●	●	●	●
508 RXH HYbrid4	MDS - BTA CN	●	●	●	●
508 RXH HYbrid4	MOTED - Windscreen Wiper (Right Hand Side)	●	●	●	●
508 RXH HYbrid4	MOTEV - Windscreen Wiper (Left Hand Side)	●	●	●	●
508 RXH HYbrid4	MSB - Traction battery ECU.	●	●	●	●
508 RXH HYbrid4	PORTEC - Door control pad.	●	●	●	●
508 RXH HYbrid4	RETRO INT - Main beams assistant ECU.	●	●	●	●
508 RXH HYbrid4	TELEMAT - MRN	●	●	●	●
508 RXH HYbrid4	TELEMAT - RNEG2010	●	●	●	●
508 RXH HYbrid4	TELEMAT - SMEG PLUS	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
508 RXH HYbrid4	TNB - Seat Belts Not Fastened LED Unit (TNB)	●	○	●	○
508 RXH HYbrid4	VTH - High head vision.	●	●	●	●
607	4HP20 gearbox	●	●	●	●
607	ABS BOSCH 5.3	●	○	○	●
607	Air conditioning	●	●	●	●
607	Airbags	●	●	●	○
607	Built-in systems interface	●	●	●	●
607	CD player	●	●	●	●
607	Carphone	●	●	●	●
607	Diesel fuel additive control unit	●	●	●	●
607	ESP BOSCH 5.3	●	○	○	●
607	Electronically managed suspension	●	○	○	●
607	Engines/ automatic gearbox(3FZ MM4MP2)	●	●	●	●
607	Engines/ automatic gearbox(4HX BOSCH EDC15C2)	●	●	●	●
607	Engines/ automatic gearbox(R6F MM4.8P)	●	●	●	●
607	Engines/ automatic gearbox(RFN MM48P (mechanical throttle housing ))	●	●	●	●
607	Engines/ automatic gearbox(RFN MM4MP2 (motorised butterfly))	●	●	●	●
607	Engines/ automatic gearbox(RHS BOSCH EDC15C2)	●	●	●	●
607	Engines/ automatic gearbox(RHZ BOSCH EDC15C2)	●	●	●	●
607	Engines/ automatic gearbox(XFX BOSCH ME7.4.6)	●	●	●	●
607	Hands Free Kit	●	●	●	●
607	Headlamp height corrector	●	●	●	●
607	Instrument panel	●	●	●	●
607	Motorised Boot ECU	●	●	●	●
607	Multifunction display	●	●	●	●
607	On-board navigation system	●	●	●	●
607	Parking aid	●	●	●	●
607	Passenger's door control panel	●	●	●	●
607	Radio	●	●	●	●
607	Storing of the driving position	●	●	●	●
607	Vehicle protection / Management of accesses(Driver's door control pad)	●	●	●	●
607R	AAS - Parking aid.	●	●	●	●
607R	ABRASR - ABS/traction control.	●	●	●	●
607R	ADDITIVATION - Diesel Additive	●	●	●	●
607R	AFFICHEUR - EMF A	●	●	●	●
607R	AFFICHEUR - EMF C	●	●	●	●
607R	AIRBAG - Driver and passenger airbags.	●	●	●	●
607R	ALARMES - Anti-theft alarm.	●	●	●	●
607R	AUTORADIO - Radio or radiotelephone (radio part).	●	●	●	●
607R	BCM - Motorized boot ECU.	●	●	●	●
607R	BDMC - Driver seat memorizing unit.	●	●	●	●
607R	BMF (BSI) - Built-in Systems Interface.	●	●	●	●
607R	BOITEVIT - BVA AM6	●	●	●	●
607R	BOITEVIT - BVA ZF	●	●	●	●
607R	BSM(BSI) - Engine Relay Unit	●	●	●	●
607R	BSR(BSI) - Trailer relay unit.	●	●	●	●
607R	CHANGEURCD - CD player.	●	●	●	○
607R	CLIM - heating/ventilation	●	●	●	●
607R	COMBINE - Instrument panel.	●	●	●	●
607R	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
607R	CPL - Rain and Brightness Sensor	●	●	●	○
607R	DIRECTN - Power steering electric pump unit.	●	●	●	●
607R	DSG - Under inflation detection.	●	●	●	●
607R	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
607R	INJ - EDC15C2	●	●	●	●
607R	INJ - EDC16CP39	●	●	●	●
607R	INJ - HDI SID803A	●	●	●	●
607R	INJ - ME747	●	●	●	●
607R	INJ - MM6LP	●	●	●	●
607R	INJ - MM6LPB	●	●	●	●
607R	INJ - SID201	●	●	●	●
607R	KML - Hands-free kit (telephone).	●	●	●	●
607R	PORTEC - Driver door electronics.	●	●	●	●
607R	PORTEP - Passenger door electronics.	●	●	●	●
607R	SUSPVAR - Electronically managed suspension.	●	●	●	●
607R	TELEMAT - Telematics .	●	●	●	●
807 CAN	AAS - Parking aid.	●	●	●	●
807 CAN	ABRASR - ESP81	●	●	●	●
807 CAN	ABRASR - ESP8 BOSCH	●	●	●	●
807 CAN	ADDITIVATION - Diesel Additive	●	●	●	●
807 CAN	AFFICHEUR - EMF A	●	●	●	●
807 CAN	AFFICHEUR - EMF C	●	●	●	●
807 CAN	AIRBAG - Driver and passenger airbags.	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
807 CAN	ALARMES - Anti-theft alarm.	●	●	●	●
807 CAN	AUTORADIO - AUTORADIO	●	●	●	●
807 CAN	AUTORADIO - RD45	●	●	●	●
807 CAN	BDMC - Driver seat memorizing unit.	●	●	●	●
807 CAN	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
807 CAN	BOITEVIT - BVA AL4	●	●	●	●
807 CAN	BOITEVIT - BVA AM6	●	●	●	●
807 CAN	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
807 CAN	BSM(BSI) - Engine Relay Unit	●	●	●	●
807 CAN	BSR(BSI) - Trailer relay unit.	●	●	●	●
807 CAN	BTO - Odometer warning lights unit.	●	●	●	●
807 CAN	CHANGEURCD - CD player.	●	●	●	○
807 CAN	CHAUFFADD - Additional heating.	●	●	●	●
807 CAN	CLIM - heating/ventilation	●	●	●	●
807 CAN	COMBINE - Instrument panel.	●	●	●	●
807 CAN	CORPROD - Right headlamp beam corrector	●	●	●	●
807 CAN	CORPROG - Left headlamp beam level corrector .	●	●	●	●
807 CAN	CPL - Rain and Brightness Sensor	●	●	●	○
807 CAN	CRT - Telematic receiver control .	●	○	●	●
807 CAN	DIRECTN - Power steering electric pump unit.	●	●	●	●
807 CAN	DSG - Under inflation detection.	●	●	●	●
807 CAN	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
807 CAN	INJ - DCM35	●	●	●	●
807 CAN	INJ - DCM35 BR2	●	●	●	●
807 CAN	INJ - EDC15C2	●	●	●	●
807 CAN	INJ - EDC16CP39	●	●	●	●
807 CAN	INJ - HDI SID803A	●	●	●	●
807 CAN	INJ - MM6LPB	●	●	●	●
807 CAN	KML - BOITIER NOMADE	●	●	●	●
807 CAN	KML - KML	●	●	●	●
807 CAN	PORTEC - EDPC	●	●	●	●
807 CAN	PORTECOUL - Sliding side door modules (left hand or only).	●	●	●	●
807 CAN	PORTEP - Passenger door electronics.	●	●	●	●
807 CAN	TELEMAT - BOITIER TELEMATIQUE	●	●	●	●
807 CAN	TELEMAT - RADIONAV RNEG	●	●	●	●
807 CAN	TELEMAT - RNEG2010	●	●	●	●
807 CAN	TOUVAR - Rear sunroof.	●	●	●	●
807 CAN	TOUVAV - Front sunroof.	●	●	●	●
807 CAN	TOUVM - Middle sunroof.	●	●	●	●
807 VAN	4HP Automatic gearbox	●	●	●	●
807 VAN	Active safety(ABR BOSCH 5.7)	●	○	○	●
807 VAN	Active safety(ESP BOSCH 5.7)	○	●	●	○
807 VAN	Additional heating	●	●	●	●
807 VAN	Air conditioning(WEBASTO additional heating)	●	●	●	●
807 VAN	Airbags	●	●	●	●
807 VAN	BSI - Built-in systems interface	●	●	●	●
807 VAN	CD player	●	●	●	●
807 VAN	Climate control	●	●	●	●
807 VAN	Display / Telematics(AMF)	●	●	●	●
807 VAN	Display / Telematics(RT3)	●	●	●	●
807 VAN	Driver's door module	●	○	○	●
807 VAN	Engine ECU(3FZ MM6LP)	●	●	●	●
807 VAN	Engine ECU(RFN MM6LP)	●	●	●	●
807 VAN	Engines/ automatic gearbox(3FZ MM4MP2)	●	●	●	●
807 VAN	Engines/ automatic gearbox(4HW BOSCH EDC15C2)	●	●	●	●
807 VAN	Engines/ automatic gearbox(AL4 automatic gearbox)	●	●	●	●
807 VAN	Engines/ automatic gearbox(Diesel fuel additive control unit: ADDG02)	●	●	●	●
807 VAN	Engines/ automatic gearbox(Diesel fuel additive control unit: ADDITIF FAP)	●	●	●	●
807 VAN	Engines/ automatic gearbox(R6F MM4. 8P)	●	●	●	●
807 VAN	Engines/ automatic gearbox(RFN MM48P (mechanical throttle housing ))	●	●	●	●
807 VAN	Engines/ automatic gearbox(RFN MM4MP2 (motorised butterfly))	●	●	●	●
807 VAN	Engines/ automatic gearbox(RHM BOSCH EDC15C2)	●	●	●	●
807 VAN	Engines/ automatic gearbox(RHT BOSCH EDC15C2)	●	●	●	●
807 VAN	Engines/ automatic gearbox(RHW BOSCH EDC15C2)	●	●	●	●
807 VAN	Engines/ automatic gearbox(XFW BOSCH ME746)	●	●	●	●
807 VAN	Front sunroof	●	●	●	●
807 VAN	Instrument panel	●	●	●	●
807 VAN	Left headlamp beam level corrector	●	●	●	●
807 VAN	Middle sunroof	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
807 VAN	Odometer and warning lamps electronic unit	●	●	●	●
807 VAN	Parking aid	●	●	●	●
807 VAN	Passenger door module	●	●	●	●
807 VAN	Radio/telematic receiver control	●	●	●	●
807 VAN	Rear sunroof	●	●	●	●
807 VAN	Right headlamp beam corrector	●	●	●	●
807 VAN	Storing of the driving position	●	●	●	●
807 VAN	Switching module below steering wheel (COM 2000)	●	○	○	●
807 VAN	The side sliding door	●	●	●	●
807 VAN	Vehicle protection / Management of accesses(Alarm)	●	●	●	○
BIPPER	AAS - Parking aid.	●	●	●	●
BIPPER	ABRASR - ABS81	●	●	●	●
BIPPER	ABRASR - ESP81	●	●	●	●
BIPPER	ABRASR - ESP90 F	●	●	●	●
BIPPER	AIRBAG - Driver and passenger airbags.	●	●	●	●
BIPPER	BMF - Built-in Systems Interface.	●	●	●	●
BIPPER	BOITEVIT - BVMP	●	●	●	●
BIPPER	BOITEVIT - BVMP MTA	●	●	●	●
BIPPER	COMBINE - Instrument panel.	●	●	●	●
BIPPER	INJ - EDC16C34	●	●	●	●
BIPPER	INJ - HDI 8DF2	●	●	●	●
BIPPER	INJ - HDI 8DF3	●	●	●	●
BIPPER	INJ - V342	●	●	●	●
BIPPER	INJ - V34P	●	●	●	●
BIPPER	TELEMAT - Telematics unit.	●	●	●	●
BOXER	Engines/ automatic gearbox(2.0L HDI Bosch EDC15C7)	●	●	●	●
BOXER	Engines/ automatic gearbox(2.2L HDI Bosch EDC15C7)	●	●	●	●
BOXER	Engines/ automatic gearbox(2.8L HDI Bosch EDC15C7)	●	●	●	●
BOXER	Engines/ automatic gearbox(MM4.8P 2L unleaded petrol)	●	●	●	●
BOXER	Engines/ automatic gearbox(MM48P 2L dual fuel(LPG ))	●	●	●	●
BOXER	Engines/ automatic gearbox(MM48P 2L essence plombee)	●	●	●	●
BOXER	Engines/ automatic gearbox(TUB EDC16C39)	○	●	●	●
BOXER 3	AAS - Parking aid.	●	●	●	●
BOXER 3	ABRASR - ABS80	●	●	●	●
BOXER 3	ABRASR - ASR80	●	●	●	●
BOXER 3	ABRASR - ESP80	●	●	●	●
BOXER 3	AIRBAG - SAC TRW	●	●	●	●
BOXER 3	AIRBAGF - Driver and passenger airbags.	●	●	●	●
BOXER 3	BMF - Built-in Systems Interface (BSI) (Body Computer)	●	●	●	●
BOXER 3	CHAUFFADD - Additional heating.	●	●	●	○
BOXER 3	CLIM - heating/ventilation	●	●	●	●
BOXER 3	COMBINE - Instrument panel.	●	●	●	●
BOXER 3	DIRECTN - Power steering.	●	●	●	●
BOXER 3	DISQROUT - Tachograph.	●	●	●	●
BOXER 3	INJ - EDC16C39	●	●	●	●
BOXER 3	INJ - EDC17CP52	●	●	●	●
BOXER 3	INJ - PUMA	●	●	●	●
BOXER 3	SUSPVAR - Electronically managed suspension.	●	●	●	●
BOXER 3	TELEMAT - Telematics .	●	●	●	●
BOXER 3 Euro 5	AAS - Parking aid.	●	●	●	●
BOXER 3 Euro 5	ABRASR - ABS90 F	●	●	●	●
BOXER 3 Euro 5	ABRASR - ESP90 F	●	●	●	●
BOXER 3 Euro 5	AIRBAGF - Airbag.	●	●	●	●
BOXER 3 Euro 5	AUTORADIO - Radio.	●	●	●	●
BOXER 3 Euro 5	BMF - Built-in Systems Interface.	●	●	●	●
BOXER 3 Euro 5	BSR - Trailer relay unit.	●	●	●	●
BOXER 3 Euro 5	CHAUFFADD - Additional heating.	●	●	●	○
BOXER 3 Euro 5	CLIM - Air Conditioning	●	●	●	●
BOXER 3 Euro 5	COMBINE - Instrument panel	●	●	●	●
BOXER 3 Euro 5	DIRECTN - Power steering.	●	●	●	●
BOXER 3 Euro 5	DISQROUT - Tachograph.	●	●	●	●
BOXER 3 Euro 5	DSG - Under inflation detection.	●	●	●	●
BOXER 3 Euro 5	INJ - EDC17CP52 UDS	●	●	●	●
BOXER 3 Euro 5	INJ - SID208	●	●	●	●
BOXER 3 Euro 5	STL - Lane Departure Warning System	●	●	●	●
BOXER 3 Euro 5	SUSPVAR - Electronically managed suspension.	●	●	●	●
BOXER 3 Euro 5	TELEMAT - CTM	●	●	●	●
BOXER 3 Euro 5	TELEMAT F - Radionavigation LTM	●	●	●	●
BOXER 3 minibus	AAS - Parking aid.	●	●	●	●
BOXER 3 minibus	ABRASR - ABS80	●	●	●	●
BOXER 3 minibus	ABRASR - ASR80	●	●	●	●
BOXER 3 minibus	ABRASR - ESP80	●	●	●	●
BOXER 3 minibus	AIRBAG - SAC TRW	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
BOXER 3 minibus	AIRBAGF - Driver and passenger airbags.	●	●	●	●
BOXER 3 minibus	BMF - Built-in Systems Interface.	●	●	●	●
BOXER 3 minibus	CHAUFFADD - Additional heating.	●	●	●	○
BOXER 3 minibus	CLIM - heating/ventilation	●	●	●	●
BOXER 3 minibus	COMBINE - Instrument panel.	●	●	●	●
BOXER 3 minibus	DIRECTN - Power steering.	●	●	●	●
BOXER 3 minibus	DISQROUT - Tachograph.	●	●	●	●
BOXER 3 minibus	INJ - EDC16C39	●	●	●	●
BOXER 3 minibus	INJ - EDC17CP52	●	●	●	●
BOXER 3 minibus	INJ - PUMA	●	●	●	●
BOXER 3 minibus	SUSPVAR - Electronically managed suspension.	●	●	●	●
BOXER 3 minibus	TELEMAT - Telematics .	●	●	●	●
EXPERT	Additional heating	●	●	●	●
EXPERT	Air conditioning(WEBASTO additional heating)	●	●	●	●
EXPERT	Engines/ automatic gearbox(DCN2)	●	●	●	●
EXPERT	Engines/ automatic gearbox(R6F MM4. 8P)	●	●	●	●
EXPERT	Engines/ automatic gearbox(RFN MM4. 8P)	●	●	●	●
EXPERT	Engines/ automatic gearbox(RHW BOSCH EDC15C2)	●	●	●	●
EXPERT	Engines/ automatic gearbox(RHX BOSCH EDC15C2)	●	●	●	●
EXPERT	Engines/ automatic gearbox(RHZ BOSCH EDC15C2)	●	●	●	●
EXPERT 2	ABS or ESP ECU(ABS8. 1)	●	●	●	●
EXPERT 2	ABS or ESP ECU(ABS8 BOSCH)	●	●	●	●
EXPERT 2	ABS or ESP ECU(ESP8. 1)	●	●	●	●
EXPERT 2	ABS or ESP ECU(ESP BOSCH8)	●	●	●	●
EXPERT 2	Additional heating	●	●	●	●
EXPERT 2	Air conditioning / Front air conditioning	●	●	●	●
EXPERT 2	Airbag ECU	●	●	●	●
EXPERT 2	BSI - Built-in systems interface	●	●	●	●
EXPERT 2	CD player	●	●	●	○
EXPERT 2	Data communication ECU	●	●	●	●
EXPERT 2	Engine ECU(9HT BOSCH EDC16C3)	●	●	●	●
EXPERT 2	Engine ECU(9HU BOSCH EDC16C3-EDC16C34)	●	●	●	●
EXPERT 2	Engine ECU(DCM3. 5)	●	●	●	●
EXPERT 2	Engine ECU(RFH MM6KP (EW10A))	●	●	●	●
EXPERT 2	Engine ECU(RHG SIEMENS SID 803)	●	●	●	●
EXPERT 2	Engine ECU(RHK SIEMENS SID 803)	●	●	●	●
EXPERT 2	Engine ECU(RHL SIEMENS SID 803)	●	●	●	●
EXPERT 2	Engine ECU(RHR SIEMENS SID 803)	●	●	●	●
EXPERT 2	Gearbox(AM6 Euro5 automatic gearbox)	●	●	●	●
EXPERT 2	Instrument panel	●	●	●	●
EXPERT 2	Multifunction display	●	●	●	●
EXPERT 2	Parking aid	●	●	●	●
EXPERT 2	Pneumatic suspension	●	●	●	●
EXPERT 2	Portable unit	●	●	●	●
EXPERT 2	Power steering	●	●	●	●
EXPERT 2	Radio	●	●	●	●
EXPERT 2	Rain/sunlight sensor	●	●	●	○
EXPERT 2	Rear air conditioning	●	●	●	●
EXPERT 2	Switch module at the steering wheel	●	●	●	●
EXPERT 2	Telematics(RNEG radio navigation)	●	●	●	●
EXPERT 2	Vehicle protection / Management of accesses(Alarm)	●	●	●	●
EXPERT 3	AAS - Parking aid.	●	●	●	●
EXPERT 3	ABRASR - ABS81	●	●	●	●
EXPERT 3	ABRASR - ABS8 BOSCH	●	●	●	●
EXPERT 3	ABRASR - ESP81	●	●	●	●
EXPERT 3	ABRASR - ESP8 BOSCH	●	●	●	●
EXPERT 3	AFFICHEUR - EMF A	●	●	●	●
EXPERT 3	AFFICHEUR - EMF C	●	●	●	●
EXPERT 3	AIRBAG - Driver and passenger airbags.	●	●	●	●
EXPERT 3	ALARMES - Anti-theft alarm.	●	●	●	●
EXPERT 3	ASRPLUS - Anti-slip mode selector.	●	○	●	●
EXPERT 3	AUTORADIO - AUTORADIO	●	●	●	●
EXPERT 3	AUTORADIO - RD45	●	●	●	●
EXPERT 3	BECB - Battery charge status unit.	●	●	●	●
EXPERT 3	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
EXPERT 3	BOITEVIT - Gearbox	●	●	●	●
EXPERT 3	BSM(BSI) - Engine Relay Unit	●	●	●	●
EXPERT 3	BSR(BSI) - Trailer relay unit.	●	●	●	●
EXPERT 3	BTC(BSI) - Bodywork Conversion Unit	●	●	●	●
EXPERT 3	CHANGEURCD - CD player.	●	●	●	○
EXPERT 3	CHAUFFADD - Additional heating.	●	●	●	●
EXPERT 3	CLIM - heating/ventilation	●	●	●	●
EXPERT 3	COMBINE - Instrument panel.	●	●	●	●
EXPERT 3	CPL - Rain and Brightness Sensor	●	●	●	○
EXPERT 3	DIRECTN - Power steering electric pump unit.	●	●	●	●
EXPERT 3	DSG - DSG	●	●	●	●
EXPERT 3	DSG - DSG UDS	●	●	●	●



Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
EXPERT 3	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
EXPERT 3	INJ - DCM35	●	●	●	●
EXPERT 3	INJ - DCM35 BR2	●	●	●	●
EXPERT 3	INJ - EDC16C3	●	●	●	●
EXPERT 3	INJ - EDC17C10 BR2	●	●	●	●
EXPERT 3	INJ - HDI SID803A	●	●	●	●
EXPERT 3	INJ - MM6KP	●	●	●	●
EXPERT 3	KML - BOITIER NOMADE	●	●	●	●
EXPERT 3	KML - KML	●	●	●	●
EXPERT 3	RHF - High frequency receiver.	●	●	●	●
EXPERT 3	SPNEU - Pneumatic suspension.	●	●	●	●
EXPERT 3	TDCAR - Rear A/C table.	●	●	●	●
EXPERT 3	TELEMAT - BOITIER TELEMATIQUE	●	●	●	●
EXPERT 3	TELEMAT - RADIONAV RNEG	●	●	●	●
EXPERT 3	TELEMAT - RNEG2010	●	●	●	●
HOGGAR	ABRASR - ABSMK70 1	●	●	●	●
HOGGAR	ABRASR - ESPMK60 0	●	●	●	●
HOGGAR	AFFICHEUR - AMF	●	●	●	●
HOGGAR	AFFICHEUR - RT3	●	●	●	●
HOGGAR	AIRBAG - Driver and passenger airbags.	●	●	●	○
HOGGAR	ALARMES - Anti-theft alarm.	●	●	●	○
HOGGAR	AUTORADIO - AUTORADIO	●	●	●	●
HOGGAR	AUTORADIO - RDE	●	●	●	●
HOGGAR	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
HOGGAR	BOITEVIT - Gearbox	●	●	●	●
HOGGAR	CHANGEURCD - CD player.	●	●	●	●
HOGGAR	CLIM - heating/ventilation	●	●	●	●
HOGGAR	COMBINE - Instrument panel.	●	●	●	●
HOGGAR	CPL - Rain and Brightness Sensor	●	●	●	○
HOGGAR	DIRECTN - Power steering electric pump unit.	●	●	●	●
HOGGAR	HDC - Switch Module at the Steering Wheel	●	●	●	●
HOGGAR	INJ - DCN2	●	●	●	●
HOGGAR	INJ - EDC15C2	●	●	●	●
HOGGAR	INJ - EDC16C3DV4	●	●	●	●
HOGGAR	INJ - EDC17C10 BR2	●	●	●	●
HOGGAR	INJ - J34P	●	●	●	●
HOGGAR	INJ - ME745	●	●	●	●
HOGGAR	INJ - ME749	●	●	●	●
HOGGAR	INJ - V343	●	●	●	●
HOGGAR	MDS - Services module.	●	●	●	●
PARTNER	Active safety(BOSCH ABS5)	●	○	○	●
PARTNER	Active safety(BOSCH ABS5.3)	●	○	○	●
PARTNER	Additional heating	●	●	●	●
PARTNER	Air bag and seat belt	●	○	○	○
PARTNER	Air conditioning(WEBASTO additional heating)	●	●	●	●
PARTNER	Airbags(Pre-tensioning seat belt control unit)	●	○	○	○
PARTNER	Driver information/communication(Radio CLARION)	●	●	●	○
PARTNER	Driver information/communication(Radio PHILIPS)	●	●	●	●
PARTNER	Engines/ automatic gearbox(HDY BOSCH MA3.1)	●	○	○	●
PARTNER	Engines/ automatic gearbox(HDZ BOSCH MA3.1)	●	○	○	●
PARTNER	Engines/ automatic gearbox(HFX BOSCH M7.4.4)	●	●	●	●
PARTNER	Engines/ automatic gearbox(K6D SAGEM S2000)	●	●	●	●
PARTNER	Engines/ automatic gearbox(KFW SAGEM S2000)	●	●	●	●
PARTNER	Engines/ automatic gearbox(KFX BOSCH MP7.3)	●	●	●	●
PARTNER	Engines/ automatic gearbox(KFX MM1AP)	●	○	○	●
PARTNER	Engines/ automatic gearbox(KFX SAGEM SL 96)	●	○	○	●
PARTNER	Engines/ automatic gearbox(LFX MM1AP)	●	○	○	●
PARTNER	Engines/ automatic gearbox(N6A BOSCH ME7.4.4)	●	●	●	●
PARTNER	Engines/ automatic gearbox(N6A BOSCH ME7.4.5)	●	●	●	●
PARTNER	Engines/ automatic gearbox(N6B BOSCH ME7.4.5)	●	●	●	●
PARTNER	Engines/ automatic gearbox(NFU BOSCH ME7.4.4)	●	●	●	●
PARTNER	Engines/ automatic gearbox(NFU BOSCH ME7.4.5)	●	●	●	●
PARTNER	Engines/ automatic gearbox(RHY BOSCH EDC15C2)	●	●	●	●
PARTNER	Engines/ automatic gearbox(RHY SIEMENS SID801)	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
PARTNER	Engines/ automatic gearbox(WJY LUCAS DCN2)	●	●	●	●
PARTNER	Engines/ automatic gearbox(WJZ LUCAS DCN2)	●	●	●	●
PARTNER (B9)	AAS - Parking aid.	●	●	●	●
PARTNER (B9)	ABRASR - ABS81	●	●	●	●
PARTNER (B9)	ABRASR - ESP81	●	●	●	●
PARTNER (B9)	AFFICHEUR - EMF A	●	●	●	●
PARTNER (B9)	AFFICHEUR - EMF C	●	●	●	●
PARTNER (B9)	AIRBAG - Airbag.	●	●	●	●
PARTNER (B9)	ALARMES - Alarm	●	●	●	●
PARTNER (B9)	ASRPLUS - Anti-slip mode selector.	●	○	●	●
PARTNER (B9)	AUTORADIO - AUTORADIO	●	●	●	●
PARTNER (B9)	AUTORADIO - RD45	●	●	●	●
PARTNER (B9)	BECB - BECB	●	●	●	●
PARTNER (B9)	BECB - BECB GEN2	●	●	●	●
PARTNER (B9)	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
PARTNER (B9)	BOITEVIT - Gearbox	●	●	●	●
PARTNER (B9)	BSM(BSI) - Engine Relay Unit	●	●	●	●
PARTNER (B9)	BSR(BSI) - Trailer relay unit.	●	●	●	●
PARTNER (B9)	BTC(BSI) - Bodywork Conversion Unit	●	●	●	●
PARTNER (B9)	CHANGEURCD - CD player.	●	●	●	○
PARTNER (B9)	CLIM - CLIM	●	●	●	●
PARTNER (B9)	CLIM - CLIM REGULEE	●	●	●	●
PARTNER (B9)	COMBINE - Instrument panel.	●	●	●	●
PARTNER (B9)	CPL - Rain sensor.	●	●	●	○
PARTNER (B9)	DIRECTN - Power steering electric pump unit.	●	●	●	●
PARTNER (B9)	DMTC - Central voltage retention device	●	○	●	○
PARTNER (B9)	DSG - DSG	●	●	●	●
PARTNER (B9)	DSG - DSG UDS	●	●	●	●
PARTNER (B9)	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
PARTNER (B9)	INJ - EDC16C3	●	●	●	●
PARTNER (B9)	INJ - EDC17C10 BR2	●	●	●	●
PARTNER (B9)	INJ - HDI SID807	●	●	●	●
PARTNER (B9)	INJ - HDI SID807 BR2	●	●	●	●
PARTNER (B9)	INJ - ME745	●	●	●	●
PARTNER (B9)	INJ - MEV17 4 2	●	●	●	●
PARTNER (B9)	INJ - MEV17 4 EURO5	●	●	●	●
PARTNER (B9)	KML - BOITIER NOMADE	●	●	●	●
PARTNER (B9)	KML - KML	●	●	●	●
PARTNER (B9)	MDS - Service module.	●	●	●	●
PARTNER (B9)	PADDITIVATION - PADDGO	●	●	●	●
PARTNER (B9)	PADDITIVATION - PADDGO E5	●	●	●	●
PARTNER (B9)	RHF - High frequency receiver.	●	●	●	●
PARTNER (B9)	TELEMAT - RADIONAV RNEG	●	●	●	●
PARTNER (B9)	TELEMAT - RNEG2010	●	●	●	●
PARTNER Electric (B9e)	AAS - Parking aid.	●	●	●	●
PARTNER Electric (B9e)	ABRASR - ABS81	●	●	●	●
PARTNER Electric (B9e)	ABRASR - ESP81	●	●	●	●
PARTNER Electric (B9e)	AFFICHEUR - EMF A	●	●	●	●
PARTNER Electric (B9e)	AFFICHEUR - EMF C	●	●	●	●
PARTNER Electric (B9e)	AIRBAG - Airbag.	●	●	●	●
PARTNER Electric (B9e)	ALARMES - Alarm	●	●	●	●
PARTNER Electric (B9e)	AUTORADIO - AUTORADIO	●	●	●	●
PARTNER Electric (B9e)	AUTORADIO - RD45	●	●	●	●
PARTNER Electric (B9e)	BECB_VE - Battery charge status unit generation 2.	●	●	●	●
PARTNER Electric (B9e)	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
PARTNER Electric (B9e)	BMU - Traction battery ECU.	●	●	●	●
PARTNER Electric (B9e)	BSM(BSI) - Engine Relay Unit	●	●	●	●
PARTNER Electric (B9e)	CCE - air conditioning compressor	●	●	●	●
PARTNER Electric (B9e)	CLIM - CLIM	●	●	●	●
PARTNER Electric (B9e)	CLIM - CLIM REGULEE	●	●	●	●
PARTNER Electric (B9e)	CMM_E - Electric machine management ECU.	●	●	●	●
PARTNER Electric (B9e)	CMU_01 - Traction battery cell electronics.01	●	○	●	●
PARTNER Electric (B9e)	CMU_02 - Traction battery cell electronics.02	●	○	●	●
PARTNER Electric (B9e)	CMU_03 - Traction battery cell electronics.03	●	○	●	●
PARTNER Electric (B9e)	CMU_04 - Traction battery cell electronics.04	●	○	●	●
PARTNER Electric (B9e)	CMU_05 - Traction battery cell electronics.05	●	○	●	●
PARTNER Electric (B9e)	CMU_06 - Traction battery cell electronics.06	●	○	●	●
PARTNER Electric (B9e)	CMU_07 - Traction battery cell electronics.07	●	○	●	●
PARTNER Electric (B9e)	CMU_08 - Traction battery cell electronics.08	●	○	●	●
PARTNER Electric (B9e)	CMU_09 - Traction battery cell electronics.09	●	○	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
PARTNER Electric (B9e)	CMU_10 - Traction battery cell electronics.10	●	○	●	●
PARTNER Electric (B9e)	COMBINE - Instrument panel	●	●	●	●
PARTNER Electric (B9e)	CPL - Rain sensor.	●	●	●	○
PARTNER Electric (B9e)	CTPA - Passenger compartment air heating resistor	●	●	●	●
PARTNER Electric (B9e)	DIRECTN - Power steering electric pump unit.	●	●	●	●
PARTNER Electric (B9e)	EPCU - Drive train interface ECU.	●	●	●	●
PARTNER Electric (B9e)	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
PARTNER Electric (B9e)	MDS - Service module.	●	●	●	●
PARTNER Electric (B9e)	OBC_DCDC - Onboard charger of the traction battery.	●	●	●	●
PARTNER Electric (B9e)	SUPERVISEUR - Electric vehicle management ECU	●	●	●	●
PARTNER Electric (B9e)	TELEMAT - RADIONAV RNEG	●	●	●	●
PARTNER Electric (B9e)	TELEMAT - RNEG2010	●	●	●	●
RCZ	AAS - Parking aid.	●	●	●	●
RCZ	ABRASR - ABS81	●	●	●	●
RCZ	ABRASR - ESP81	●	●	●	●
RCZ	AFFICHEUR - EMF A	●	●	●	●
RCZ	AFFICHEUR - EMF C	●	●	●	●
RCZ	AIRBAG - Driver and passenger airbags.	●	●	●	●
RCZ	ALARMES - Anti-theft alarm.	●	●	●	●
RCZ	AMPLHIFI - audio amplifier.	●	●	●	○
RCZ	AUTORADIO - AUTORADIO	●	●	●	●
RCZ	AUTORADIO - RD43	●	●	●	●
RCZ	AUTORADIO - RD45	●	●	●	●
RCZ	BDCP - Pedestrian impact detection unit.	●	●	●	●
RCZ	BDMC - Driver seat memorizing unit.	●	●	●	●
RCZ	BDMP - Passenger seat memorization unit.	●	●	●	●
RCZ	BECB - BECB	●	●	●	●
RCZ	BECB - BECB GEN2	●	●	●	●
RCZ	BMF(BSI) - Built-in Systems Interface.	●	●	●	●
RCZ	BOITEVIT - BVA AL4	●	●	●	●
RCZ	BOITEVIT - BVA AM6	●	●	●	●
RCZ	BOITEVIT - BVA AM6 AT6 EURO5	●	●	●	●
RCZ	BOITEVIT - CFC300P	●	●	●	●
RCZ	BSM(BSI) - Engine Relay Unit	●	●	●	●
RCZ	BSR(BSI) - Trailer relay unit.	●	●	●	●
RCZ	CHANGEURCD - CD player.	●	●	●	○
RCZ	CLIM - heating/ventilation	●	●	●	●
RCZ	COMBINE - Instrument panel.	●	●	●	●
RCZ	CORPRO - Headlamp Height Adjuster/Directional Headlamp	●	●	●	●
RCZ	CPL - Rain and Brightness Sensor	●	●	●	○
RCZ	DIRECTN - Power steering electric pump unit.	●	●	●	●
RCZ	DPM - Moving panel deflector.	●	●	●	●
RCZ	DSG - DSG	●	●	●	●
RCZ	DSG - DSG UDS	●	●	●	●
RCZ	ESSUIV - Windscreen wiper.	●	●	●	○
RCZ	HDC - Switch Module Under the Steering Wheel (Top-Of-Column)	●	●	●	●
RCZ	INJ - DCM34	●	●	●	●
RCZ	INJ - DCM35	●	●	●	●
RCZ	INJ - DCM35 BR2	●	●	●	●
RCZ	INJ - EDC16C3	●	●	●	●
RCZ	INJ - EDC17C10	●	●	●	●
RCZ	INJ - EDC17C10 BR2	●	●	●	●
RCZ	INJ - HDI SID807	●	●	●	●
RCZ	INJ - HDI SID807 BR2	●	●	●	●
RCZ	INJ - ME745	●	●	●	●
RCZ	INJ - ME745 EC5	●	●	●	●
RCZ	INJ - ME749	●	●	●	●
RCZ	INJ - ME749 EC5	●	●	●	●
RCZ	INJ - MED17 4 2	●	●	●	●
RCZ	INJ - MED17 4 EURO4	●	●	●	●
RCZ	INJ - MED17 4 EURO5	●	●	●	●
RCZ	INJ - MEV17 4 2	●	●	●	●
RCZ	INJ - MEV17 4 EURO4	●	●	●	●
RCZ	INJ - MEV17 4 EURO5	●	●	●	●
RCZ	INJ - MEVD17 4 2	●	●	●	●
RCZ	INJ - MM6KP	●	●	●	●
RCZ	INJ - MM6LPB	●	●	●	●
RCZ	INJ - V46 21	●	●	●	●
RCZ	KML - BOITIER NOMADE	●	●	●	●
RCZ	KML - KML	●	●	●	●
RCZ	MATT - Matrix screen integral to the instrument panel.	●	●	●	●
RCZ	MDS - BLVV	●	●	●	●
RCZ	MDS - BTA	●	●	●	●
RCZ	MDS - MD SERV	●	●	●	●

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream
RCZ	PADDITIVATION - PADDGO	●	●	●	●
RCZ	PADDITIVATION - PADDGO E5	●	●	●	●
RCZ	PORTEC - Door control pad.	●	●	●	●
RCZ	RHF - High frequency receiver.	●	●	●	●
RCZ	STL - Lane Departure Warning System	●	●	●	●
RCZ	TELEMAT - BOITIER TELEMATIQUE	●	●	●	●
RCZ	TELEMAT - RADIONAV NG4	●	●	●	●
RCZ	TELEMAT - RADIONAV RNEG	●	●	●	●
RCZ	TELEMAT - RADIONAV RNEGC	●	●	●	●
RCZ	TELEMAT - RADIONAV RNEG ECO	●	●	●	●
RCZ	TELEMAT - RNEG2010	●	●	●	●
RCZ	TNB - Seat belts not fastened LED unit.	●	○	●	○
RCZ	TOITESC - Folding roof.	●	●	●	●
RCZ	TOUV - Sunroof.	●	●	●	●
iON	ABRASR - Electronic Stability Program.	●	●	●	●
iON	AIRBAG - ORC	●	●	●	●
iON	AIRBAG - SRS	●	●	●	●
iON	AUTORADIO - Radio.	●	●	●	●
iON	BMF - Built-in Systems Interface.	●	●	●	●
iON	BMU - Traction battery ECU.	●	●	●	●
iON	BSP - Gateway wiring housing .	●	●	●	●
iON	CAV - Steering wheel angle sensor.	●	●	●	●
iON	CLIM - HVAC	●	●	●	●
iON	CLIM_COMP - A/C compressor and passenger compartment heating control module.	●	●	●	●
iON	CMB - Instrument panel	●	●	●	●
iON	CMM_E - Electric machine management ECU.	●	●	●	●
iON	CMU_01 - Traction battery cells management ECU.01	●	○	●	●
iON	CMU_02 - Traction battery cells management ECU.02	●	○	●	●
iON	CMU_03 - Traction battery cells management ECU.03	●	○	●	●
iON	CMU_04 - Traction battery cells management ECU.04	●	○	●	●
iON	CMU_05 - Traction battery cells management ECU.05	●	○	●	●
iON	CMU_06 - Traction battery cells management ECU.06	●	○	●	●
iON	CMU_07 - Traction battery cells management ECU.07	●	○	●	●
iON	CMU_08 - Traction battery cells management ECU.08	●	○	●	●
iON	CMU_09 - Traction battery cells management ECU.09	●	○	●	●
iON	CMU_10 - Traction battery cells management ECU.10	●	○	●	●
iON	CMU_11 - Traction battery cells management ECU.11	●	○	●	●
iON	CMU_12 - Traction battery cells management ECU.12	●	○	●	●
iON	DIRECTN - Power steering.	●	●	●	●
iON	MDS - Independent telematic unit (BTA).	●	●	●	●
iON	OBC_DCDC - Onboard charger of the traction battery.	●	●	●	●
iON	SUPERVISEUR - Electric vehicle management ECU	●	●	●	●