



TabScan - Scion - V2.90 Diagnostic Coverage

NOTES:

●: This function is supported

▲: This function is the new feature in this version

○: This function is not supported

※: This function may be supported which depends on the actual condition of the vehicle

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Iq	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Iq	Air conditioner	○	●	●	●	●	0065
Iq	Charging control	○	●	●	●	●	
Iq	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Iq	D-door motor	○	●	●	●	●	0016
Iq	EMPS	○	●	●	●	●	0006 0025
Iq	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Iq	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Iq	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Iq	Master switch	○	●	●	●	●	0016
Iq	P-door motor	○	●	●	●	●	0016
Iq	Pm2 gateway	○	●	●	●	●	0002
Iq	Power source control	○	●	●	●	●	0041
Iq	Srs airbag	○	●	●	●	●	0006
Iq	Starting control	○	●	●	●	●	
Iq	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Iq	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Iq	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Iq	Stop and go	○	●	●	●	●	0032 0028 0033
Iq ev	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Iq ev	Air conditioner	○	●	●	●	●	0065

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Iq ev	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Iq ev	D-door motor	○	●	●	●	●	0016
Iq ev	EMPS	○	●	●	●	●	0006 0025
Iq ev	EV	○	●	●	●	●	0006 0093 0069 0070
Iq ev	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Iq ev	Ev battery	○	●	●	●	●	0006 0093 0069 0070
Iq ev	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Iq ev	Master switch	○	●	●	●	●	0016
Iq ev	P-door motor	○	●	●	●	●	0016
Iq ev	Plug-in control	○	●	●	●	●	0006 0026
Iq ev	Pml gateway	○	●	●	●	●	0002
Iq ev	Power source control	○	●	●	●	●	0041
Iq ev	Srs airbag	○	●	●	●	●	0006
Fr-s	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Fr-s	Air conditioner	○	●	●	●	●	0065
Fr-s	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Fr-s	Cruise control	○	●	●	●	●	0003 0036
Fr-s	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Fr-s	EMPS	○	●	●	●	●	0006 0025
Fr-s	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Fr-s	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Fr-s	Master switch	○	●	●	●	●	0016
Fr-s	Occupant detection	○	●	●	●	●	0032
Fr-s	Power source control	○	●	●	●	●	0041
Fr-s	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Fr-s	Srs airbag	○	●	●	●	●	0006
Fr-s	Theft deterrent	○	○	○	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Fr-s	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Iq	Occupant detection	○	●	●	●	●	0032
Iq	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Iq ev	Navigation system	○	●	●	●	●	
Iq ev	Occupant detection	○	●	●	●	●	0032

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Iq ev	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Iq ev	Telematics	○	●	●	●	●	0048 0124
Iq ev	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Tc	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Tc	Cruise control	○	●	●	●	●	0003 0036
Tc	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Tc	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Tc	Srs airbag	○	●	●	●	●	0006
Tc	Occupant detection	○	●	●	●	●	0032
Tc	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Tc	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Tc	Air conditioner	○	●	●	●	●	0065
Tc	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Tc	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Tc	EMPS	○	●	●	●	●	0006 0025
Tc	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Tc	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Tc	Power source control	○	●	●	●	●	0041
Tc	Sliding roof	○	●	●	●	●	
Tc	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Tc	Starting control	○	●	●	●	●	
Tc	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Tc	D-door motor	○	●	●	●	●	0016
Xa	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Xa	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Xa	Srs airbag	○	●	●	●	●	0006
Xa	Air conditioner	○	●	●	●	●	0065
Xa	Occupant detection	○	●	●	●	●	0032
Xb	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Xb	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Xb	Srs airbag	○	●	●	●	●	0006
Xb	Air conditioner	○	●	●	●	●	0065
Xb	Occupant detection	○	●	●	●	●	0032
Xb	Accessory gateway	○	●	●	●	●	0002
Xb	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Xb	Cruise control	○	●	●	●	●	0003 0036
Xb	EMPS	○	●	●	●	●	0006 0025
Xb	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Xb	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Xb	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Xb	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Xb	Sliding roof	○	●	●	●	●	
Xd	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Xd	Accessory gateway	○	●	●	●	●	0002
Xd	Air conditioner	○	●	●	●	●	0065

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Xd	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Xd	Cruise control	○	●	●	●	●	0003 0036
Xd	D-door motor	○	●	●	●	●	0016
Xd	EMPS	○	●	●	●	●	0006 0025
Xd	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Xd	Four wheel drive	○	●	●	●	●	0016 0081
Xd	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Xd	Occupant detection	○	●	●	●	●	0032
Xd	Srs airbag	○	●	●	●	●	0006
Xd	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Xd	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Xd	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Xa	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009

Special function NO.	Special function name
0001	Parts Exchange
0002	Initialization
0003	Beam Axis Adjustment
0004	Air Bleeding
0005	Steering Angle Adjust
0006	Check Mode
0007	Wireless Code Registration
0008	Transponder Code Registration
0009	Key Code Registration
0010	Key Code Erasure
0011	Auto Registration Closure
0012	Transponder Code Erasure
0013	ECU Communication ID Registration
0014	Key Number Registration
0015	Secondary Air Injection Check
0016	Reset Memory
0017	Activate Rear Steering Motor
0018	DRS Off-center Correction
0019	Wireless Code Erasure
0020	Wireless Door Lock Diagnosis Mode
0021	Rear Beam Axis Adjustment
0022	Inspection Mode
0023	Test Mode
0024	ECB Utility
0025	Torque Sensor Adjustment
0026	All Readiness
0027	A/T Code Reset
0028	Starter Exchange
0029	Reset A/C Information
0030	Deceleration Sensor Zero Point Calibration
0031	Deceleration Sensor Zero Point Clear
0032	ECU Exchange
0033	Oil Pump Air Bleeding
0034	B1 Air Bleeding
0035	Laser/Radar Cruise Initialization
0036	Beam Axis Misalignment Reading
0037	BSM Master Abnormal History
0038	BSM Master Beam Axis Inspection
0039	Rear Wing Zero Point Calibration
0040	Grill Shutter Control Mode Switching
0041	Auto Power OFF Cancel
0042	ECU Information Sync
0043	Steering Sensor Initialization
0044	Communication Check(Key Diag Mode)
0045	Key Number Change
0046	Steering Initialization
0047	Trouble Factor Code Clear
0048	DCM Mode Setting
0049	2nd Sys. Air Bleeding
0050	Pilot Quantity Learning
0051	Pilot Quantity Learning(Detail)
0052	Supply Pump Initialization

Special function NO.	Special function name
0053	Electric Throttle Learning
0054	Height Offset
0055	ID Registration
0056	Height Sensor Initialization
0057	VIN
0058	Pilot Quantity Learning Values Reset
0059	DPF Deterioration Record Clear
0060	A/F Sensor Compensation Reset
0061	Crank Time Compensation Reset
0062	Catalyst Record Clear
0063	Vehicle Mileage Write
0064	Shift Control Synchronization
0065	Refrigerant Gas Volume Check
0066	i-ART Learning Value Reset
0067	Learning Value Reset
0068	HV Batt Cell Low Volt READY ON Prevention Cancel
0069	Temporary Vehicle Start Up
0070	Battery Diagnosis
0071	Predagnostic Battery Charge
0072	Initializing meter usage
0073	ECB-R Utility
0074	ES Calibration
0075	Clutch Adjust Count
0076	HICM Resistance Learning Value Reset
0077	Pilot Quantity Learning Values Clear
0078	Catalyst Record Read
0079	Catalyst Record Transferring
0080	ECB2.0/2.5 Utility
0081	4WD Control Prevention Mode
0082	ATF Thermal Degradation Estimate Reset
0083	AHS Shade Angle Adjustment
0084	Tire Position Write
0085	Remote Engine Starter Initial Registration
0086	Remote Engine Starter ID Registration
0087	BSM Slave Beam Axis Inspection
0088	Vehicle Information Synchronization
0089	BSM Master Beam Axis Adjustment
0090	BSM Master Beam Axis Display
0091	BSM Slave Beam Axis Adjustment
0092	BSM Slave Beam Axis Display
0093	EV Batt Cell Low Volt READY ON Prevention Cancel
0094	Remote Door Lock Setting
0095	Glow Control Unit Inspection
0096	O2 Sensor Learning Value Reset
0097	EGR Learning Value Reset
0098	Supply Pump Learning Value Reset
0099	Idle Speed Adjustment
0100	DPF History Information Reset
0101	DPF Rejuvenation Timing Reset
0102	Air Flow Meter Learning Value Reset
0103	Sensor Adjustment
0104	Transponder Code Erasure 2

Special function NO.	Special function name
0105	Transponder Code Registration 2
0106	Driver Information Registration
0107	3rd Sys. Air Bleeding
0108	Seat Belt Reminder Setting
0109	Actuator Air Bleeding
0110	Fuel Density Learning Value Reset
0111	Injector Maintenance Learning Value Reset
0112	Switch Oil Maintenance Display
0113	iMT Installation Information Reset
0114	Switch Battery Type
0115	Total Number of Engine Starts Reset
0116	Upstream Turbine Pressure Learning Value Reset
0117	Differential Pressure Learning Value Reset
0118	NOx Storage Catalyst Learning Value Reset
0119	Swirl Valve Learning Value Reset
0120	Fuel PCV Compensation Value Reset
0121	Parts Exchange Learning
0122	Front Beam Axis Adjustment
0123	AHB-R Utility
0124	Backup Battery Replacement Reset
0125	Headlight Type Setting
0126	Cruising Range Reset
0127	Initializing meter vehicle information
0128	Initializing body ECU
0129	DOC Removal Check Mode
0130	Grill Shutter Initialization
0131	Resolver Learning/Initialization
0132	Steering angle sensor learning value reset
0133	Key Registration
0134	FC Coolant Air Bleeding
0135	Battery Discharge
0136	Discharge Data Monitoring
0137	System Calibration
0138	Smart Code Erasure
0139	Forced Ignition ON
0140	DSC Sensor Initialization
0141	TPMS Reset
0142	Key Registration
0143	Auto Registration Closure
0144	Transponder Code Erasure
0145	ECU Communication ID Registration
0146	Key Number Registration
0147	Wait Time Cancellation
0148	Wireless Code Registration
0149	Left Lateral Radar Beam Axis Adjustment
0150	Right Lateral Radar Beam Axis Adjustment
0151	Reset the Mobile Information
0152	Height Adjust
0153	Beam Axis Fine Adjustment
0154	Oil Pump Air Bleeding
0155	Laser/Radar Cruise Initialization
0156	Trouble Factor Code Clear

Special function NO.	Special function name
0157	Electric Throttle Learning
0158	Vehicle height sensor automatic adjustment
0159	ID Registration
0160	DPF Deterioration Record Clear
0161	Catalyst Record Clear
0162	Engine Control Value Initialization
0163	Engine Configuration Change
0164	Wireless Diagnosis Mode
0165	Battery ECU Initialization
0166	Initial learning
0167	Starter operating times reset/writing
0168	CVT ECU Initial Learning
0169	Antenna Communication Check
0170	Transponder Communication Check
0171	Wireless Communication Check
0172	Meter Specification Reset
0173	SOC Learning
0174	Return to Normal Mode
0175	SOC Overwrite
0176	V80 Control Flag Permission
0177	ITC Initialization
0178	AMT Configuration Change
0179	Driver Information Registration
0180	Smart Key Communication Check
0181	New Rotary Key Registration
0182	ABS Air Bleeding
0183	DVS Air Bleeding
0184	New Key Registration
0185	Laser Beam Axis Adjustment
0186	Meter Vehicle Information Reset
0187	Wireless Door Lock Diag Mode